



**UCONNECT® 4.3/8.4**

# USER'S MANUAL



# Introduction

## CONTENTS

---

■ Uconnect® 4.3 . . . . .	.2	□ (2) CLIMATE CONTROLS (Manual Controls) . . .	.6
□ (1) ON/OFF & VOLUME . . . . .	.3	□ (3) RADIO . . . . .	.6
□ (2)(3) CLIMATE CONTROLS . . . . .	.3	□ (4) PLAYER . . . . .	.6
□ (4) PLAYER . . . . .	.3	□ (5) CONTROLS. . . . .	.6
□ (5) RADIO . . . . .	.3	□ (6) CLIMATE (On-Screen Controls). . . . .	.7
□ (6) SETTINGS. . . . .	.3	□ (7) NAV. . . . .	.7
□ (7) MORE. . . . .	.3	□ (8) PHONE . . . . .	.7
□ (8) SCREEN OFF . . . . .	.4	□ (9) MORE. . . . .	.7
□ (9) ENTER/BROWSE & TUNE/SCROLL . . . . .	.4	□ (10) ENTER/BROWSE & TUNE/SCROLL. . . . .	.7
□ (10) CD SLOT. . . . .	.4	□ (11) SD CARD SLOT . . . . .	.7
■ Uconnect® 8.4 & 8.4Nav . . . . .	.5	□ (12) CD/DVD SLOT . . . . .	.7
□ (1) ON/OFF VOLUME . . . . .	.6		

### Uconnect® 4.3



ctp-35881

- 1 — ON/OFF & Volume Control
- 2 — Manual Climate Controls
- 3 — Climate Controls hard-key
- 4 — Player hard-key

- 5 — Radio hard-key
- 6 — Settings hard-key
- 7 — More hard-key

- 8 — Screen Off hard-key
- 9 — Enter/Browse & Tune/Scroll knob
- 10 — CD slot

## **(1) ON/OFF & VOLUME**

Press the ON/OFF button to turn the system ON or OFF. Rotate the rotary knob to adjust the Volume.

**NOTE:** If the ignition is switched OFF with the radio in standby mode, the radio memorizes the standby mode when the ignition is turned ON again. Press the ON/OFF VOLUME Control to turn the radio ON. It is possible to eject the CD and to display the time if the system is off.

## **(2)(3) CLIMATE CONTROLS**

Manual Climate Controls and Climate Control Hard-key. Refer to Climate Controls in your vehicles Owner's Manual on the DVD for further details.

## **(4) PLAYER**

Press the PLAYER hard-key to access media sources such as: Disc, USB Device and AUX as long as the requested media is present.

## **(5) RADIO**

Press the RADIO hard-key to enter the Radio Mode. The different tuner modes; AM, FM and SAT can be selected by touching the corresponding soft-keys in the Radio Mode.

## **(6) SETTINGS**

Press the SETTINGS hard-key to access the Settings list. Clock, Display, Audio, Bluetooth and SiriusXM™ Settings are described in this manual. See your vehicles Owner's Manual on the DVD for more details.

## **(7) MORE**

Press the MORE hard-key to access additional options. Options available such as: Uconnect® Phone and Compass can be accessed by touching the corresponding soft-key in the More Menu.

### **(8) SCREEN OFF**

Press the SCREEN OFF hard-key to turn the touch-screen OFF. To turn the screen back ON, just touch the screen.

### **(9) ENTER/BROWSE & TUNE/SCROLL**

Press the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

### **(10) CD SLOT**

When inserting a disc, make sure the label is facing up. Press the Eject button to eject the disc.

## Uconnect® 8.4 &amp; 8.4Nav

1



- 1 — ON/OFF & Volume Control
- 2 — Manual Climate Control
- 3 — Radio soft-key
- 4 — Player soft-key

- 5 — Controls soft-key
- 6 — Climate soft-key
- 7 — Nav soft-key
- 8 — Phone soft-key

- 9 — More soft-key
- 10 — Enter/Browse & Tune/Scroll knob
- 11 — SD Card slot
- 12 — CD/DVD slot

### **(1) ON/OFF VOLUME**

Press the ON/OFF button to turn the unit ON or OFF. Rotate the rotary knob to adjust the Volume.

**NOTE:** If the ignition is switched OFF with the radio in standby mode, the radio memorizes the standby mode when the ignition is turned ON again. Press the ON/OFF VOLUME Control to turn the radio ON. It is possible to eject the CD and to display the time if the system is off. The navigation software is always working when the ignition is switched ON, even if the radio is in standby mode. It is possible to eject the CD and to display the time if the unit is switched off.

### **(2) CLIMATE CONTROLS (Manual Controls)**

Refer to Climate Controls in your vehicles Owner's Manual on the DVD for further details.

### **(3) RADIO**

Press the Radio soft-key to enter the Radio Mode. The different tuner modes; AM, FM and SAT can be selected by touching the corresponding soft-keys in the Radio Mode.

### **(4) PLAYER**

Press the Player soft-key to access media sources such as: Disc, USB Device and AUX as long as the requested media is present.

### **(5) CONTROLS**

Press the Controls soft-key to access the Settings list. Controls such as; Heated Seats, Heated Steering Wheel, Ventilated Seats, etc. can be selected or turned ON/OFF by touching the corresponding soft-key.



## **(6) CLIMATE (On-Screen Controls)**

Refer to Climate Controls in your vehicles Owner's Manual on the DVD for further details.

## **(7) NAV**

Press the Nav soft-key to access the Navigation feature. Refer to the Navigation section in this manual for further details.

## **(8) PHONE**

Press the Phone soft-key to access the Uconnect® Phone feature. Refer to the Uconnect® Phone section in the Owner's Manual on the DVD for further details.

## **(9) MORE**

Press the More soft-key to access additional options. Options available such as: Settings and SiriusXM™ Travel Link can be accessed by touching the corresponding soft-key in the More Menu.

## **(10) ENTER/BROWSE & TUNE/SCROLL**

Press the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

## **(11) SD CARD SLOT**

Insert an SD Card containing audio media in order to play them through the vehicles sound system.

## **(12) CD/DVD SLOT**

When inserting a disc, make sure the label is facing up. Press the Eject button to eject the disc.



# Uconnect® 4.3

## CONTENTS

2

■ Radio Mode. . . . .	11	□ Browse. . . . .	23
□ Overview . . . . .	11	□ Source . . . . .	24
□ Common Radio Functions . . . . .	11	□ Info . . . . .	24
□ Seek and Direct Tune Functions . . . . .	13	□ Shuffle . . . . .	24
□ Setting Presets. . . . .	15	□ Audio . . . . .	24
□ Audio . . . . .	16	■ USB/iPod Mode . . . . .	25
□ SiriusXM™ Satellite Radio Mode . . . . .	17	□ Overview . . . . .	25
■ Disc Mode. . . . .	22	□ Seek Up/Down. . . . .	25
□ Overview . . . . .	22	□ Browse. . . . .	26
□ Seek Up/Down. . . . .	23	□ Source . . . . .	26

## 10 Uconnect® 4.3

□ Info . . . . .	.26	□ Seek Up/Down. . . . .	.28
□ Shuffle . . . . .	.26	□ Source . . . . .	.29
□ Audio . . . . .	.26	□ Info . . . . .	.29
■ AUX Mode . . . . .	.27	□ Audio . . . . .	.29
□ Overview . . . . .	.27	■ More & Settings . . . . .	.30
□ Source . . . . .	.27	□ More Main Menu . . . . .	.30
□ Audio . . . . .	.27	□ Clock Setting . . . . .	.30
■ Bluetooth® Mode . . . . .	.28	□ Settings Main Menu . . . . .	.31
□ Overview . . . . .	.28	□ Display . . . . .	.33

## Radio Mode

### Overview



The radio is equipped with the following modes:

- FM
- AM
- SAT SiriusXM™ Satellite Radio (if equipped)

Touch the Radio hard-key, upper left corner, to enter the Radio Mode. The different tuner modes; AM, FM, and SAT, can then, be selected by touching the corresponding soft-keys on the screen.

### Common Radio Functions

The following operations offer the same functionality across all Radio Modes, and further instructions are provided where differences exit.

## ON/OFF & Volume Control



Push the ON/OFF Volume control knob to turn on the radio. Push the ON/OFF Volume control knob a second time to turn off the radio.

The electronic volume control turns continuously (360 degrees) in either direction, without stopping. Turning the Volume control knob clockwise increases the volume, and anti-clockwise decreases it.

When the audio system is turned on, the sound will be set at the same volume level as last played.

## Enter/Browse & Tune/Scroll Control



Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

## Info

Touch the info soft-key to display channel number/frequency, song title, genre and artist. This feature is only available in FM and SAT modes.

## Exit

The Exit soft-key, provides a means to close the Direct Tune Screen.

## Go

Touch the green GO soft-key to allow you to commit an entry, at which time, the radio will tune to the entered Channel, and close the Direct Tune Screen. The GO soft-key is only for SiriusXM™ Satellite radio mode.

## Seek and Direct Tune Functions

The Seek Up and Down functions are activated by touching the double arrow soft-keys to the right and left of the radio station display, or by pressing the left Steering Wheel Audio Control (if equipped) up or down.

### Seek Up

Touch and release the Seek Up soft-key to tune the radio to the next listenable station or channel.

During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

### Fast Seek Up

Touch and hold the Seek Up soft-key to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the soft-key is released.

### Seek Down

Touch and release the Seek Down soft-key to tune the radio to the next listenable station or channel.

During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

### Fast Seek Down

Touch and hold the Seek Down soft-key to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the soft-key is released.

## Direct Tune



The Direct Tune soft-key screen is available in AM, FM, and SAT radio modes and can be used to direct tune the radio to a desired station or channel. Press the Tune soft-key located at the bottom of the radio screen.

Press the available number soft-key to begin selecting a desired station. Once a number has been entered, any numbers that are no longer possible (stations that cannot be reached) will become deactivated / grayed out.

If you accidentally entered the wrong station number, touch the CLR soft-key to clear the radio station numbers and reenter the correct station number.

Once the last digit of a station has been entered, the DIRECT TUNE screen will close and the system will automatically tune to that station.

The selected Station or Channel number is displayed in the Direct Tune text box.



## Setting Presets



The Presets are available for all Radio Modes, and are activated by touching any of the four Preset soft keys, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered soft-key for more than 2 seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. A set of 4 presets are visible at the top of the radio screen.

## All Presets Button



Touching the "all" soft-key on the radio home screen will display all of the preset stations for that mode.

## Return to Main Radio Screen

You can return to the Main Radio Screen, by either touching Exit soft-key or pressing the Radio hard-key.

## Audio

1. Press the SETTINGS hard-key on the right side of the unit.
2. Then scroll down and press the Audio soft-key to get to the Audio menu.
3. The Audio Menu shows the following options for you to customize your audio settings.
  - Equalizer

Touch the Equalizer soft-key to adjust the Bass, Mid and Treble. Use the + or - soft-key to adjust the equalizer to your desired settings. Press the back arrow soft-key when done.

- Balance/Fade

Touch the Balance/Fade soft-key to adjust the sound from the speakers. Use the arrow soft-key to adjust the sound level from the front and rear or right and left side speakers. Touch the Center "C" soft-key to reset the balance and fade to the factory setting. Press the back arrow soft-key when done.

- Speed Adjusted Volume

Touch the Speed Adjusted Volume soft-key to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the back arrow soft-key when done.

4. Touch the Exit soft-key to exit from the Audio Menu.

### **SiriusXM™ Satellite Radio Mode**

SiriusXM™ Satellite radio uses direct satellite-to-receiver broadcasting technology to provide clear digital sound,

coast to coast. The subscription service provider is SiriusXM™ Satellite Radio. This service offers over 130 channels of music, sports, news, entertainment, and programming for children, directly from its satellites and broadcasting studios. A one-year SiriusXM™ Satellite Radio subscription is included.

SiriusXM™ and all related marks and logos are trademarks of SiriusXM™ Radio Inc. and its subsidiaries. SiriusXM™ Radio requires a subscription, sold separately after trial subscription included with vehicle purchase. Prices and programming are provided by SiriusXM™ and are subject to change. Subscriptions governed by Terms & Conditions available at [sirius.com/serviceterms](http://sirius.com/serviceterms). SiriusXM™ Radio U.S. service only available to those at least 18 years of age in the 48 contiguous United States, D.C., and PR. Service available in Canada; see [www.siriuscanada.ca](http://www.siriuscanada.ca).

 
This functionality is only available for radios equipped with a Satellite receiver. In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you might have to change the vehicle's position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

### No Subscription

Radios equipped with a Satellite receiver, require a subscription to the SiriusXM™ Service. When the Radio does not have the necessary subscription, the Radio is able to receive the Traffic/Weather channel only.

### Acquiring SiriusXM™ Subscription

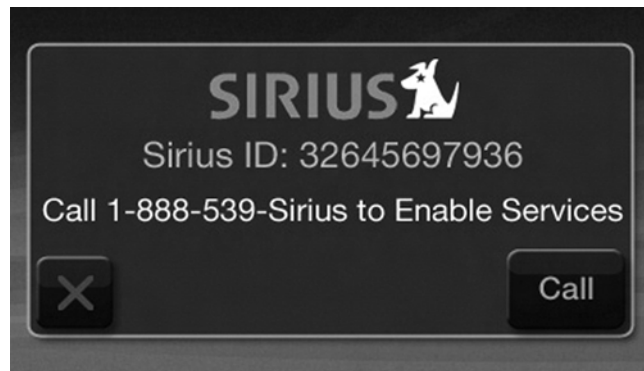

To activate the SiriusXM™ subscription, call the toll free number on the SiriusXM™ Settings. You will need to provide the Sirius ID (SID) located on your vehicle's screen.

The satellite mode is activated by touching the AM/SAT soft-key located at the bottom of the radio screen. Touch the AM/SAT soft-key and then touch the SAT soft-key.

When in SiriusXM™ Satellite mode:

- The SiriusXM™ Presets are displayed at the top of the screen.
- The SiriusXM™ Channel Number is displayed along with Artist and Song name.
- The SiriusXM™ function soft-keys are displayed on the bottom.

In addition to the tuning functions common to all Radio modes, the browse ,info, and more hard-key functions are available in SiriusXM™ Mode. Touching the more button slides over the additional functions that are on the second level of the bottom bar. This second level stays for

10 seconds and then returns to the main top level of the bottom bar. The second level displays audio, fav, gamezone and replay buttons.

### **Browse**

Touch the browse soft-key at the bottom left of the screen to enter the Browse screen.

The Browse screen in SAT mode provides you the ability to browse by All, Favorites or Genres. You can also access Gamezone, and Traffic and Weather settings in the Browse screen.

### **Favorites**

Touch the more... soft-key and then the fav soft-key to access the favorites feature.

The favorites feature enables you to set a favorite artist, or song. The Radio then uses this information to alert you

when either the favorite song, or works by the favorite artist are being played at any time by any of the SiriusXM™ Channels.

### **Gamezone**

Touch the more... soft-key and then the gamezone soft-key to access the gamezone feature. This feature provides you with the ability to Select teams, edit the selection, and set Alerts.

### **Replay**

The replay function provides a means to store and replay up to 22 minutes of music audio and 48 minutes of talk radio.

Touch the replay soft-key. The play/pause, rewind/forward and live soft-keys will display at the top of the screen, along with the replay time.

Replay can be exited by touching the replay soft-key, any time during the Replay mode.

## **Play/Pause**

Touch the Pause or Play soft-key to pause playing of the content at any time that the content is playing live or rewound content. Play can be resumed again by touching of the Pause/Play soft-key.

## **Rewind**

Touch the RW soft-key to rewind the content in steps of 5 seconds. Touching the RW soft-key for more than 2 seconds rewinds the content. The Radio begins playing the content at the point at which the touch is released.

## **Forward**

Each touch of the FW soft-key forwards the content in steps of 5 seconds. Forwarding of the content can only be done when the content is previously rewound, and therefore, can not be done for live content. A continuous touch of the FW soft-key also forwards the content. The Radio begins playing the content at the point at which the touch is release.

## **Live**

Touch the Live soft-key to resume playing of Live content.

## Disc Mode

### Overview

Disc Mode is entered by either inserting a Disc or by touching the Player hard-key located left of the display. Once in Player Mode, touch the source soft-key and select Disc.

A “No Disc” message will be displayed on the screen in the Disc mode when a Disc is not present in the Radio.

### Inserting Compact Disc

Gently insert one Disc into the Disc player with the Disc label facing up. The CD will automatically be pulled into the Disc player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 in (2.5 cm), a disc may already be loaded and must be ejected before a new disc can be loaded.

If you insert a disc with the ignition ON and the radio ON, the unit will switch to Disc mode and begin to play when you insert the disc. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

### CAUTION!

- **This CD player will accept 4-3/4 in (12 cm) discs only. The use of other sized discs may damage the CD player mechanism.**
- **Do not use adhesive labels. These labels can peel away and jam the player mechanism.**
- **Uconnect® is a single CD player. Do not attempt to insert a second CD if one is already loaded.**
- **Dual-media disc types (one side is a DVD, the other side is a CD) should not be used, and they can cause damage to the player.**



## EJECT Button - Ejecting a Disc



Press the EJECT button to eject the Disc.

If you have ejected a disc and have not removed it within 10 seconds, it will be reloaded. If the Disc is not removed, the radio will reinsert the DiscD but will not play it.

A disc can be ejected with the radio and ignition OFF.

## Seek Up/Down

Touch and release the right arrow soft-key for the next selection on the Disc. Touch and release the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc is within the first second of the current selection.

## Fast Seek Up

Touch and hold the right arrow soft-key and the Disc player will begin to fast forward through the current track until the soft-key is released.

## Fast Seek Down

Touch and hold the left arrow soft-key and the Disc player will begin to rewind through the current track until the soft-key is released.

## Browse

Touch the browse soft-key to scroll through and select a desired track on the Disc. Touch the exit soft-key if you wish to cancel the browse function.

## Source

Touch the Source soft-key to select the desired audio source, CD, AUX or USB. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Info

Touch the Info soft-key to display the current track information. Touch the "X" soft-key to cancel this feature.

## Shuffle

Touch the more... soft-key then the shuffle soft-key to play the selections on the compact disc in random order to provide an interesting change of pace. Touch the soft-key a second time to turn this feature off.

## Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

## USB/iPod Mode

### Overview

USB/iPod Mode is entered by either inserting a USB Jump Drive or iPod cable into the USB port or by touching the Player hard-key located left of the display. Once in Player Mode, touch the source soft-key and select USB/iPod.

### Inserting USB/iPod Device

Gently insert the USB/iPod device into the USB Port. If you insert a USB/iPod device with the ignition ON and the radio ON, the unit will switch to USB/iPod mode and begin to play when you insert the device. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

### Seek Up/Down

Touch and release the right arrow soft-key for the next selection on the USB/iPod device. Touch and release the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the USB/iPod device is within the first second of the current selection.

### Fast Seek Up

Touch and hold the right arrow soft-key and the USB/iPod device will begin to fast forward through the current track until the soft-key is released.

### Fast Seek Down

Touch and hold the left arrow soft-key and the USB/iPod device will begin to rewind through the current track until the soft-key is released.

## **Browse**

Touch the Browse soft-key to select Artist, Albums, Genres, Songs, Playlists or Folders from the USB/iPod device. Once the desired selection is made you can chose from the available media by touching the soft-key. Touch the exit soft-key if you wish to cancel the browse function.

## **Source**

Touch the Source soft-key to select the desired audio source, CD, AUX or USB/iPod. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## **Info**

Touch the Info soft-key to display the current track information. Touch the "X" soft-key to cancel this feature.

## **Shuffle**

Touch the more... soft-key then the shuffle soft-key to play the selections on the USB/iPod device in random order to provide an interesting change of pace. Touch the soft-key a second time to turn this feature off.

## **Audio**

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

## AUX Mode

### Overview

AUX Mode is entered by inserting a AUX device using a cable with a 3.5 mm audio jack into the AUX port or by touching the Player hard-key located left of the display. Once in Player Mode, touch the source soft-key and select AUX.

### Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert a Auxiliary device with the ignition ON and the radio ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

### Controlling the Auxiliary Device

The control of the auxiliary device (e.g., selecting play-lists, play, fast forward, etc.) cannot be provided by the

radio; use the device controls instead. Adjust the volume with the ON/OFF VOLUME rotary knob, or with the volume of the attached device.

**NOTE:** The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

### Source

Touch the Source soft-key to select the desired audio source, CD, AUX or USB. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

### Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

## Bluetooth® Mode

### Overview

Bluetooth Streaming Audio (BTSA) or Bluetooth Mode is entered by pairing a Bluetooth device, containing music, to the Uconnect® System.

Before proceeding, the Bluetooth device needs to be paired through Uconnect® in order to communicate with the Uconnect® System.

**NOTE:** See the pairing procedure in the Owner's Manual on the DVD for more details.

Once the Bluetooth device is paired to the Uconnect® System, touch the Player hard-key located on the left side of the display. Once in Player Mode, touch the source soft-key and select Bluetooth.

### Seek Up/Down

Touch and release the right arrow soft-key for the next selection on the Bluetooth device. Touch and release the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the Bluetooth device is within the first second of the current selection.

### Fast Seek Up

Touch and hold the right arrow soft-key and the Bluetooth device will begin to fast forward through the current track until the soft-key is released.

### Fast Seek Down

Touch and hold the left arrow soft-key and the Bluetooth device will begin to rewind through the current track until the soft-key is released.

## Source

Touch the Source soft-key to select the desired audio source, CD, USB/iPod, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Info

Touch the Info soft-key to display the current track information. Touch the Info soft-key a second time to cancel this feature.

## Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

## More & Settings

### More Main Menu

Press the More hard-key to display the More Main Menu. The More Main Menu contains the following options:

- *Economy (If Equipped)*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Phone*

Refer to "Understanding The Features Of Your Vehicle", "Uconnect® 4.3" section in your vehicle Owner's Manual on the DVD for details.

- *Outlet (If Equipped)*

Refer to "Understanding The Features Of Your Vehicle", "Power Inverter" section in your vehicle Owner's Manual on the DVD for details.

- *Time*

Refer to this section for details.

- *Compass*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

### Clock Setting

1. Press the More hard-key on the right side of the display, next press the Time soft-key and then press the Set soft-key. **Or.** Press the Settings hard-key on the right side of the display, then press the Clock soft-key. The Time setting screen is displayed and the clock can be adjusted as described in the following procedure.



2. Touch the Up or Down arrows to adjust the hours or minutes, next select the AM or PM soft-key. You can also select 12hr or 24hr format by touching the desired soft-key.



3. Once the time is set press the "Done" soft-key to exit the time screen.

## Settings Main Menu

Press the Settings hard-key to display the Settings Main Menu. The Settings Main Menu contains the following options:

- *Display*

Refer to this section for details.

- *Clock*

Refer to this section for details.

- *Safety/Assistance*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Lights*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Doors & Locks*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Heated Seats*

Refer to "Understanding The Features Of Your Vehicle", "Seats" section in your vehicle Owner's Manual on the DVD for details.

- *Engine Off Options*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Compass Settings*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Audio*

Refer to the Operating Instructions – Radio section in this manual for details.

- *Phone/Bluetooth*

Refer to "Understanding The Features Of Your Vehicle", "Uconnect® 4.3" section in your vehicle Owner's Manual on the DVD for details.

- *Sirius Setup*

Refer to the Operating Instructions – Radio section in this manual for details.

## Display

Your Uconnect® display can be customized by following the steps:

1. Press the SETTINGS hard-key on the right side of the display.



2. Then press the Display soft-key.

3. The Display Menu shows the following options for you to customize your display.

- **Brightness**

Touch the Brightness soft-key and use the + or - soft-keys to adjust the brightness of the display screen with the headlights on or off. Press the back arrow soft-key when done.

- **Mode**

Touch the Mode soft-key to adjust the display screen brightness for Day, Night or Auto selection. Press the back arrow soft-key when done.

- **Language**

Touch the Language soft-key to select between English, French or Spanish. Press the back arrow soft-key when done.

- *Units*

Touch the Units soft-key to select between U.S. and Metric units of measure. Press the back arrow soft-key when done.

- *Touch Screen Beep*

Touch the Touch Screen Beep soft-key to turn the ON or OFF the sound heard when a screen soft-key is pressed. Press the back arrow soft-key when done.

4. Touch the Exit soft-key to exit from the Display Menu.

# Uconnect® 8.4 & 8.4N

## CONTENTS

■ Radio Mode. . . . .	.38	□ Seek Up/Down. . . . .	.56
□ Overview . . . . .	.38	□ Browse. . . . .	.57
□ Common Radio Functions . . . . .	.38	□ Source . . . . .	.57
□ Seek and Direct Tune Functions . . . . .	.39	□ Repeat . . . . .	.57
□ Setting Presets. . . . .	.42	□ Shuffle . . . . .	.57
□ SiriusXM™ Satellite Radio Mode . . . . .	.44	□ Info . . . . .	.57
□ Browse in SAT . . . . .	.48	□ Tracks . . . . .	.58
□ Audio . . . . .	.52	□ Audio . . . . .	.58
■ Disc Mode. . . . .	.55	■ USB/iPod Mode . . . . .	.59
□ Overview . . . . .	.55	□ Overview . . . . .	.59

□ Seek Up/Down. . . . .	.59	□ Overview . . . . .	.68
□ Browse. . . . .	.60	□ Seek Up/Down. . . . .	.68
□ Source . . . . .	.64	□ Browse. . . . .	.69
□ Repeat . . . . .	.64	□ Source . . . . .	.73
□ Shuffle . . . . .	.64	□ Repeat . . . . .	.73
□ Info . . . . .	.64	□ Shuffle . . . . .	.73
□ Tracks . . . . .	.65	□ Info . . . . .	.73
□ Audio . . . . .	.65	□ Tracks . . . . .	.74
■ AUX Mode . . . . .	.66	□ Audio . . . . .	.74
□ Overview . . . . .	.66	■ Bluetooth® Mode . . . . .	.28
□ Source . . . . .	.67	□ Overview . . . . .	.75
□ Audio . . . . .	.67	□ Seek Up/Down. . . . .	.75
■ SD Card Mode. . . . .	.68	□ Source . . . . .	.76

□ Repeat . . . . .	.76	□ Customizing the Navigation System . . . . .	.102
□ Info . . . . .	.76	□ Appendix . . . . .	.105
□ Tracks . . . . .	.76	□ SiriusXM™ Travel Link . . . . .	.108
□ Audio . . . . .	.76	□ End-User License Agreements . . . . .	.110
■ Navigation (8.4N Only). . . . .	.77	■ More & Settings . . . . .	.127
□ Safety Precautions and Important Information . . . . .	.77	□ More Main Menu . . . . .	.127
□ Getting Started . . . . .	.79	□ Settings Main Menu . . . . .	.127
□ Finding Locations . . . . .	.82	□ Display . . . . .	.129
□ Speaking Commands . . . . .	.89	□ Clock Setting . . . . .	.131
□ About the Map Pages . . . . .	.92	■ Safety Guidelines . . . . .	.133
□ Using the Tools . . . . .	.97		
□ Traffic . . . . .	.99		

## Radio Mode

### Overview



The radio is equipped with the following modes:

- FM
- AM
- SAT SiriusXM™ Satellite Radio (if equipped)

Touch the RADIO Soft Key, bottom left corner, to enter the Radio Mode. The different tuner modes; AM, FM, and SAT, can then, be selected by touching the corresponding soft-keys in the Radio mode.

### Common Radio Functions

The following operations offer the same functionality across all Radio Modes, and further instructions are provided where differences exit.



## ON/OFF & Volume Control



Push the ON/OFF Volume control knob to turn on the radio. Push the ON/OFF Volume control knob a second time to turn off the radio.

The electronic volume control turns continuously (360 degrees) in either direction, without stopping. Turning the Volume control knob clockwise increases the volume, and anti-clockwise decreases it.

When the audio system is turned on, the sound will be set at the same volume level as last played.

## Tune/Scroll Control



Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

## Seek and Direct Tune Functions

The Seek Up and Down functions are activated by touching the double arrow soft-keys to the right and left of the radio station display, or by pressing the left Steering Wheel Audio Control (if equipped) up or down.

### Seek Up

Touch and release the Seek Up soft-key to tune the radio to the next listenable station or channel.

During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

### Fast Seek Up

Touch and hold the Seek Up soft-key to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the soft-key is released.

## Seek Down

Touch and release the Seek Down soft-key to tune the radio to the next listenable station or channel.

During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

## Fast Seek Down

Touch and hold the Seek Down soft-key to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the soft-key is released.

## Direct Tune



Press the Tune soft-key located at the bottom of the radio screen. The Direct Tune soft-key screen is available in AM, FM, and SAT radio modes and can be used to direct tune the radio to a desired station or channel.



Press the available number soft-key to begin selecting a desired station. Once a number has been entered, any numbers that are no longer possible (stations that cannot be reached) will become deactivated / grayed out.

Once the last digit of a station has been entered, the DIRECT TUNE screen will close and the system will automatically tune to that station.

The selected Station or Channel number is displayed in the Direct Tune text box.

### *Undo*

You can backspace an entry by touching the bottom left Undo soft key.

### *GO*

When touched, the green GO soft key allows the you to commit an entry, at which time the radio will tune to the entered station or channel and close the Direct Tune Screen.

### *Screen Close*

The Red X Soft key at the top right, provides a means to close the Direct Tune Screen. The Direct Tune Screen also auto closes if no activity occurs within 10 seconds.

## Setting Presets

The Presets are available for all Radio Modes, and are activated by touching any of the six Preset soft keys, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered soft-key for more than 2 seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. A set of 6 presets are visible at the top of the radio screen.

You can switch between the two radio presets by touching the arrow soft key located in the upper right of the radio screen.

## Browse in AM/FM



When in either AM or FM, the Browse Screen provides a means to edit the Presets List and is entered by touching the browse soft key.

## Scrolling Preset List



Once in the Browse Presets screen, you can scroll the preset list by rotation of the Tune Knob, or by touching the Up and Down arrow keys, located on the right of the screen.

## Preset Selection from List

A Preset can be selected by touching any of the listed Presets, or by pressing the ENTER/BROWSE button on the Tune Knob to select the currently highlighted Preset.

When selected, the radio tunes to the station stored in the Preset and returns to the main radio screen.

3

## Deleting Presets

A Preset can be deleted in the Presets Browse screen by touching the Trash Can Icon for the corresponding Preset.

## Return to Main Radio Screen

You can return to the Main Radio Screen, by touching the X soft key when in the Browse Presets screen.

## SiriusXM™ Satellite Radio Mode



SiriusXM™ Satellite radio uses direct satellite-to-receiver broadcasting technology to provide clear digital sound, coast to coast. The subscription service provider is SiriusXM™ Satellite Radio. This service offers over 130 channels of music, sports, news, entertainment, and

programming for children, directly from its satellites and broadcasting studios. A one-year SiriusXM™ Satellite Radio subscription is included.

SiriusXM™ and all related marks and logos are trademarks of SiriusXM™ Radio Inc. and its subsidiaries. SiriusXM™ Radio requires a subscription, sold separately after trial subscription included with vehicle purchase. Prices and programming are provided by SiriusXM™ and are subject to change. Subscriptions governed by Terms & Conditions available at [sirius.com/serviceterms](http://sirius.com/serviceterms). SiriusXM™ Radio U.S. service only available to those at least 18 years of age in the 48 contiguous United States, D.C., and PR. Service available in Canada; see [www.siriuscanada.ca](http://www.siriuscanada.ca).

This functionality is only available for radios equipped with a Satellite receiver. In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you might have to change the vehicle's position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

### No Subscription

Radios equipped with a Satellite receiver, require a subscription to the SiriusXM™ Service. When the Radio does not have the necessary subscription, the Radio is able to receive the Traffic/Weather channel only.

### Acquiring SiriusXM™ Subscription

To activate the SiriusXM™ subscription, call the toll free number on the Weather channel. You will need to provide the Sirius ID (SID) located at the bottom of the Channel 0 screen.

The SiriusXM™ Satellite Mode is activated by a touch of the SAT soft-key.

When in SiriusXM™ Satellite mode:

- The SAT button is highlighted.
- The SiriusXM™ Presets are displayed at the top of the screen.
- The Genre is displayed below the Presets Bar.
- The SiriusXM™ Channel Number is displayed in the center.
- The Program Information is displayed at the bottom of the Channel Number.
- The SiriusXM™ function soft-keys are displayed below the Program Information.

Tuning is done by operating the Tune Knob or by Direct Tune, similar to other Radio Bands, see Presets, browse, Tune Knob, and Direct Tune.

In addition to the tuning Operation functions common to all Radio modes, the replay, Traffic/Weather Jump, and fav soft-key functions are available in SiriusXM™ Mode.

## **Replay**

The replay function provides a means to store and replay up to 22 minutes of music audio and 48 minutes of talk radio.

Touch the replay soft-key. The play/pause, rewind/forward and live soft-keys will display at the top of the screen, along with the replay time.

Replay can be exited by touching the replay soft-key, any time during the Replay mode.

## **Play/Pause**

Touch the Pause or Play soft-key to pause playing of the content at any time that the content is playing live or rewound content. Play can be resumed again by touching of the Pause/Play soft-key.

## **Rewind**

Touch the RW soft-key to rewind the content in steps of 5 seconds. Touching the RW soft-key for more than 2 seconds rewinds the content. The Radio begins playing the content at the point at which the touch is released.

## **Forward**

Each touch of the FW soft-key forwards the content in steps of 5 seconds. Forwarding of the content can only be done when the content is previously rewound, and therefore, can not be done for live content. A continuous



touch of the FW soft-key also forwards the content. The Radio begins playing the content at the point at which the touch is release.

### **Live**

Touch the Live soft-key to resume playing of Live content.

### **Favorites**

Touch the fav. soft-key to activate the favorites menu, which will time out in 5 seconds in absence of user interaction.

You can exit the Favorites Menu by a touch of the X in the top right corner.

The favorites feature enables you to set a favorite artist, or song that is currently playing. The Radio then uses this

information to alert you when either the favorite song, or favorite artist are being played at any time by any of the SiriusXM™ Channels.

The maximum number of favorites that can be stored in the Radio is 50.

**Fav. Artist** While the song is playing to set a Favorite Artist, touch the fav. soft-key and then the Fav. Artist soft-key.

**Fav. Song** While the song is playing to set a Favorite Song, touch the fav. soft-key and then the Fav Song soft-key.

### **Traffic & Weather**

Touch the Traffic & Weather soft-key to tune to a SiriusXM™ Traffic & Weather channel. To set a Traffic & Weather alert for any one of the cities in the Browse list, see Browse in SAT.

When the Traffic & Weather soft-key is touched, the Jump Traffic & Weather channel is tuned.

If the Traffic & Weather alert City is not set, you are presented with a pop up to allow you to select the favorite city using the Browse Screen.

## Browse in SAT



Touch the browse soft-key to edit Presets, Favorites, Game Zone, and Jump settings, along with providing the SiriusXM™ Channel List.

This Screen contains many sub menus. You can exit a sub menu to get back to a parent menu by a touch of the Back Arrow.

## All

Touch the All soft-key at the left of the Browse Screen.

### Channel List

Touch the Channel List to display all the SIRIUS Channel Numbers along with the corresponding Genre. You can scroll the Channel list by touching the up and down arrows, located on the right side of the screen. Scrolling can also be done by operating the Tune/Scroll Knob.

### Genre

Touch the Genre button to display a list of Genres. You can select any desired Genre by touching the Genre list, at which point, the Radio tunes to a channel with the content in the selected Genre.

## Presets

Touch the Presets soft-key located at the left of the Browse screen.

You can scroll the Presets list touching the up and down arrows, located at the right side of the screen. Scrolling can also be done by operating the Tune/Scroll Knob as well.

### Preset Selection

A Preset can be selected by touching any of the listed Presets, or by pressing the ENTER/BROWSE button on the Tune Knob to select the currently highlighted Preset. When selected, the Radio tunes to the station stored in the Preset, and returns to the main Radio screen.

### Deleting a Preset

A Preset can be deleted in the Presets Browse screen by touching the Trash Can Icon for the corresponding Preset.

## Favorites

Touch the Favorites soft-key, located at the left of the Browse screen.

The Favorites menu provides a means to Edit the Favorites list and to configure the Alert Settings, along with providing a list of Channels currently airing any of the items in the Favorites list.

You can scroll the Favorites list touching the up and down arrows, located at the right side of the screen. Scrolling can also be done by operating the Tune/Scroll Knob as well.

### On Air

Touch the On-Air tab at the top of the screen. The On-Air list provides a list of Channels currently airing any of the items in the Favorites list, and touching any of the items in the list tunes the radio to that channel.

## Remove Favorites

Touch the Remove Favorites tab at the top of the screen. Touch the Delete All soft-key to delete all of the Favorites or touch the Trash Can icon next to the Favorite to be deleted.

### Alert Settings

Touch the Alert Setting tab at the top of the screen. The Alert Settings menu allows you to choose from a Visual alert or Audible and Visual alert when one of your favorites is airing on any of the SIRIUS channels.

## Game Zone

Touch the Game Zone soft-key, located at the left of the Browse screen. This feature provides you with the ability to select teams, edit the selection, and set alerts.

## On Air

Touch the On-Air tab at the top of the screen. The On-Air list provides a list of Channels currently airing any of the items in the Selections list, and touching any of the items in the list tunes the radio to that channel.

## Select Teams

Touch the Select Teams soft-key to activate the League Scroll list. Touch the chosen league and a scroll list of all teams within the league will appear, then you can select a team by touching the corresponding box. A check mark appears for all teams that are chosen.

## Remove Selection

Touch the Remove Selection tab at the top of the screen. Touch the Delete All soft-key to delete all of the Selections or touch the Trash Can icon next to the Selection to be deleted.

## Alert Settings

Touch the Alert Setting tab at the top of the screen. The Alert Settings menu allows you to choose from “Alert me to on-air games upon start” or “Alert upon score update” or both when one or more of your selections is airing on any of the SIRIUS channels.

## Traffic & Weather

Touch the Traffic & Weather soft-key to tune to a SiriusXM™ Traffic & Weather channel.

Touch the Up and Down arrows to the right side of the list to view all the available cities. This operation can also be done with operation of the Scroll/Tune Knob.

Touch the check box next to the desired City. A check mark appears besides the selected City.

## Audio

Touch of the Audio soft-key to activate the Audio settings screen to adjust Balance\Fade, Equalizer, And Speed Adjusted Volume.

You can return to the Radio screen by touching the X located at the top right.

### Balance/Fade

Touch the Balance/Fade soft-key to Balance audio between the front speakers or fade the audio between the rear and front speakers.



Touching the Front, Rear, Left, or Right soft-keys or touch and drag the blue Speaker Icon to adjust the Balance/Fade.

## Equalizer

Touch the Equalizer soft-key to activate the Equalizer screen.



Touch the + or - soft-keys, or by touching and dragging over the level bar for each of the equalizer bands. The level value, which spans between  $\pm 9$ , is displayed at the bottom of each of the Bands.

## Speed Adjusted Volume



Touch the Speed Adjusted Volume soft-key to activate the Speed Adjusted Volume screen.

The Speed Adjusted Volume is adjusted by touching of the + and - buttons or by touching, and dragging over the Level Bar. This alters the automatic adjustment of the audio volume with variation to vehicle speed.

## Music Info Cleanup



Touch the On soft-key to activate the Music Info Cleanup. Touch Off to deactivate this feature.

When Music Cleanup is On, the radio uses the Gracenotes database to display standard normalized information for song title, artist, album, etc.

## Surround Sound



Touch the On soft-key to activate Surround Sound. Touch Off to deactivate this feature.

When Surround Sound is On, you can hear audio coming from every direction as in a movie theatre or home theatre system.



## Disc Mode

### Overview

Disc Mode is entered by either inserting a Disc or by touching the Player soft-key located on the bottom of the display. Once in Player Mode, touch the source soft-key and select Disc.



A “No Disc” message will be displayed on the screen in the Disc mode when a Disc is not present in the Radio.

### Inserting Compact Disc

Gently insert one Disc into the Disc player with the Disc label facing up. The Disc will automatically be pulled into the player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 in (2.5 cm), a disc may already be loaded and must be ejected before a new disc can be loaded.

If you insert a disc with the ignition ON and the radio ON, the unit will switch from to Disc mode and begin to play when you insert the disc. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

**CAUTION!**

- This CD Player will accept 4-3/4 in (12 cm) discs only. The use of other sized discs may damage the CD player mechanism.
- Do not use adhesive labels. These labels can peel away and jam the player mechanism.
- Uconnect® 8.4 is a single Disc player. Do not attempt to insert a second Disc if one is already loaded.

**EJECT Button - Ejecting a Disc**

Press the EJECT button to eject the Disc.

If you have ejected a disc and have not removed it within 10 seconds, it will be reloaded. If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A disc can be ejected with the radio and ignition OFF.

**Seek Up/Down**

Touch and release the right arrow soft-key for the next selection on the Disc. Touch and release the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc is within the first second of the current selection.

**Fast Seek Up**

Touch and hold the right arrow soft-key and the Disc player will begin to fast forward through the current track until the soft-key is released.

**Fast Seek Down**

Touch and hold the left arrow soft-key and the Disc player will begin to rewind through the current track until the soft-key is released.

## Browse

Touch the browse soft-key to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the Disc. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Touch the desired soft-key on the left side of the screen. The center of the browse window shows items and it's sub-functions, which can be scrolled by touching the Up and Down soft-keys to the right. The Scroll/Tune knob can also be used to scroll.

## Source

Touch the Source soft-key to select the desired audio source, Disc, USB/iPod, SD Card, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Repeat

Touch the repeat soft-key to toggle the repeat functionality. The Repeat soft-key is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

## Shuffle

Touch the shuffle soft-key to play the selections on the compact disc in random order to provide an interesting change of pace. Touch the soft-key a second time to turn this feature off.

## Info

Touch the Info soft-key to display the current track information. Touch the Info soft-key a second time to cancel this feature.

## Tracks

Touch the trks soft-key to display a pop up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title.



Touching the trks soft-key while the pop up is displayed will close the pop up.

## Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

## USB/iPod Mode

### Overview

USB/iPod Mode is entered by either inserting a USB device or iPod and cable into the USB Port or by touching the Player soft-key located on the bottom of the display. Once in Player Mode, touch the source soft-key and select iPod.



### Inserting USB/iPod Device

Gently insert the USB/iPod device into the USB Port. If you insert a USB/iPod device with the ignition ON and the radio ON, the unit will switch to USB/iPod mode and begin to play when you insert the device. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

3

### Seek Up/Down

Touch and release the right arrow soft-key for the next selection on the USB device/iPod. Touch and release the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the USB device/iPod is within the first second of the current selection.

## Fast Seek Up

Touch and hold the right arrow soft-key and the USB device/iPod will begin to fast forward through the current track until the soft-key is released.

## Fast Seek Down

Touch and hold the left arrow soft-key and the USB device/iPod will begin to rewind through the current track until the soft-key is released.

## Browse

Touch the browse soft-key to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the USB device/iPod. If supported by the device, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Touch the desired soft-key on the left side of the screen. The center

of the browse window shows items and it's sub-functions, which can be scrolled by touching the Up and Down soft-keys to the right. The Scroll/Tune knob can also be used to scroll.

## ABC Jump

Touch the ABC Jump soft-key tab at the top of the screen to search an alpha numeric keypad used to search by letter/number for a certain Folder, Artist, Song, Album, or Genre. Touch one letter to select all contents that start with that letter. Touch the 123 soft-key to display all contents that start with numbers. Touch the 123 soft-key again to return to letters. Touch the X soft-key to exit the ABC Jump feature.

**NOTE:** Many features of this system are speed dependent. For your own safety these features may be grayed out and not accessible while the vehicle is in motion. Pull over at a safe location to complete your task.



## Search

Touch the Search soft-key tab at the top of the screen to display the Keyboard. This allows you to enter a folder or file name to be searched.



## Up Arrow

Touch the Up Arrow soft-key to toggle between Upper Case and Lower Case keys.

## ABC, ÅÖÜ and 1234!&#@

Touch the ABC key to activate a keyboard with Alpha-betic characters, or touch the ÅÖÜ to activate a keyboard with accented characters or touch the 1234!&#@ key to activate a keyboard with Numeric plus Special characters.

## Folders – If Equipped

Touch the Folders soft-key on the left side of the screen to display the Folders scroll menu. The Folders list consists of folders and files sorted alphanumerically, followed by a list of files sorted similarly. You can Browse the contents of a subfolder by touching the Folder Name in the list. Touch the Back Arrow soft-key to return or back up to a previous folder level.



## Artist

Touch the Artist soft-key on the left side of the screen to display the Artists list in which you can Scroll, Search, and Jump to operations.



## Playlists – If Equipped

Touch the Playlists soft-key on the left side of the screen to display the current playlist information.

## Songs



3

Touch the Songs soft-key on the left side of the screen to display the Songs list in which the user can Scroll, Search, and Jump to operations.

The currently playing song is displayed with a black background, and lines both above and below the title.

## Albums

Touch the Albums soft-key on the left side of the screen to display the Albums list in which you can Scroll, Search, and Jump to operations.

## Genres

Touch the Genres soft-key to display the Albums list in which you can Scroll, Search, and Jump to operations.

## Source

Touch the Source soft-key to select the desired audio source, Disc, USB/iPod, SD Card, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Repeat

Touch the repeat soft-key to toggle the repeat functionality. The Repeat soft-key is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

## Shuffle

Touch the shuffle soft-key to play the selections on the USB/iPod device in random order to provide an interesting change of pace. Touch the soft-key a second time to turn this feature off.

## Info

Touch the Info soft-key to display the current track information. Touch the Info soft-key a second time to cancel this feature.

## Tracks

Touch the trks soft-key to display a pop up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title. When in the Tracks List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the line above and below the track name) and then press the ENTER/BROWSE knob to start playing that track.



3

Touching the trks soft-key while the pop up is displayed will close the pop up.

## Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

## AUX Mode

### Overview

AUX Mode is entered by inserting an AUX device using a cable with a 3.5 mm audio jack into the AUX port or by touching the Player soft-key located at the bottom of the display. Once in Player Mode, touch the source soft-key and select AUX.



### Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert an Auxiliary device with the ignition ON and the radio ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

### Controlling the Auxiliary Device

The control of the auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the ON/OFF VOLUME rotary knob, or with the volume of the attached device.

**NOTE:** The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

## Source

Touch the Source soft-key to select the desired audio source, Disc, USB/iPod, SD Card, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

## SD Card Mode

### Overview

SD Card Mode is entered by inserting a SD Card containing music into the SD Card slot above the Disc slot on the Instrument Panel or by touching the Player soft-key located at the bottom of the display. Once in Player Mode, touch the source soft-key and select SD Card.



### Inserting SD Card

Gently insert the SD Card into the SD Card slot. If you insert a SD Card with the ignition ON and the radio ON, the unit will switch to SD Card mode and begin to play when you insert the card. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

### Seek Up/Down

Touch and release the right arrow soft-key for the next selection on the SD Card. Touch and release the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the SD Card is within the first second of the current selection.

## Fast Seek Up

Touch and hold the right arrow soft-key and the SD Card will begin to fast forward through the current track until the soft-key is released.

## Fast Seek Down

Touch and hold the left arrow soft-key and the SD Card will begin to rewind through the current track until the soft-key is released.

## Browse

Touch the browse soft-key to display the browse window. The left side of the browse window displays a list of ways you can browse through the contents of the SD Card. If equipped, you can browse by Folders, Artists, Playlists, Albums, Songs, etc. Touch the desired soft-key on the left side of the screen. The center of the browse window shows items and it's sub-functions, which can be scrolled

by touching the Up and Down soft-keys to the right. The Scroll/Tune knob can also be used to scroll.

## ABC Jump

Touch the ABC Jump soft-key tab at the top of the screen to display a alpha numeric keypad used to search by letter/number for a certain Folder, Artist, Song, Album, or Genre. Touch one letter to select all contents that start with that letter. Touch the 123 soft-key to search all contents that start with numbers. Touch the 123 soft-key to return to letters. Touch the X soft-key to exit the ABC Jump feature.

**NOTE:** Many features of this system are speed dependent. For your own safety these features may be grayed out and not accessible while the vehicle is in motion. Pull over at a safe location to complete your task.



## Search

Touch the Search soft-key tab at the top of the screen to display the Keyboard. This allows you to enter a folder or file name to be searched.





## Up Arrow

Touch the Up Arrow soft-key to toggle between Upper Case and Lower Case keys.

## ABC, ÅÖÜ and 1234!&#@

Touch the ABC key to activate a keyboard with Alpha-betic characters, or touch the ÅÖÜ to activate a keyboard with accented characters or touch the 1234!&#@ key to activate a keyboard with Numeric plus Special characters.

## Folders – If Equipped

Touch the Folders soft-key on the left side of the screen to display the Folders scroll menu. The Folders list consists of folders, and files sorted alphanumerical, followed by a list of files sorted similarly. You can Browse the contents of a sub-folder by touching the Folder Name in the list. Touch the Back Arrow soft-key to return or back up to a previous folder level.



## Artist

Touch the Artist soft-key on the left side of the screen to display the Artists list in which you can Scroll, Search, and Jump to operations.

## Playlists – If Equipped

Touch the Playlists soft-key on the left side of the screen to display the current playlist information.

## Songs



Touch the Songs soft-key on the left side of the screen to display the Songs list in which the user can Scroll, Search, and Jump to operations.

The currently playing song is displayed with a black background, and blue lines both above and below the title.

### **Albums**

Touch the Albums soft-key on the left side of the screen to display the Albums list in which you can Scroll, Search, and Jump to operations.

### **Genres**

Touch the Genres soft-key to display the Albums list in which you can Scroll, Search, and Jump to operations.

### **Source**

Touch the Source soft-key to select the desired audio source, Disc, USB/iPod, SD Card, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

### **Repeat**

Touch the repeat soft-key to toggle the repeat functionality. The Repeat soft-key is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

### **Shuffle**

Touch the Shuffle soft-key to play the selections on the Auxiliary device in random order to provide an interesting change of pace. Touch the soft-key a second time to turn this feature off.

### **Info**

Touch the Info soft-key to display the current track information. Touch the Info soft-key a second time to cancel this feature.

## Tracks

Touch the trks soft-key to display a pop up with the Song List. The currently playing song is indicated by an arrow and lines above and below the song title. When in the Tracks List screen you can rotate the TUNE/SCROLL knob to highlight a track (indicated by the line above and below the track name) and then press the ENTER/BROWSE knob to start playing that track.



Touching the trks soft-key while the pop up is displayed will close the pop up.

## Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

## Bluetooth® Mode

### Overview

Bluetooth Streaming Audio (BTSA) or Bluetooth Mode is entered by pairing a Bluetooth device, containing music, to the Uconnect® system.

Before proceeding, the Bluetooth device needs to be paired through Uconnect® Phone in order to communicate with the Uconnect® System.

**NOTE:** See the pairing procedure in the Owner's Manual on the DVD for more details.

Once the Bluetooth device is paired to the Uconnect® System, touch the Player soft-key located on the bottom of the display. Once in Player Mode, touch the source soft-key and select Bluetooth.

### Seek Up/Down

Touch and release the right arrow soft-key for the next selection on the Bluetooth device. Touch and release the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the Bluetooth device is within the first second of the current selection.

### Fast Seek Up

Touch and hold the right arrow soft-key and the Bluetooth device will begin to fast forward through the current track until the soft-key is released.

### Fast Seek Down

Touch and hold the left arrow soft-key and the Bluetooth device will begin to rewind through the current track until the soft-key is released.

## Source

Touch the Source soft-key to select the desired audio source, Disc, USB/iPod, SD Card, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Repeat

Touch the repeat soft-key to toggle the repeat functionality. The Repeat soft-key is highlighted when active. The Radio will continue to play the current track, repeatedly, as long as the repeat is active.

## Info

Touch the Info soft-key to display the current track information. Touch the Info soft-key a second time to cancel this feature.

## Tracks

Touch the trks soft-key to display a pop up with the Song List. The currently playing song is indicated by a blue arrow and lines above and below the song title.



Touching the trks soft-key while the pop up is displayed will close the pop up.

## Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

## Navigation (8.4N Only)

### Safety Precautions and Important Information

#### WARNING

Read this information carefully before starting to operate the navigation system and follow the instructions in this manual. Neither the Chrysler Group LLC nor Garmin shall be liable for problems or accidents resulting from failure to observe the instructions in this manual.

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

- Always use your best judgement, and operate the vehicle in a safe manner. **Do not become distracted by the navigation system while driving, and always be fully aware of all driving conditions.** Minimize the

amount of time spent viewing the navigation system screen while driving and use voice prompts when possible.

- Do not input destinations, change settings, or access any functions requiring prolonged use of the navigation system controls while driving. Pull over in a safe and legal manner before attempting such operations.
- When navigating, carefully compare information displayed on the navigation system to all available navigation sources, including road signs, road closures, road conditions, traffic congestion, weather conditions, and other factors that may affect safety while driving. For safety, always resolve any discrepancies before continuing navigation, and defer to posted road signs and road conditions.

- The navigation system is designed to provide route suggestions. It is not a replacement for driver attentiveness and good judgement. **Do not follow route suggestions if they suggest an unsafe or illegal maneuver or would place the vehicle in an unsafe situation.**
- Be careful of the ambient temperature. Using the navigation system at extreme temperatures can lead to malfunction or damage. Also note that the unit can be damaged by strong vibration, by metal objects, or by water getting inside the unit.

### CAUTION

The navigation system is designed to provide you with route suggestions. It does not reflect road closures or road conditions, weather conditions, or other factors that may affect safety or timing while driving.

Use the navigation system only as a navigational aid. Do not attempt to use the navigation system for any purpose requiring precise measurement of direction, distance, location, or topography.

The Global Positioning System (GPS) is operated by the United States government, which is solely responsible for its accuracy and maintenance. The government system is subject to changes that could affect the accuracy and performance of all GPS equipment, including the navigation system.

### NOTICE

This navigation system can be used when the ignition key is turned to ON or ACC. To preserve the battery, however, it should be used with the engine running whenever possible. Using the navigation system for a long time with the engine switched off can cause the battery to run down.



## Map Data Information

Garmin uses a combination of governmental and private data sources. Virtually all data sources contain some inaccurate or incomplete data. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

## Getting Started

To access the Navigation system, touch the Nav soft-key on bottom of the screen.

## Setting up Your System

When using your navigation system for the first time, complete the following tasks.

1. Acquire satellites.
2. Understand the main menu.

 
## Acquiring Satellites

The  bars indicate satellite strength.

Go to an open area, away from tall buildings and trees.



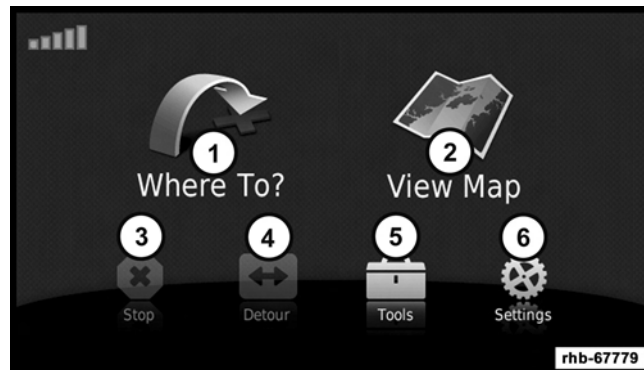


Acquiring satellite signals can take a few minutes.

## Main Menu



1. Touch to find a destination.
2. Touch to view the map.
3. Touch to stop a route.
4. Touch to detour a route.
5. Touch to open the menu of tools.
6. Touch to open the menu of settings.

### Using the On-screen Buttons

- Touch and hold  to quickly return to the main menu.
- Touch  and  to see more choices.
- Touch and hold  and  to scroll faster.

### Finding a Point of Interest




 
The detailed maps loaded in your navigation system contain points of interest, such as restaurants, hotels, and auto services.

1. From the main menu, touch **Where To? > Points of Interest**.
2. Select a category.
3. If necessary, select a subcategory.
4. Select a destination.
5. Touch **Go!**.


### *Finding a Location by Spelling the Name*

1. From the main menu, touch **Where To? > Points of Interest > Spell Name**.
2. Enter all or part of the name.
3. Touch **Done**.
4. Select a destination.
5. Touch **Go!**.

## Using the On-screen Keyboard

- Touch a character on the keyboard to enter a letter or number.
- Touch to add a space.
- Touch  to delete a character.
- Touch and hold  to erase the entire entry.
- Touch  to select the keyboard language mode.
- Touch  to enter special characters, such as punctuation marks.


## Adding Points to the Active Route

1. While navigating a route, touch  to return to the main menu.
2. From the main menu, touch **Where To?**.
3. Select a category.

4. If necessary, select a subcategory.
5. Select a destination.
6. Touch **Go!**.
7. Touch **Add as a Via Point**.

## Changing the Destination of the Active Route


Before you can change destinations, you must be navigating a route.

1. Touch  to return to the main menu.
2. Touch **Where To?**.
3. Search for the location.
4. Touch **Go!**.
5. Touch **Set as a New Destination**.


## Taking a Detour

While navigating a route, you can use detours to avoid obstacles ahead of you, such as construction zones.

**NOTE:** If the route you are currently taking is the only reasonable option, the navigation system might not calculate a detour.

1. While navigating a route, touch .
2. From the main menu, touch **Detour**.

## Stopping the Route

1. While navigating a route, touch .
2. From the main menu, touch **Stop**.

## Finding Locations

The Where To? menu provides several different categories you can use to search for locations. To perform a simple search, see the Getting Started section.

## Finding an Address

**NOTE:** Depending on the version of the built in map data on your navigation system, the button names and the order of steps could be different than the steps below.

1. From the main menu, touch **Where To? > Address**.
2. If necessary, change the state, the country, or the province.
3. Touch **Spell City**.
4. Enter the city/postal code.

**NOTE:** If you are unsure of the city/ postal code, touch **Search All**.

 
5. Touch **Done**.
6. If necessary, select the city/postal code.

**NOTE:** Not all map data provides postal code searching.

7. Enter the number of the address.
8. Touch **Done**.
9. Enter the street name.
10. Touch **Done**.
11. If necessary, select the street.
12. If necessary, select the address.

### Using the Go! Page

The Go! page opens when you select a location to navigate to.

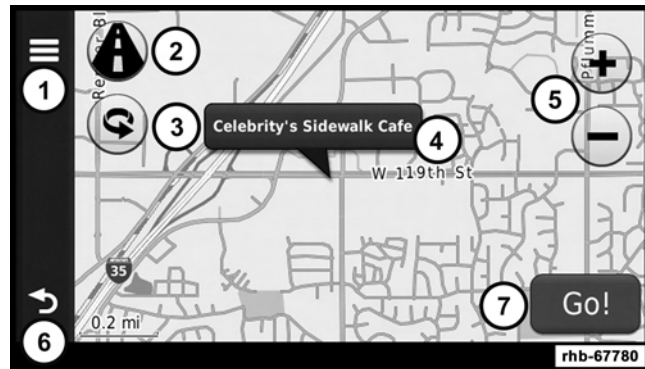

1. Touch to call the selected location when your device is connected to phone, or to save the location to your favorites.

2. Touch to switch between 2-D and 3-D view.
3. Touch to rotate the view.
4. Touch to view more information for the location.
5. Touch to zoom in and out.
6. Touch to return to the previous page. Touch and hold to return to the main menu.
7. Touch to create a turn-by-turn route to this location.

### Setting a Home Location

You can set your home location for the location you return to most often.


1. From the main menu, touch **Where To? > Go Home**.
2. Select **Enter My Address, Use My Current Location, or Recently Found**.

### Going Home


Before you can navigate to home, you must set a home location.

- From the main menu, touch **Where To? > Go Home**.

### Resetting Your Home Location

1. From the main menu, touch **Where To? >  > Set Home Location**.
2. Select an option to change your address.

### Editing Your Home Location Information


1. From the main menu, touch **Where To? > Favorites > Home**.
2. Touch  > **Edit**.
3. Enter your changes.
4. Touch **Done**.

## Viewing a List of Recently Found Locations

Your navigation system stores the last 50 locations you have found.

- From the main menu, touch **Where To? > Recently Found**.

## Clearing the List of Recently Found Locations

- From the main menu, touch **Where To? > Recently Found >  > Clear > Yes**.

## About Favorites

You can save locations in your Favorites so you can quickly find them and create routes to them. Your home location is also stored in Favorites.

## Saving Your Current Location to Favorites


1. From the map, touch the vehicle icon.
2. Touch **Save**.

3. Enter a name.

4. Touch **Done**.

The location is saved in **Favorites**.

## Saving Locations to Favorites


1. Search for the location.
2. From the Go! page, touch  > **Save > OK**.

## Finding Favorites

1. From the main menu, touch **Where To? > Favorites**.
2. If necessary, select a category.
3. Select a saved location.

## Editing Favorites



1. From the main menu, touch **Where To? > Favorites**.
2. Select a category.

3. Select a favorite.
4. Touch the information box.
5. Touch  > **Edit**.
6. Select an option:
  - **Name**
  - **Phone Number**
  - **Categories**
  - **Change Map Symbol**
7. Edit the information.
8. Touch **Done**.

### Planning a Trip

You can use Trip Planner to create and save a trip with multiple destinations.

1. From the main menu, touch **Where To? > Trip Planner**.


2. Touch .
3. Touch **Select Start Location**.
4. Search for a location.
5. Touch **Select**.
6. Touch  to add an additional location.
7. Touch **Select**.
8. Repeat steps 4–6 to add additional locations to your trip.
9. Touch **Next**.
10. Enter a name.
11. Touch **Done**.







### *Navigating to a Saved Trip*

1. From the main menu, touch **Where To? > Trip Planner**.
2. Select a saved trip.
3. Touch **Go!**.

### *Editing a Saved Trip*

1. From the main menu, touch **Where To? > Trip Planner**.
2. Select a saved trip.
3. Touch .
4. Select an option:
  - Touch **Rename Trip** to edit the trip name.
  - Touch **Edit Destinations** to add or delete locations.
  - Touch **Delete Trip** to delete the entire trip.
  - Touch **Optimize Order** to arrange your trip locations in the most efficient order.

### *Using the Map Buttons*

1. From the main menu, touch **Where To? > Browse Map**.
2. Touch anywhere on the map.
  - Touch  and  to zoom in and out.
  - Touch  to switch between 2D and 3D views.
  - Touch  to rotate the view.

### *Browsing the Map by Touching the Screen*

- Touch an area on the map to select a location.
- An information box appears next to the location.
- Touch and drag the map to view different parts of the map.
- Tap the map twice to zoom in and center on a location.

*Finding a Location Using the Map*

1. From the main menu, touch **Where To? > Browse Map**.

2. Touch a location.

An information box appears next to the location.

3. Touch the information box.

4. Select an option:

- Touch  > **Save**.

5. Touch **Go!**.

*Setting a Simulated Location*

You can use the GPS simulator to select another location, near which you can search for and save points of interest. This may be helpful when planning trips.

1. From the main menu, touch **Tools > Settings > System > GPS Simulator > On**.

2. From the main menu, touch **Where To? > Browse Map**.

3. Touch an area on the map.

4. Touch  > **Set Location**.

*Entering Coordinates*

If you know the geographic coordinates of your destination, you can use your navigation system to navigate to the destination using the latitude and longitude coordinates.


1. From the main menu, touch **Where To? > Coordinates**.

2. Touch a field to enter the latitude and longitude data.

3. Touch **View on Map**.

4. Touch **Go!**.

### *Changing the Map Coordinate Format*

1. From the Home Screen, touch **Where To? > Coordinates >  > Format.**
2. Select a format.

## **Speaking Commands**

### **About Voice Commands**



**NOTE:** The voice command feature is not available for all languages or regions.

The voice commands allow you to use your navigation system by speaking the words you see on the screen or by speaking certain commands.

### **Activating Voice Command**

- Press the Voice command button.
- The navigation system enters voice command.

### **About Icons and Tones**

- The navigation system sounds two tones when it enters and exits voice recognition mode.
- A  red icon appears in the upper-right corner of the screen when the navigation system is not ready for your command.
- Wait until the  icon is green to speak your command.

### **Tips for Using Voice Commands**

- Speak in a normal voice directed at the navigation system.
- Speak commands as they appear on the screen.
- Respond to voice prompts from the navigation system as needed.
- Speak “Exit” to exit voice command.

## Navigating to a Popular Location Using Voice Commands

 
You can speak the names of very popular, well-known locations.

1. Press the voice command button.
2. Speak "Find by Name."
3. Listen for the voice prompt and speak the name of the location.

A list of locations appears.




4. Speak the line number.

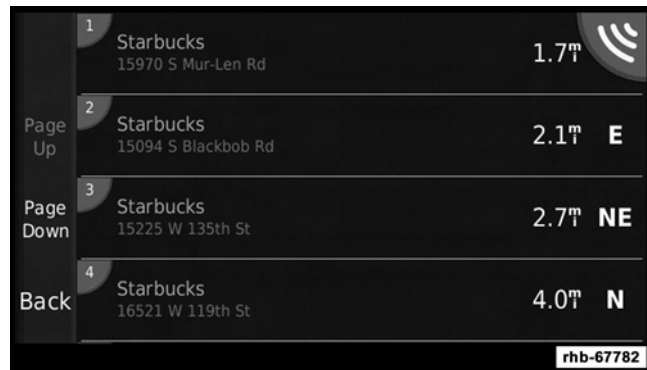

“Line 1”

5. Speak an option:

 - Speak “Go!” to navigate to the location.
- Speak “Call” to call the location when connected to a compatible mobile phone.

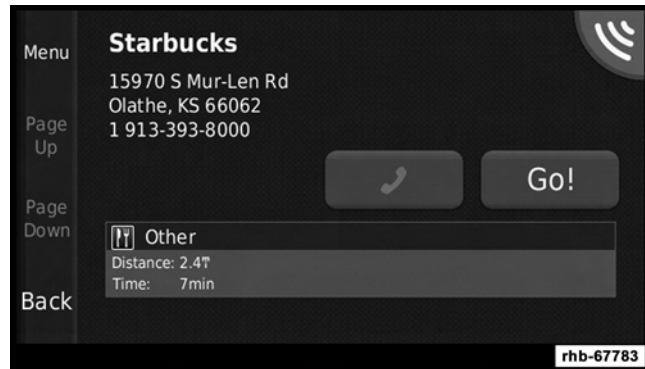

Speaking an Address

1. Speak “Voice Command.”
2. Speak “Find Address.”
3. Follow the on-screen prompts.

## About the Map Pages

### Viewing the Map While Navigating

#### *NOTICE*


In no event shall Garmin be liable for any incidental, special, indirect, or consequential damages, including, without limitation, damages for any traffic fines or citations, whether resulting from the use, misuse, or inability to use the product or from defects in the product. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Your route is marked with a magenta line. A checkered flag marks your destination.

As you travel, your navigation system guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, your navigation system recalculates the route and provides new directions.

A speed limit icon displaying the current speed limit may appear as you travel on major roadways.
 
## Using the Navigation Map

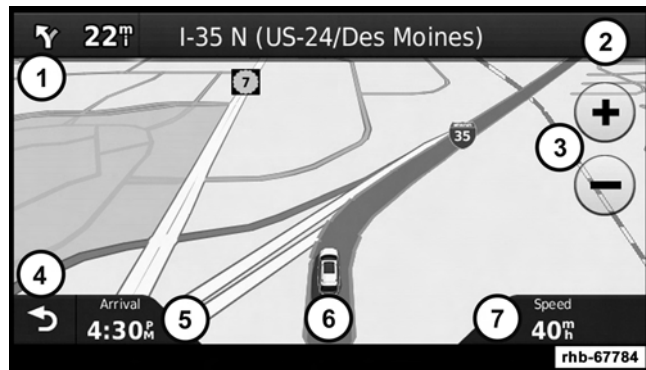

1. Touch to view the next turn.

The turn indicator also tells you which lane you should be in to prepare for your next maneuver, when available.

2. Touch to view the turn list.
3. Touch to zoom in and zoom out.
4. Touch to return to the main menu.
5. Touch to display a different data field.
6. Touch to view information for the location.
7. Touch to view trip information.

### About myTrends™

When the myTrends feature is enabled, your estimated time of arrival and traffic information for your frequent destinations, like your workplace, automatically appear in the navigation bar at the top of the map.

When myTrends information appears in the navigation bar, you can touch the navigation bar to view route options for the suggested destination.

### Enabling myTrends

- From the main menu, touch **Settings** > **Navigation** > **myTrends** > **Enabled**.

### Viewing Trip Information

The trip information page displays your present speed and provides statistics about your trip.


**TIP:** If you make frequent stops, leave the navigation system turned on so it can accurately measure elapsed time during the trip.

From the map, touch the **Speed** field.





 
### Resetting Trip Information


1. From the map, touch the **Speed** field.
2. Touch .
3. Select an option:
  - Touch **Reset Trip Mileage** to reset the information on the trip computer.
  - Touch **Reset Max. Speed** to reset the maximum speed.

### Viewing the Turn List

When you are navigating a route, you can view all of the turns for your entire route and the distance between turns.

1. From the map, touch the text bar on the top of the map.

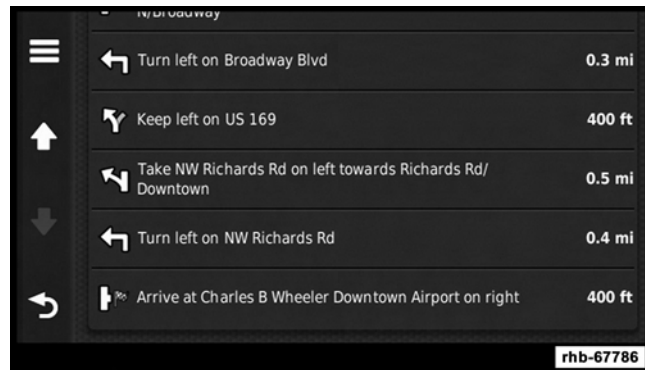

2. Select an option:
  - Select a turn on the list to view the next turn.
  - Touch  > **Map** to view the entire route on the map.

## Viewing the Next Turn

Before you can view the next turn, you must be navigating a route.

The next turn shows the turn on the map and the distance and time left before you reach the turn.

Touch the turn indicator in the top left corner of the map.



## Viewing the Junction View

Before you can view the junction view, you must be navigating a route.

The junction view displays a view of some upcoming junctions and in which lane you should be driving.



## Using the Tools

### Viewing Current Location Information

Use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

- From the main menu, touch **Tools > Where Am I?**

### *Finding Nearby Services*

1. From the main menu, touch **Tools > Where Am I?**
2. Touch **Hospitals, Police Stations, or Fuel** to view the nearest locations in that category.

### Using Help

From the main menu, touch **Tools > Help** to view information about using your navigation system.


### *Searching Help Topics*

From the main menu, touch **Tools > Help**.

## Using the World Clock

1. From the main menu, touch **Tools > World Clock**.
2. Touch a city name.
3. Enter a new city name.
4. Touch **Done**.
5. If necessary, select a city.

### *Viewing the World Map*

- From the main menu, touch **Tools > World Clock >**  
 .
- Nighttime hours appear in the shaded area.

### Using the Calculator

From the main menu, touch **Tools > Calculator**.

## Using the Unit Converter

1. From the main menu, touch **Tools > Unit Converter**.
2. Touch the box with a unit of measure listed.
3. Select a unit of measure.
4. Touch **Save**.

Two units of measure are listed.

5. Touch a unit of measure to change.
6. Select a unit of measure.
7. Touch **Done**.
8. Repeat steps 5–6, if necessary.
9. Enter a value.
10. Touch **Done**.

## *Setting Currency Conversion Rates Manually*

You can update the currency conversion rates manually so that you are always using the most current rates.

1. From the main menu, touch **Tools > Unit Converter**.
2. Touch the box with a currency listed.
3. Select **Currency**.
4. Touch **Save**.
5. Touch a currency box.
6. Select the currency you want to update.
7. Repeat steps 3–6 to select a currency to convert to, if necessary.
8. Touch a box under a currency.
9. Enter a new value for the currency.
10. Touch **Done**.
11. Repeat steps 8–9, if necessary.

## Traffic

### NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.

Your navigation system can receive FM Traffic Message Channel (TMC) traffic content.

For information about traffic receivers and coverage areas, go to [www.garmin.com/traffic](http://www.garmin.com/traffic).

The FM TMC traffic receiver, which is integrated in the vehicle power cable, is included in some packages and is an optional accessory for all series models.

### Subscription Activation

You do not need to activate the subscription included with your FM traffic receiver. The subscription activates

automatically after your navigation system acquires satellite signals while receiving traffic signals from the pay service provider.

### About the Traffic Icon

When you are receiving traffic information, a traffic icon appears on the map. The traffic icon changes color to indicate the severity of traffic conditions.

Color	Description	Meaning
Green	Low severity	Traffic is flowing freely.
Yellow	Medium severity	Traffic is moving but there is a delay. There is moderate traffic congestion.


Color	Description	Meaning
Red	High severity	Traffic is not moving or moving very slowly. There is a severe delay.
Gray	No data	Traffic information is not available.

### Traffic on Your Route

When calculating your route, the navigation system examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, the navigation system automatically recalculates the route.


You might still be routed through traffic if no better alternative routes exist.

### Manually Avoiding Traffic on Your Route


1. From the map, touch the .
2. Touch **Traffic On Route**.
3. If necessary, touch the arrows to view other traffic delays on your route.
4. Touch **Avoid**.

### Viewing the Traffic Map



The traffic map shows color-coded traffic flow and delays on nearby roads.

1. From the map, touch .
2. Touch **Traffic Map** to view the traffic incidents on a map.

## Searching for Traffic Delays

1. From the map page, touch .
2. Touch Traffic Search to view a list of roads with traffic delays.
3. Touch an item in the list to view delays on the road.
4. If there is more than one delay, touch the arrows to view additional delays.

## Adding a Subscription

 
1. From the main menu, touch **Settings > Traffic**.
2. Select an option:
  - For non-North American units, touch **Subscriptions > **.
  - For North American units, touch .

3. Write down the FM traffic receiver unit ID.
4. Go to [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic) to purchase a subscription and get a 25-character code.
5. Touch **Next**.
6. Enter the code.
7. Touch **Done**.

The traffic subscription code cannot be reused. You must obtain a new code each time you renew your service. If you own multiple FM traffic receivers, you must obtain a new code for each receiver.

## Customizing the Navigation System

1. From the main menu, touch **Settings**.

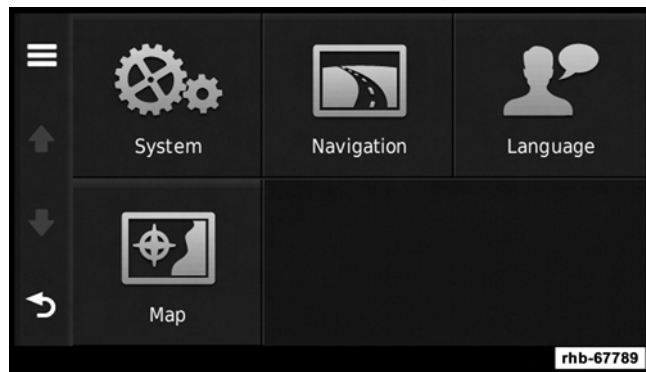

2. Touch a setting category.

3. Touch the setting to change it.


## System Settings

From the main menu, touch **Settings > System**.

- **GPS Simulator**—stops the navigation system from receiving a GPS signal, and saves battery power.
- **About**—displays the software version number, the unit ID number, and information on several other software features.

**NOTE:** You need this information when you update the system software or purchase additional map data.

## Restoring the System Settings

From the main menu, touch **Settings > System >  > Restore**.

## Changing the Map Settings

From the main menu, touch **Settings > Map**.



- **Map Detail**—sets the level of detail on the map. More detail may result in slower map drawing.
- **Map View**—sets the perspective on the Map page.
- **Map Theme**—changes the color of the map data.
- **Map Data Layout**—changes the amount of data visible on the map.
- **Vehicle**—changes the icon to represent your position on the map.
- **Trip Log**
  - **Show on Map**—displays the path of your travels on the map.
  - **Clear Trip Log**

### *Changing the Map Perspective*

1. From the main menu, touch **Settings > Map > Map View**.

2. Select an option:

- Touch **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
- Touch **North Up** to display the map in 2-D with North at the top.
- Touch **3-D** to display the map in three dimensions.

### **Route Preferences**

From the main menu, touch **Settings > Navigation > Route Preference**.

The route calculation is based on road speeds and vehicle acceleration data for a given route.

- **Faster Time**—calculates routes that are faster to drive but can be longer in distance.
- **Shorter Distance**—calculates routes that are shorter in distance but can take more time to drive.

- **Prompted**—select the faster time and shorter distance for your route.

### *Avoiding Road Features*

1. From the main menu, touch **Settings > Navigation > Avoidances**.
2. Select the road features to avoid on your routes.
3. Touch Save.

### *About trafficTrends™*

When the trafficTrends feature is enabled, your navigation system uses historic traffic information to calculate more-efficient routes. Different routes may be calculated based on traffic trends for the day of the week or based on the time of day.

### **Enabling trafficTrends**

1. From the main menu, touch **Settings > Navigation > trafficTrends**.
2. Select **Enabled**.

### *Restoring the Original Navigation Settings*


- From the main menu, touch **Settings > Navigation >  > Restore**.

### **Language Settings**

From the main menu, touch **Settings > Language**.

- **Voice Personality**— sets the language for voice prompts.
- **Keyboard**—sets the language for your keyboard.
- **Keyboard Layout**—sets the keyboard layout.

### *Restoring the Original Language Settings*

- From the main menu, touch **Settings** > **Language** >  > **Restore**.

### **About Traffic Subscriptions**

You can purchase additional subscriptions or a renewal if your subscription expires. Go to [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic).

### **Viewing traffic Subscriptions**

- From the main menu, touch **Settings** > **Traffic** > **Subscriptions**.

### **Restoring the Original Traffic Settings**

- From the main menu, touch **Settings** > **Traffic** >  > **Restore**.



### **Restoring All Original Settings**

- From the main menu, touch **Settings** >  > **Restore** > **Yes**.

### **Appendix**

#### **About GPS Satellite Signals**

The navigation system must acquire satellite signals in order to navigate.

When the navigation system has acquired satellite signals, the signal strength bars on the main menu are full . When it loses satellite signals, the bars are clear .

For more information about GPS, go to [www.garmin.com/aboutGPS](http://www.garmin.com/aboutGPS).

## Updating the Software

To update the navigation system software, you must have a USB mass storage device and an Internet connection.

1. Go to [www.garmin.com/Chrysler](http://www.garmin.com/Chrysler).
2. Find your model and select **Software Updates > Download**.
3. Read and accept the terms of the Software License Agreement.
4. Follow the instructions on the Web site to complete the installation of the software update.

## Updating the Map Data

To update the navigation system map, you must have a USB mass storage device and an Internet connection. A map update can be purchased once a year.

1. Go to [www.garmin.com/Chrysler](http://www.garmin.com/Chrysler).

2. Select **Order Map Updates** for your unit.

3. Follow the Web site instructions to update your map.

### **WARNING**

Garmin and Chrysler Group LLC are not responsible for the accuracy of, or the consequences of using, a safety camera database.

Safety camera information is available in some locations. Go to <http://my.garmin.com> for availability. For these locations, the navigation system includes the locations of hundreds of safety cameras. Your navigation system alerts you when you are approaching a safety camera and can warn you if you are driving too fast. The data is updated at least weekly, so you always have access to the most up-to-date information.

You can purchase a new region or extend an existing subscription at any time. Each region that you purchase has an expiration date.

## Custom POIs (Points of Interest)

**NOTE:** Custom POI files must be named “poi.gpi”. and located on the USB storage device in a folder named ‘POI’ within a folder named “Garmin” (Garmin/POI/).

You can manually load custom points of interest (POI) databases, available from various companies on the Internet. Some custom POI databases contain alert information for points such as safety cameras and school zones. The navigation system can notify you when you approach one of these points. You are responsible for ensuring that your use of safety camera information is lawful in your area.

### **WARNING**

Garmin and Chrysler Group LLC are not responsible for the consequences of using custom POI databases, or for the accuracy of custom POI databases.

After downloading your POI database, use the Garmin POI Loader to install the POIs onto a USB mass storage device. Use the USB mass storage device to load the POIs. The POI Loader is available at [www.garmin.com/products/poiloader](http://www.garmin.com/products/poiloader). Refer to the POI Loader Help file for more information; click **Help** to open the Help file. The file name can only be POI.gpi. No other file name or extension should be used.

**NOTE:** Each time you load custom POIs to the navigation system, any other custom POIs already saved in the system will be overwritten.

## Finding Custom POIs

You can view a list of the custom POIs loaded in your navigation system.

- Touch **Where To? > Extras > Custom POIs**.

## Deleting Custom POIs

1. Touch **Tools > My Data > Delete Custom POI(s)**.
2. Touch **Yes** to confirm.

**NOTE:** All custom POIs will be deleted from your navigation system.

## Saving trip Logs

Trip logs are recorded while you navigate a route.

## SiriusXM™ Travel Link

Now, in addition to delivering over 130 channels of the best sports, entertainment, talk and 100% commercial-free music, SiriusXM™ now offers premium infotainment services that work in conjunction with compatible navigation systems.

To access SiriusXM™ Travel Link, press the MENU hard-key then touch the Travel Link soft-key.

SiriusXM™ Travel Link brings a wealth of useful information into your vehicle and right to your fingertips:

## Fuel Prices

- Check detailed price information for fuel stations near your current location.
- Sort the list of closest fuel stations by price, distance or alphabetically.
- Route to selected fuel station.
- Store a favorite fuel station for quick access to pricing.

## Movie Listings

- Check which movies are playing at theaters near your current location.
- Sort the list of theaters by distance or alphabetically.

- Show movie titles, start times, ratings, run length, and summaries.
- Store a favorite theater for quick access to schedules.

### Ski Info

- View ski and snowboarding conditions at ski resorts.
- Store a favorite location for quick access to snow conditions.

### Sports Scores

- View scores and upcoming events for all major sports.
- Store your favorite teams for quick access to the scores and schedules.

**NOTE:** SIRIUS Travel Link data services subscription is separate from your SIRIUS Satellite Radio (audio) subscription.

### CAUTION!

**Neither SIRIUS nor Chrysler Group LLC is responsible for any errors in accuracies in the SIRIUS data services or its use in vehicles.**

SiriusXM™ and all related marks and logos are trademarks of SiriusXM™ Radio Inc. and its subsidiaries. SiriusXM™ Radio requires a subscription, sold separately after trial subscription included with vehicle purchase. Prices and programming are provided by SiriusXM™ and are subject to change. Subscriptions governed by Terms & Conditions available at [sirius.com/serviceterms](http://sirius.com/serviceterms). SiriusXM™ Radio U.S. service only available to those at least 18 years of age in the 48 contiguous United States, D.C., & PR. Visit [www.sirius.com/TravelLink](http://www.sirius.com/TravelLink) for more information on SIRIUS Travel Link.

## Weather

- View detailed current conditions at your current location.
- Check extended 12-hour and 5-day forecasts.
- Store a favorite location for quick access to weather conditions and forecasts.

## End-User License Agreements

### Software License Agreement

BY USING THE NAVIGATION SYSTEM, YOU AGREE TO BE BOUND BY THE TERMS AND CONDITIONS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY.

Garmin Ltd. and its subsidiaries (“Garmin”) grant you a limited license to use the software embedded in this device (the “Software”) in binary executable form in the

normal operation of the product. Title, ownership rights, and intellectual property rights in and to the Software remain in Garmin and/or its third-party providers.

You acknowledge that the Software is the property of Garmin and/or its third-party providers and is protected under the United States of America copyright laws and international copyright treaties. You further acknowledge that the structure, organization, and code of the Software, for which source code is not provided, are valuable trade secrets of Garmin and/or its third-party providers and that the Software in source code form remains a valuable trade secret of Garmin and/or its third-party providers. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Software or any part thereof or create any derivative works based on the Software. You agree not to export or re-export the Software to any country in



violation of the export control laws of the United States of America or the export control laws of any other applicable country.

### **NAVTEQ® End-user License Agreement**

The software embedded in your Garmin product (the “Software”) is owned by Garmin Ltd. or its subsidiaries (“Garmin”). The third-party map data embedded in or accompanying your Garmin product (the “Map Data”) is owned by NAVTEQ North America LLC and/or its affiliates (“NAVTEQ”) and is licensed to Garmin. Garmin also licenses information, text, images, graphics, photographs, audio, video and other applications and data from third-party data providers (“Third-Party Content Data”). The Map Data and Third-Party Content Data are collectively the “Data”. Both the Software and Data are protected under copyright laws and international copyright treaties. The Software and Data are licensed, not sold. The Software and Data are provided under the following licence and are subject to the following terms

and conditions which are agreed to by the End User (“you” or “your”), on the one hand, and Garmin and its licensors (including their licensors and suppliers) and affiliated companies on the other hand.

IMPORTANT: READ THIS LICENCE CAREFULLY BEFORE USING THIS PRODUCT. INSTALLING, COPYING OR OTHERWISE USING THIS PRODUCT INDICATES YOUR ACKNOWLEDGEMENT THAT YOU HAVE READ THIS LICENCE AND AGREE TO ITS TERMS. IF YOU DO NOT AGREE, RETURN THE COMPLETE PRODUCT WITHIN 7 DAYS OF THE DATE YOU ACQUIRED IT (IF PURCHASED NEW) FOR A FULL REFUND TO THE DEALER FROM WHICH YOU PURCHASED THIS PRODUCT.

### **Licence terms and Conditions**

Garmin (“we” or “us”) provides you with storage media containing the computer Software (the “Software”) and the embedded or accompanying Data, including any

“online” or electronic documentation and printed materials (together called the “Product” for purposes of this Licence Agreement), and grants you a limited, non-exclusive licence to use the Product in accordance with the terms of this Agreement. You agree to use this Data together with the Garmin product solely for personal use, or if applicable, for use in your business’ internal operations and not for service bureau, time-sharing, resale or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your use to (i) view it and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Software or Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble, reverse engineer or create derivative works of any portion of the Product and you may not transfer or distribute it in any form, for any purpose, except to the extent permitted by

mandatory laws. Garmin also reserves the right to discontinue offering any Data supplied by any third-party supplier if such supplier ceases to supply such content or Garmin’s contract with such supplier terminates for any reason.

**Restrictions.** Except where you have been specifically licensed to do so by Garmin and without limiting the preceding paragraph, you may not use this Data with any products, systems or applications installed or otherwise connected to or in communication with vehicles and which are capable of dispatch, fleet management or similar applications where the Data is used by a central control centre in dispatching a fleet of vehicles. In addition, you are prohibited from renting or leasing the Data or the Garmin products containing the Data to any other person or third party. Only those hire car companies that are specifically authorised by Garmin in writing to rent Garmin products containing the Data to their rental customers are permitted to rent out such products.

**nüMaps™ Lifetime.** If you purchase a nüMaps Lifetime subscription (sold separately), you will receive up to four (4) Map Data updates per year, when and as such updates are made available on Garmin's website, for one (1) compatible Garmin product until your product's useful life expires or Garmin no longer receives Map Data from NAVTEQ, whichever is shorter. The updates you receive under the subscription will be updates to the same geographic Map Data originally included with your Garmin product when originally purchased. In some instances, your Garmin product might not have sufficient memory remaining for you to load an update to the same Map Data originally included with your Garmin product, in which case you will need to either (a) select reduced Map Data coverage for your updates or (b) purchase separately a microSD card or an SD card (as applicable to your Garmin product) and load all or a portion of the Map Data coverage for your updates to the card and insert the card into the microSD card or SD card slot

contained in your Garmin product. Garmin may terminate your nüMaps Lifetime subscription at any time if you violate any of the terms of this Agreement or your subscription. Your nüMaps Lifetime subscription may not be transferred to another person or another Garmin product.

**No warranty.** This Product (including the Data) is provided to you "as it is" and you agree to use it at your own risk. Garmin and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, merchantability, fitness for a particular purpose, usefulness, use or results to be obtained from the Product or that the Data or server will be uninterrupted or error-free.

**Disclaimer of warranty.** GARMIN AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR

IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY GARMIN OR ITS SUPPLIERS AND LICENSORS SHALL CREATE A WARRANTY AND YOU ARE NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THIS AGREEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

**Disclaimer of liability.** GARMIN AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY

RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE DATA OR INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF GARMIN OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. GARMIN'S AND ITS LICENSORS' TOTAL AGGREGATE LIABILITY WITH RESPECT TO ITS OBLIGATIONS UNDER THIS AGREEMENT OR OTHERWISE WITH RESPECT TO THE GARMIN PRODUCT OR THE DATA SHALL NOT EXCEED \$1.00. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

**Disclaimer of endorsement.** Reference to any products, services, processes, hypertext links to third parties or other Data by trade name, trademark, manufacturer, supplier or otherwise does not necessarily constitute or imply its endorsement, sponsorship or recommendation by Garmin or its licensors. Product and service information are the sole responsibility of each individual vendor. The NAVTEQ name and logo, the NAVTEQ and NAVTEQ ON BOARD trademarks and logos and other trademarks and trade names owned by NAVTEQ North America LLC may not be used in any commercial manner without the prior written consent of NAVTEQ.

**Export control.** You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licences and approvals required under, applicable export laws, rules and regulations.

**Indemnity.** You agree to indemnify, defend and hold Garmin and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense or claim of any kind or character, including but not limited to lawyer's fees, arising out of or in connection with any use or possession by you of the Product (including the Data).

**Canadian map data.** The Map Data for Canada may include or reflect data of licensors, including Her Majesty and Canada Post. Such data is licensed on an "as it is" basis. The licensors, including Her Majesty and Canada Post, make no guarantees, representations or warranties respecting such data, either express or implied, arising by law or otherwise, including but not limited to, effectiveness, completeness, accuracy or fitness for a particular

purpose. The licensors, including Her Majesty and Canada Post, shall not be liable in respect of any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action alleging any loss, injury or damages, direct or indirect, which may result from the use or possession of the data or the Map Data. The licensors, including Her Majesty and Canada Post, shall not be liable in any way for loss of revenues or contracts, or any other consequential loss of any kind resulting from any defect in the data or the Map Data. You shall indemnify and save harmless the licensors, including Her Majesty the Queen, the Minister of Natural Resources of Canada and Canada Post and their officers, employees and agents from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expenses, damages or injuries (including injuries resulting in death) arising out of the use or possession of the data or the Map Data. The terms contained in this Section are in addition to all

of the rights and obligations of the parties under the Agreement. To the extent that any of the provisions of this Section are inconsistent with, or conflict with, any other provisions of the Agreement, the provisions of this Section shall prevail.

**United States Map Data.** NAVTEQ holds a nonexclusive licence from the United States Postal Service® to publish and sell ZIP+4® information. ©United States Postal Service® 2010. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS and ZIP+4.

**Canadian Map Data.** Map Data for Canada includes information taken with permission from Canadian authorities, including ©Her Majesty, ©Queen's Printer for Ontario, ©Canada Post, GeoBase®, ©Department of Natural Resources Canada. All rights reserved.

**Australian Map Data.** Map Data for Australia is based on data NAVTEQ has licensed from PSMA Australia Limited (www.pasma.com.au). In addition, the Product incorporates data which is ©2010 Telstra Corporation Limited, GM Holden Limited, Intelomatics Australia Pty Ltd, Sentinel Content Pty Limited and Continental Pty Ltd. If your Product uses RDS-TMC Codes contained in the Map Data, the traffic location codes are ©2010 Telstra Corporation Limited and its licensors.

**Term.** This Agreement is effective until such time as (i) if applicable, your subscription term is either terminated (by you or by Garmin) or expires, or (ii) Garmin terminates this Agreement for any reason, including, but not limited to, if Garmin finds that you have violated any of the terms of this Agreement. In addition, this Agreement shall terminate immediately upon the termination of an agreement between Garmin and any third party from whom Garmin licenses the Data.

**Entire agreement.** These terms and conditions constitute the entire agreement between Garmin (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

### **Governing law.**

#### **(a) For European Union NAVTEQ Data**

The above terms and conditions shall be governed by the laws of the Netherlands, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the Netherlands for any and all disputes, claims and actions arising from or in connection with the NAVTEQ Data provided to you hereunder.

(b) For North American NAVTEQ Data and other non-European Union NAVTEQ Data

The above terms and conditions shall be governed by the laws of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of Illinois for any and all disputes, claims and actions arising from or in connection with the NAVTEQ Data provided to you hereunder.

(c) For disputes, claims and actions not related to the NAVTEQ Data

The above terms and conditions shall be governed by the laws of Kansas, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is

explicitly excluded. You agree to submit to the jurisdiction of Kansas for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

**Government end users.** If the End User is an agency, department or other entity of the United States Government, or funded in whole or in part by the U.S. Government, then use, duplication, reproduction, release, modification, disclosure or transfer of the Product and accompanying documentation is subject to restrictions as set forth in DFARS 252.227-7014(a)(1) (JUN 1995) (DOD commercial computer software definition), DFARS 27.7202-1 (DOD policy on commercial computer software), FAR 52.227-19 (JUN 1987) (commercial computer software clause for civilian agencies), DFARS 252.227-7015 (NOV 1995) (DOD technical data – commercial items clause); FAR 52.227-14 Alternates I, II and III (JUN 1987) (civilian agency technical data and non-commercial computer software clause); and/or FAR 12.211 and FAR



12.212 (commercial item acquisitions), as applicable. In case of conflict between any of the FAR and DFARS provisions listed herein and this Licence, the construction that provides greater limitations on the Government's rights shall control. The contractor/ manufacturer is Garmin International, Inc., 1200 East 151st Street, Olathe, KS 66062, USA and NAVTEQ North America LLC, 425 West Randolph Street, Chicago, Illinois 60606 USA.

Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin.

NAVTEQ is a trademark in the U.S. and other countries. All other company names and trademarks mentioned or referenced in this documentation are the properties of their respective owners. All rights reserved.

### **DMTI Spatial, Inc. End User License Agreement**

The software embedded in your Garmin product is owned by Garmin Ltd. or its subsidiaries ("Garmin"). The third-party postal code data (the "Licensed Product") embedded in or accompanying your Garmin product is owned by DMTI Spatial, Inc. and is licensed to Garmin. Both the software and Licensed Product are protected under copyright laws and international copyright treaties.

THIS is a legal Agreement between you, the end user, and DMTI Spatial, Inc. BY LOADING THE PRODUCT(S) WITH THIS AGREEMENT YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY (within 7 days of purchase) RETURN THE PRODUCTS AND ANY ACCOMPANYING ITEMS (including written materials) TO Garmin

INTERNATIONAL, INC. CUSTOMER SERVICE, 1200 EAST 151ST STREET, OLATHE, KANSAS 66062, FOR A REFUND.

DMTI Spatial hereby grants to you a non-exclusive, non-transferable license to use the data contained on the media in this package (the “Licensed Product”) solely for personal non-commercial use or internal use in your business, on a single computer, Pocket PC, or Palm device in conjunction with Garmin software, and with compatible Garmin products that you personally own. Your use of the data is subject to the following terms and conditions:

You acknowledge that the Licensed Product(s) belong to DMTI Spatial and its third party supplier, and that the Licensed Product(s) are copyrighted. Unauthorized copying of the Licensed Product(s), is expressly forbidden and you may be held legally responsible for copyright infringement which is caused or encouraged by your failure to abide by the terms of this agreement. You

may make one archival copy of the Licensed Product(s), solely for your own use, subject to the following restrictions: (1) The archival copy must be treated in the same way as the original copy; (2) No copy may be used while any other copy is in use. If you make an archival copy of the Licensed Product(s), you must include on it the copyright notice that is on the original media.

You may not reproduce, sell, rent, lease, loan, distribute or sublicense the Licensed Product(s) or otherwise transfer the Licensed Product(s) to any third party, use the Licensed Product for commercial purposes except for internal use in your business, decompile, disassemble, reverse-engineer the Licensed Product(s), or use the Licensed Product to create any derived product for any of these prohibited purposes. You may not place the Licensed Product(s) on the Internet without a prior written agreement with DMTI Spatial.

In no event shall DMTI Spatial or its third party supplier(s) be liable to you or your organization for any indirect

damages including any lost profits, lost savings, interruption of business, loss of business opportunities or other incidental or consequential damages, arising out of your possession, use of, or inability to use the Licensed Product(s), even if DMTI Spatial, its third party supplier(s), or any authorized dealer, has been advised of the possibility of the damages, or for any claim by any other party. In no event shall DMTI Spatial have any liability for damage in excess of the license fee paid for the Licensed Product(s).

You shall indemnify and hold DMTI Spatial, its third party supplier(s) and their officers, employees and agents, harmless from and against any claim, demand or action, irrespective of the nature of the claim, demand or action, alleging loss, costs, damages, expenses, or injury (including injury from death) resulting from your authorized or unauthorized, use, possession, modification, or alteration of the Licensed Product(s).

THE LICENSED PRODUCT(S) AND THE ASSOCIATED WRITTEN MATERIALS IN CONNECTION THEREWITH ARE PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING BUT NOT LIMITED TO WARRANTIES OF EFFECTIVENESS, COMPLETENESS, ACCURACY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LICENSED PRODUCT(S) IS WITH YOU, THE END USER. NO ORAL OR WRITTEN ADVICE GIVEN BY DMTI SPATIAL OR ITS DEALERS, DISTRIBUTORS, AGENTS OR EMPLOYEES CREATES A WARRANTY OR IN ANY WAY INCREASES DMTI SPATIAL'S LIABILITY AND YOU MAY NOT RELY ON ANY SUCH INFORMATION OR ADVICE.

No statement or recommendation made or assistance given by DMTI Spatial or by its representatives or employees shall constitute a waiver by DMTI Spatial or

any of the provisions herein. Nor does or will DMTI Spatial warrant any services it may provide in connection with the use of the Licensed product(s), to include any assistance, training, or other consultation with you.

This license is effective until terminated. This license will terminate automatically without notice from DMTI Spatial if you fail to comply with any provision of this License Agreement. Upon termination, you shall destroy or return the Licensed Product(s) including any written materials and all copies of the Licensed Product(s) and any written materials in connection therewith have been destroyed or returned to DMTI Spatial.

This Agreement shall be governed by the laws of the Province of Ontario.

©2007 DMTI Spatial Inc. (except for data licensed from third parties).

DMTI Spatial is an authorized user and distributor of selected Statistics Canada Computer files under Licensing Agreement 6230.

© Copyright, HER MAJESTY THE QUEEN IN RIGHT OF CANADA, as represented by the Minister of Industry, Statistics Canada 1996.

Digital Topographic Data produced under license from Her Majesty the Queen in Right of Canada, with permission of Natural Resources Canada.

### **NAVTEQ Traffic™ End User License Agreement**

Your Garmin product may be equipped to receive traffic data. If it is so equipped, the following terms and conditions apply to your use of your Garmin product.

NAVTEQ North America LLC and/or its affiliates including Traffic.com ("NAVTEQ") holds the rights to the traffic event data ("Traffic Data") and, if you receive RDS/TMC or HD Radio™ Traffic Data, the RDS/TMC

or HD Radio networks through which it is delivered to your Garmin product. By subscribing to, receiving or otherwise accessing the Traffic Data, you acknowledge that you have read this Agreement, that you understand it, that you agree to be bound by the terms and conditions of this Agreement, and that you are at least 18 years of age. If you do not agree to the terms and conditions of this Agreement, decline the subscription or, if the subscription is bundled as part of your Garmin product, return the product within 7 days for a full refund to the dealer from which you purchased the product.

You agree to use the Traffic Data together with your Garmin product solely for personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify, copy, scan, decompile, disassemble or reverse engineer any portion of the Traffic Data, or use any other method to reproduce, duplicate, republish, transmit, or distribute in any way any portion of the Traffic Data. You agree to indemnify,

defend, and hold harmless NAVTEQ (and its affiliates) and Garmin Ltd. (and its subsidiaries) against any and all claims, damages, costs, or other expenses that arise directly or indirectly out of (a) your unauthorized use of the Traffic Data or the RDS/TMC or HD Radio networks, (b) your violation of this Agreement, and/ or (c) any unauthorized or unlawful activities by you in connection herewith.

The Traffic Data is informational only. You assume all risk of use. NAVTEQ (and its affiliates), Garmin Ltd. (and its subsidiaries), and their suppliers make no representations about content, traffic and road conditions, route usability, or speed.

The Traffic Data is provided to you “as is,” and you agree to use it at your own risk. NAVTEQ (and its affiliates) and Garmin Ltd. (and its subsidiaries) make no warranty of fitness or compatibility of the Traffic Data with the Garmin product and no warranty that the Traffic Data will operate properly as integrated and interfaced with

the Garmin product. In addition, NAVTEQ (and its affiliates) and Garmin Ltd. (and its subsidiaries) make no warranty with regard to the reliability, accuracy, exhaustiveness, and completeness of the Traffic Data, which may contain inaccuracies and/or errors from time to time. To the maximum extent permitted by applicable law, any and all warranties of any kind whatsoever with regard to the Traffic Data are hereby expressly waived and excluded, including, but not limited to, those of merchantability, fitness for a particular purpose, accuracy or completeness of the Traffic Data, and/or a lack of viruses.

NAVTEQ (and its affiliates), Garmin Ltd. (and its subsidiaries), and their suppliers disclaim all liability for any loss, injury, or damage resulting from use of or inability to use the Garmin product and the Traffic Data as a result of weather difficulties, the destruction of transmitters and/or broadcasting infrastructures, a natural disaster, and/or a lack of reliability, completeness, or accuracy of

the Traffic Data. In no event shall NAVTEQ (and its affiliates), Garmin Ltd. (and its subsidiaries), and their suppliers be liable to you or any other party for any compensatory, direct, indirect, incidental, special, or consequential damages (including, without limitation, indirect, direct, special, punitive, or exemplary damages for loss of business, loss of profits, business interruption, or loss of business information) arising out of the use of or inability to use the Garmin product or the Traffic Data, even if NAVTEQ or Garmin have been advised of the possibility of such damages.

**Traffic.** If you purchase or your Garmin product is pre-loaded with “lifetime” or “one-time” traffic, you will receive Traffic Data for the useful life of your Garmin traffic receiver (as long as you own a compatible Garmin GPS) or as long as Garmin receives Traffic Data from its third party content supplier, whichever is shorter.

Garmin may terminate your traffic subscription immediately if you violate any of the terms of this Agreement. Your traffic subscription may not be transferred to another person or another Garmin product.

**Governing Law.** The above terms and conditions shall be governed by the laws of the State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois for any and all disputes, claims and actions arising from or in connection with the Traffic Data provided to you hereunder.

**Government End Users.** If the Traffic Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a “commercial item” as that term is

defined at 48 C.F.R. (“FAR”) 2.101, is licensed in accordance with this Agreement, and the Traffic Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following “Notice of Use,” and shall be treated in accordance with such Notice:

### Notice of Use

Contractor (Manufacturer/ Supplier) Name: NAVTEQ

Contractor (Manufacturer/supplier) Address: 425 West Randolph Street, Chicago, Illinois 60606

This Data is a commercial item as defined in FAR 2.101 and is subject to the NAVTEQ Traffic™ End User License Agreement under which this Data was provided.

© 20011 NAVTEQ; © 2011 Traffic.com – All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify NAVTEQ prior to seeking additional or alternative rights in the Traffic Data.

NAVTEQ and Traffic.com are trademarks in the U.S. and other countries. © 2011 NAVTEQ; © 2011 Traffic.com. All rights reserved.

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. This trademark may not be used without the express permission of Garmin. All other company names and trademarks mentioned or referenced in this documentation are the properties of their respective owners. All rights reserved.



## More & Settings

### More Main Menu

The More Main Menu consists of the following options:

- *Settings*

Refer to the Settings information in this section for more details.

- *SiriusXM™ Travel Link*

Refer to the Navigation section in this manual for more details.

### Settings Main Menu



Touch the Settings soft-key to display the list of available settings.

The Setting Main Menu consists of the following options.

- *Display*

Refer to this section for more details.

- *Clock*

Refer to this section for more details.

- *Safety & Driving Assistance*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Lights*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Doors & Locks*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Auto-On Comfort & Remote Start*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Engine Off*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Compass*

Refer to "Understanding Your Instrument Panel", "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

- *Audio*

Refer to this section for more details.

- *Phone/Bluetooth*

Refer to "Understanding The Features Of Your Vehicle", "Uconnect® 8.4" section in your vehicle Owner's Manual on the DVD for details.

- *SiriusXM™ Setup*

Refer to the Radio section in this manual for more details.

## Display

Your Uconnect® display can be customized by following the steps:

1. Press the More soft-key on the bottom of the screen.

2. Then press the Settings soft-key.



3. Press the Display soft-key to enter the Display Menu



4. The Display Menu shows the following options for you to customize your display.

- Display Mode
- Display Brightness with Headlights On
- Display Brightness with Headlights Off
- Set Language
- Units
- Voice Response Length
- Touchscreen Beep
- Navigation Turn-by-Turn Displayed in the Cluster (If Equipped)
- Fuel Saver Displayed in the Cluster (If Equipped)

5. Touch the + or – soft-key to change the Brightness. Or touch the check mark or empty box to change a selection.

**NOTE:** The check-mark indicates the current selection is active.

6. Touch the X soft-key to exit from the Display Menu and Settings.

## Clock Setting

1. Press the More soft-key on the bottom of the screen.
2. Then press the Settings soft-key.



**NOTE:** The Clock Setting Menu can also be accessed by touching the time as it is displayed on the screen.

3. Press the Clock soft-key to enter the Clock Menu.



4. In the Set Time screen, press the + or – soft-keys to adjust the hours or minutes.

5. Other options available:

- Sync with GPS Time
- Time Format
- Show Time in Status Bar

6. Touch the check mark or empty box to change a selection.

**NOTE:** The check-mark indicates the current selection is active.

## Safety Guidelines

Ensure that all persons read this manual carefully before using the radio system. It contains instructions on how to use the system in a safe and effective manner.

### WARNING!

**Please read and follow these precautions. Failure to do so may result in injury or property damage.**

- Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary, pull over at a safe location.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.
- The law in some states prohibits the Front Seat DVD Viewer. As a result, it may be disabled prior to delivery to you. If you move to another state, you should consult your dealer for the proper enable/disable setting for your new state. Currently all states prohibit front seat video viewers except for: Arkansas, Delaware, Georgia, Hawaii, Idaho, Iowa, Kentucky, Mississippi, Missouri, Montana, North Dakota and Ohio.









DODGE

CHRYSLER

Jeep

