



Uconnect® 4.3

Owner's Manual Supplement

TABLE OF CONTENTS

SECTION		PAGE
1	UCONNECT® 4.3 INTRODUCTION	3
2	RADIO MODE	7
3	DISC MODE	19
4	USB/IPOD® MODE	23
5	AUX MODE	27
6	BLUETOOTH® MODE	29
7	MORE & SETTINGS	33
8	SAFETY GUIDELINES	39

Uconnect® 4.3 INTRODUCTION

CONTENTS

■ Uconnect® 4.3 System	4	□ (6) SETTINGS.	6
□ (1) ON/OFF & VOLUME	5	□ (7) MORE.	6
□ (2)(3) CLIMATE CONTROLS	5	□ (8) SCREEN OFF	6
□ (4) PLAYER	5	□ (9) ENTER/BROWSE & TUNE/SCROLL	6
□ (5) RADIO	6	□ (10) CD SLOT.	6

Uconnect® 4.3 System



WARNING!

Driving while distracted can result in loss of vehicle control, accident and injury. Chrysler Group LLC strongly recommends that you use extreme caution when using any device or feature that may take your focus off the road or your hands off the steering wheel. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any handheld device while driving, encourage the use of voice-operated systems when possible and that you become aware of applicable laws that may affect the use of electronic devices while driving.

(1) ON/OFF & VOLUME

Press the ON/OFF button to turn the system ON or OFF. Rotate the rotary knob to adjust the Volume.

NOTE: If the ignition is switched OFF with the radio in standby mode, the radio memorizes the standby mode when the ignition is turned ON again. Press the ON/OFF VOLUME Control to turn the radio ON. It is possible to eject the CD and to display the time if the system is off.

(2)(3) CLIMATE CONTROLS

Manual Climate Controls and Climate Control Hard-key. Refer to Climate Controls in your vehicles Owner's Manual for further details.

(4) PLAYER

Press the PLAYER hard-key to access media sources such as: Disc, USB Device and AUX as long as the requested media is present.

(5) RADIO

Press the RADIO hard-key to enter the Radio Mode. The different tuner modes: AM, FM and SAT can be selected by touching the corresponding soft-keys in the Radio Mode.

(6) SETTINGS

Press the SETTINGS hard-key to access the Settings list. Clock, Display, Audio, Bluetooth® and SiriusXM Settings are described in this manual. See your vehicles Owner's Manual on the DVD for more details.

(7) MORE

Press the MORE hard-key to access additional options. Options available such as: Uconnect® Phone (if equipped) and Compass can be accessed by touching the corresponding soft-key in the More Menu.

(8) SCREEN OFF

Press the SCREEN OFF hard-key to turn the touchscreen OFF. To turn the screen back ON, just touch the screen.

(9) ENTER/BROWSE & TUNE/SCROLL

Press the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

(10) CD SLOT

When inserting a disc, ensure the label is facing up. Press the Eject button to eject the disc.

RADIO MODE

CONTENTS

2

■ Overview	9	□ Seek Down	11
■ Common Radio Functions	9	□ Fast Seek Down	11
□ ON/OFF & Volume Control.	9	□ Direct Tune.	11
□ Enter/Browse & Tune/Scroll Control	10	■ Setting Presets	12
□ Info	10	□ All Presets Button	13
□ Exit	10	□ Return to Main Radio Screen	14
□ Go.	10	■ Audio	14
■ Seek and Direct Tune Functions.	10	■ SiriusXM Satellite Radio Mode — If Equipped . .	15
□ Seek Up	10	□ No Subscription	15
□ Fast Seek Up.	11	□ Acquiring SiriusXM Subscription	15

8 RADIO MODE

- Browse16
- Favorites16
- Gamezone17
- Replay17

Overview



The radio is equipped with the following modes:

- FM
- AM
- SAT SiriusXM Satellite Radio (if equipped)

Touch the Radio hard-key, upper left corner, to enter the Radio Mode. The different tuner modes; AM, FM, and SAT, can then be selected by touching the corresponding soft-keys on the screen.

Common Radio Functions

The following operations offer the same functionality across all Radio Modes, and further instructions are provided where differences exist.

ON/OFF & Volume Control



Push the ON/OFF Volume control knob to turn on the radio. Push the ON/OFF Volume control knob a second time to turn off the radio.

The electronic volume control turns continuously (360 degrees) in either direction, without stopping. Turning the Volume control knob clockwise increases the volume, and counter-clockwise decreases it.

When the audio system is turned on, the sound will be set at the same volume level as last played.

Enter/Browse & Tune/Scroll Control



Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

Info

Press the “Info” button to display channel number/frequency, song title, genre and artist. This feature is only available in FM and SAT modes.

Exit

The Exit button provides a means to close the Direct Tune Screen.

Go

Touch the green GO soft-key to allow you to commit an entry, at which time, the radio will tune to the entered Channel, and close the Direct Tune Screen. The GO soft-key is only for SiriusXM Satellite radio mode.

Seek and Direct Tune Functions

The Seek Up and Down functions are activated by touching the double arrow soft-keys to the right and left of the radio station display, or by pressing the left Steering Wheel Audio Control (if equipped) up or down.

Seek Up

Touch and **release** the Seek Up soft-key to tune the radio to the next listenable station or channel.

During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Up

Touch and **hold** the Seek Up soft-key to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the soft-key is released.

Seek Down

Touch and **release** the Seek Down soft-key to tune the radio to the next listenable station or channel.

During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Down

Touch and **hold** the Seek Down soft-key to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the soft-key is released.

Direct Tune



The Direct Tune soft-key screen is available in AM, FM, and SAT radio modes and can be used to direct tune the radio to a desired station or channel. Press the Tune soft-key located at the bottom of the radio screen.

12 RADIO MODE

Press the available number soft-key to begin selecting a desired station. Once a number has been entered, any numbers that are no longer possible (stations that cannot be reached) will become deactivated/grayed out.

If you accidentally entered the wrong station number, touch the Delete (X) soft-key to clear the radio station numbers and reenter the correct station number.

Once the last digit of a station has been entered, the DIRECT TUNE screen will close and the system will automatically tune to that station.

The selected Station or Channel number is displayed in the Direct Tune text box.

Setting Presets



The Presets are available for all Radio Modes, and are activated by touching any of the four Preset soft keys, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and **hold** the desired numbered soft-key for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. A set of four presets are visible at the top of the radio screen.

All Presets Button



Touching the "all" soft-key on the radio home screen will display all of the preset stations for that mode.

Return to Main Radio Screen

You can return to the Main Radio Screen by either touching the Exit soft-key, or by pressing the Radio hard-key.

Audio

1. Press the SETTINGS hard-key on the right side of the unit.
2. Scroll down and press the Audio soft-key to enter the Audio menu.
3. The Audio Menu shows the following options for you to customize your audio settings.

Equalizer

Touch the Equalizer soft-key to adjust the Bass, Mid and Treble. Use the + or - soft-key to adjust the equalizer to your desired settings. Press the back arrow soft-key when done.

Balance/Fade

Touch the Balance/Fade soft-key to adjust the sound from the speakers. Use the arrow soft-key to adjust the sound level from the front and rear or right and left side speakers. Touch the Center "C" soft-key to reset the balance and fade to the factory setting. Press the back arrow soft-key when done.

Speed Adjusted Volume

Touch the Speed Adjusted Volume soft-key to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the back arrow soft-key when done.

4. Touch the Exit soft-key to exit from the Audio Menu.

SiriusXM Satellite Radio Mode — If Equipped

SiriusXM services require a subscription, sold separately after the 12-month trial period included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 to cancel.**

See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2014 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

This functionality is only available for radios equipped with a Satellite receiver. To receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you might have to change the vehicle's position to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

No Subscription

Radios equipped with a Satellite receiver, require a subscription to the SiriusXM Service. When the Radio does not have the necessary subscription, the Radio is able to receive the Preview channel only.

Acquiring SiriusXM Subscription

To activate the SiriusXM subscription, call the toll free number on the SiriusXM Settings. You will need to provide the Sirius ID (ESN) located on your vehicle's screen.

The satellite mode is activated by touching the AM/SAT soft-key located at the bottom of the radio screen. Touch the AM/SAT soft-key and then touch the SAT soft-key.

When in SiriusXM Satellite mode:

- The SiriusXM Presets are displayed at the top of the screen.
- The SiriusXM Channel Number is displayed along with Artist and Song name.
- The SiriusXM function soft-keys are displayed on the bottom.

In addition to the tuning functions common to all Radio modes, the browse, info, and more hard-key functions are available in SiriusXM Mode. Touching the more button slides over the additional functions that are on the second

level of the bottom bar. This second level stays for 10 seconds and then returns to the main top level of the bottom bar. The second level displays audio, fav, gamezone and replay buttons.

Browse

Touch the browse soft-key at the bottom left of the screen to enter the Browse screen.

The Browse screen in SAT mode provides you the ability to browse by All, Favorites or Genres. You can also access Gamezone, and Traffic and Weather settings in the Browse screen.

Favorites

Touch the more... soft-key and then the fav soft-key to access the favorites feature.

The favorites feature enables you to set a favorite artist, or song. The Radio then uses this information to alert you when either the favorite song, or works by the favorite artist are being played at any time by any of the SiriusXM Channels.

Gamezone

Touch the more... soft-key and then the gamezone soft-key to access the gamezone feature. This feature provides you with the ability to Select teams, edit the selection, and set Alerts.

Replay

The replay function provides a means to store and replay up to 22 minutes of music audio and 48 minutes of talk radio. Once the channel is switched, content in replay memory is lost.

Touch the replay soft-key. The play/pause, rewind/forward and live soft-keys will display at the top of the screen, along with the replay time.

You can exit by touching the replay soft-key, any time during the Replay mode.

Play/Pause

Touch the Pause or Play soft-key to pause playing of the content at any time that the content is playing live or rewound content. Play can be resumed again by touching of the Pause/Play soft-key.

Rewind

Touch the RW soft-key to rewind the content in steps of five seconds. Touching the RW soft-key for more than two seconds rewinds the content. The Radio begins playing the content at the point at which the touch is released.

Forward

Each touch of the FW soft-key forwards the content in steps of five seconds. Forwarding of the content can only be done when the content is previously rewound, and therefore, can not be done for live content. A continuous touch of the FW soft-key also forwards the content. The Radio begins playing the content at the point at which the touch is release.

Live

Touch the Live soft-key to resume playing Live content.

DISC MODE

CONTENTS

■ Overview20	■ Browse21
□ Inserting Compact Disc20	■ Source.22
□ EJECT Button — Ejecting a Disc21	■ Info22
■ Seek Up/Down21	■ Shuffle22
□ Fast Seek Up.21	■ Audio22
□ Fast Seek Down21		

Overview

Disc Mode is entered by either inserting a Disc or by touching the Player hard-key located left of the display. Once in Player Mode, touch the source soft-key and select Disc.

A “No Disc” message will be displayed on the screen in the Disc mode when a Disc is not present in the Radio.

Inserting Compact Disc

Gently insert one Disc into the Disc player with the Disc label facing up. The CD will automatically be pulled into the Disc player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 in (2.5 cm), a disc may already be loaded and must be ejected before a new disc can be loaded.

If you insert a disc with the ignition ON and the radio ON, the unit will switch to Disc mode and begin to play the disc. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

CAUTION!

- **This CD player will accept 4-3/4 in (12 cm) discs only. The use of other sized discs may damage the CD player mechanism.**
- **Do not use adhesive labels. These labels can peel away and jam the player mechanism.**
- **Uconnect® is a single CD player. Do not attempt to insert a second CD if one is already loaded.**
- **Dual-media disc types (one side is a DVD, the other side is a CD) should not be used, and they can cause damage to the player.**

EJECT Button — Ejecting a Disc



Press the EJECT button to eject the Disc.

If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A disc can be ejected with the radio and ignition OFF.

Seek Up/Down

Touch and **release** the right arrow soft-key for the next selection on the Disc. Touch and **release** the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc is within the first eight seconds of the current selection.

Fast Seek Up

Touch and **hold** the right arrow soft-key and the Disc player will begin to fast forward through the current track until the soft-key is released.

Fast Seek Down

Touch and **hold** the left arrow soft-key and the Disc player will begin to rewind through the current track until the soft-key is released.

Browse

Touch the browse soft-key to scroll through and select a desired track on the Disc. Touch the exit soft-key if you wish to cancel the browse function.

Source

Touch the Source soft-key to select the desired audio source, CD, AUX or USB. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Info

Touch the Info soft-key to display the current track information. Touch the "X" soft-key to cancel this feature.

Shuffle

Touch the more... soft-key then the shuffle soft-key to play the selections on the compact disc in random order to provide an interesting change of pace. Touch the soft-key a second time to turn this feature off.

Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

USB/iPod® MODE

CONTENTS

■ Overview24	■ Source.25
□ Inserting USB/iPod® Device24	■ Info25
■ Seek Up/Down24	■ Shuffle25
□ Fast Seek Up.24	■ Audio25
□ Fast Seek Down24		
■ Browse24		

Overview

USB/iPod® Mode is entered by either inserting a USB Jump Drive or an iPod® cable into the USB port, or by touching the Player hard-key located left of the display. Once in Player Mode, touch the source soft-key and select USB/iPod®.

Inserting USB/iPod® Device

Gently insert the USB/iPod® device into the USB Port. If you insert a USB/iPod® device into the USB port, with the ignition ON and the radio ON, the unit will switch to USB/iPod® mode and begin to play. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

Seek Up/Down

Touch and **release** the right arrow soft-key for the next selection on the USB/iPod® device. Touch and **release** the left arrow soft-key to return to the beginning of the

current selection, or return to the beginning of the previous selection if the USB/iPod® device is within the first eight seconds of the current selection.

Fast Seek Up

Touch and **hold** the right arrow soft-key and the USB/iPod® device will begin to fast forward through the current track until the soft-key is released.

Fast Seek Down

Touch and **hold** the left arrow soft-key and the USB/iPod® device will begin to rewind through the current track until the soft-key is released.

Browse

Touch the Browse soft-key to select Artist, Albums, Genres, Songs, Playlists or Folders from the USB/iPod® device. Once the desired selection is made you can chose from the

available media by touching the soft-key. Touch the exit soft-key if you wish to cancel the browse function.

Source

Touch the Source soft-key to select the desired audio source, CD, AUX or USB/iPod®. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Info

Touch the Info soft-key to display the current track information. Touch the "X" soft-key to cancel this feature.

Shuffle

Touch the more... soft-key then the shuffle soft-key to play the selections on the USB/iPod® device in random order to provide an interesting change of pace. Touch the shuffle soft-key a second time to turn this feature off.

Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

AUX MODE

CONTENTS

■ Overview28	■ Source.28
□ Inserting Auxiliary Device28	■ Audio28
□ Controlling The Auxiliary Device28		

Overview

AUX Mode is entered by inserting a AUX device using a cable with a 3.5 mm audio jack into the AUX port or by touching the Player hard-key located left of the display. Once in Player Mode, touch the source soft-key and select AUX.

Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you connect an Auxiliary device with a 3.5mm stereo cable into the AUX Port, with the ignition ON and the radio ON, the unit will switch to AUX mode and begin to play.

Controlling The Auxiliary Device

The control of the auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the

radio; use the device controls instead. Adjust the volume with the ON/OFF VOLUME rotary knob, or with the volume of the attached device.

NOTE: The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

Source

Touch the Source soft-key to select the desired audio source, CD, AUX or USB. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

Bluetooth® MODE

CONTENTS

■ Overview30	■ Source.31
■ Seek Up/Down30	■ Info31
□ Fast Seek Up.30	■ Audio31
□ Fast Seek Down30		

Overview

Bluetooth® Streaming Audio (BTSA) or Bluetooth® Mode is entered by pairing a Bluetooth® device, containing music, to the Uconnect® System.

Before proceeding, the Bluetooth® device needs to be paired through Uconnect® to communicate with the Uconnect® System.

NOTE: See the pairing procedure in the Owner's Manual on the DVD for more details.

Once the Bluetooth® device is paired to the Uconnect® System, touch the Player hard-key located on the left side of the display. Once in Player Mode, touch the source soft-key and select Bluetooth®.

Seek Up/Down

Touch and **release** the right arrow soft-key for the next selection on the Bluetooth® device. Touch and **release** the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the Bluetooth® device is within the first eight seconds of the current selection.

Fast Seek Up

Touch and **hold** the right arrow soft-key and the Bluetooth® device will begin to fast forward through the current track until the soft-key is released.

Fast Seek Down

Touch and **hold** the left arrow soft-key and the Bluetooth® device will begin to rewind through the current track until the soft-key is released.

Source

Touch the Source soft-key to select the desired audio source; CD, USB/iPod®, AUX or Bluetooth®. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Info

Touch the Info soft-key to display the current track information. Touch the Info soft-key a second time to cancel this feature.

Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

MORE & SETTINGS

CONTENTS

■ More Main Menu34	□ Safety/Assistance35
□ Economy — If Equipped34	□ Lights36
□ Phone34	□ Doors & Locks36
□ Outlet — If Equipped34	□ Heated Seats36
□ Time34	□ Engine Off Options36
□ Compass34	□ Compass Settings36
■ Clock Setting34	□ Audio36
■ Settings Main Menu35	□ Phone/Bluetooth®36
□ Display35	□ SiriusXM Setup36
□ Clock35	■ Display37

More Main Menu

Press the More hard-key to display the More Main Menu. The More Main Menu contains the following options:

Economy — If Equipped

Refer to "Understanding Your Instrument Panel," "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

Phone

Refer to "Understanding The Features Of Your Vehicle," "Uconnect® 4.3" section in your vehicle Owner's Manual on the DVD for details.

Outlet — If Equipped

Refer to "Understanding The Features Of Your Vehicle," "Power Inverter" section in your vehicle Owner's Manual on the DVD for details.

Time

Refer to this section for details.

Compass

Refer to "Understanding Your Instrument Panel," "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

Clock Setting

1. Press the More hard-key on the right side of the display, then press the Time soft-key. Next, press the Set soft-key.

Or,

Press the Settings hard-key on the right side of the display, then press the Clock soft-key.

The Time setting screen is displayed and the clock can be adjusted as described in the following procedure.

2. Touch the Up or Down arrows to adjust the hours or minutes, next select the AM or PM soft-key. You can also select 12hr or 24hr format by touching the desired soft-key.



3. Once the time is set press the "Done" soft-key to exit the time screen.

Settings Main Menu

Press the Settings hard-key to display the Settings Main Menu. The Settings Main Menu contains the following options:

Display

Refer to this section for details.

Clock

Refer to this section for details.

Safety/Assistance

Refer to "Understanding Your Instrument Panel," "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

Lights

Refer to "Understanding Your Instrument Panel," "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

Doors & Locks

Refer to "Understanding Your Instrument Panel," "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

Heated Seats

Refer to "Understanding The Features Of Your Vehicle," "Seats" section in your vehicle Owner's Manual on the DVD for details.

Engine Off Options

Refer to "Understanding Your Instrument Panel," "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

Compass Settings

Refer to "Understanding Your Instrument Panel," "Uconnect® System" section in your vehicle Owner's Manual on the DVD for details.

Audio

Refer to the Operating Instructions – Radio section in this manual for details.

Phone/Bluetooth®

Refer to "Understanding The Features Of Your Vehicle," "Uconnect® 4.3" section in your vehicle Owner's Manual on the DVD for details.

SiriusXM Setup

Refer to the Operating Instructions – Radio section in this manual for details.

Display

Your Uconnect® display can be customized by following the steps:

1. Press the SETTINGS hard-key on the right side of the display.



2. Then press the Display soft-key.

3. The Display Menu shows the following options for you to customize your display.

Brightness

Touch the Brightness soft-key and use the + or - soft-keys to adjust the brightness of the display screen with the headlights on or off. Press the back arrow soft-key when done.

Mode

Touch the Mode soft-key to adjust the display screen brightness for Day, Night or Auto selection. Press the back arrow soft-key when done.

Language

Touch the Language soft-key to select between English, French or Spanish. Press the back arrow soft-key when done.

Units

Touch the Units soft-key to select between U.S. and Metric units of measure. Press the back arrow soft-key when done.

Touchscreen Beep

Touch the Touchscreen Beep soft-key to turn the ON or OFF the sound heard when a screen soft-key is pressed. Press the back arrow soft-key when done.

4. Touch the Exit soft-key to exit from the Display Menu.

SAFETY GUIDELINES

CONTENTS

■ Safety Guidelines40	□ Disc Drive41
□ Safe Usage Of The Uconnect® System.40	□ FCC Declaration41
□ Touchscreen41	□ Safety Information.42

Safety Guidelines

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect® features and applications in this vehicle. Only use Uconnect® when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Ensure all persons read this manual carefully before using the system. It contains instructions on how to use the system in a safe and effective manner.

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at the screen only when safe to do so. If prolonged viewing of the screen is required, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Ensure the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

Safe Usage Of The Uconnect® System

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Your system is a sophisticated electronic device. Do not let young children use your system.

- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.
- Keep drinks, rain and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.
- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

NOTE: Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

Touchscreen

- Do not press the touchscreen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.

Disc Drive

- Do not insert any damaged, warped, scratched or dirty Discs into the Disc Player.
- Discs that have been modified with an adhesive label should not be used in the Disc Player.
- Do not insert more than one Disc at a time into the drive slot.

FCC Declaration

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1)

this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio technician for help.

Safety Information

Exposure To Radio Frequency Radiation

The radiated output power of the this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 20 cm (200 mm) or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.



14UC43-526-AD
Fourth Edition
Uconnect® 4.3

Chrysler Group LLC
Printed in the USA



DODGE



Jeep

