



**Uconnect 5.0**

# Owner's Manual Supplement

# TABLE OF CONTENTS

SECTION		PAGE
<b>1</b>	SAFETY GUIDELINES .....	3
<b>2</b>	IDENTIFYING YOUR RADIO .....	9
<b>3</b>	RADIO MODE .....	15
<b>4</b>	MEDIA MODE .....	23
<b>5</b>	UCONNECT PHONE .....	31
<b>6</b>	UCONNECT 5.0 VOICE RECOGNITION QUICK TIPS .....	39
<b>7</b>	UCONNECT SETTINGS .....	49
<b>8</b>	MORE BUTTON .....	75



# SAFETY GUIDELINES

## CONTENTS

---

■ SAFE USAGE OF THE UCONNECT SYSTEM . . . .4	□ FCC Declaration . . . . .5
□ Touchscreen . . . . .4	□ Information About Radio Frequency Radiation . .6
□ Disc Player. . . . .5	■ CYBERSECURITY . . . . .6

### SAFE USAGE OF THE UCONNECT SYSTEM

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.
- Keep drinks, rain and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

**NOTE:** Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

### Touchscreen

- **Do NOT attach any object to the touchscreen, doing so can result in damage to the touchscreen.**
- Do not press the touchscreen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.
- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

## Disc Player

- Do not insert any damaged, warped, scratched or dirty discs into the Disc Player.
- Discs that have been modified with an adhesive label should not be used in the Disc Player.
- Do not insert more than one disc at a time into the drive slot.

## FCC Declaration

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio technician for help.

## **Information About Radio Frequency Radiation**

### **Exposure To Radio Frequency Radiation**

The radiated output power of the this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 20 cm (200 mm) or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.

## **CYBERSECURITY**

Your vehicle may be a connected vehicle and may be equipped with both wired and wireless networks. These networks allow your vehicle to send and receive information. This information allows systems and features in your vehicle to function properly.

Your vehicle may be equipped with certain security features to reduce the risk of unauthorized and unlawful access to vehicle systems and wireless communications. Vehicle software technology continues to evolve over time and FCA US LLC, working with its suppliers, evaluates and takes appropriate steps as needed. Similar to a computer or other devices, your vehicle may require software updates to improve the usability and performance of your systems or to reduce the potential risk of unauthorized and unlawful access to your vehicle systems.

The risk of unauthorized and unlawful access to your vehicle systems may still exist, even if the most recent version of vehicle software (such as Uconnect software) is installed.

**WARNING!**

- It is not possible to know or to predict all of the possible outcomes if your vehicle's systems are breached. It may be possible that vehicle systems, including safety related systems, could be impaired or a loss of vehicle control could occur that may result in an accident involving serious injury or death.
- ONLY insert media (e.g., USB, SD card, or CD) into your vehicle if it came from a trusted source. Media of unknown origin could possibly contain malicious software, and if installed in your vehicle, it may increase the possibility for vehicle systems to be breached.

*(Continued)*

**WARNING! (Continued)**

- As always, if you experience unusual vehicle behavior, take your vehicle to your nearest authorized dealer immediately.

**NOTE:**

- FCA or your dealer may contact you directly regarding software updates.
- To help further improve vehicle security and minimize the potential risk of a security breach, vehicle owners should:
  - Routinely check [www.driveuconnect.com/software-update](http://www.driveuconnect.com/software-update) to learn about available Uconnect software updates.
  - Only connect and use trusted media devices (e.g. personal mobile phones, USBs, CDs).



## 8 SAFETY GUIDELINES

---

Privacy of any wireless and wired communications cannot be assured. Third parties may unlawfully intercept information and private communications without your consent. For further information, refer to “Onboard Diagnostic System (OBD II) Cybersecurity” in “Maintaining Your Vehicle” in your Owner’s Manual on the DVD.

# IDENTIFYING YOUR RADIO

## CONTENTS

---

2

■ IDENTIFYING YOUR RADIO . . . . .	10	□ Uconnect 5.0 System w/o Integrated Center Stack . . . . .	12
□ Uconnect 5.0 System With Integrated Center Stack . . . . .	11		

## IDENTIFYING YOUR RADIO

### Uconnect 5.0 w/Integrated Center Stack



### Uconnect 5.0 w/o Integrated Center Stack



#### Key Features:

- 5" Touchscreen
- Three buttons on either side of the display
- Hands-free/Bluetooth
- SiriusXM Satellite Radio (If Equipped)

## Uconnect 5.0 System With Integrated Center Stack



### 1 — RADIO

Push the RADIO button on the faceplate to enter Radio Mode. The different tuner modes; AM, FM and SXM (if equipped), can be selected by pressing the corresponding buttons on the touchscreen in Radio Mode.

### 2 — COMPASS

Push the COMPASS button on the faceplate to display the current direction of the vehicle.

### 3 — CLIMATE

Push the CLIMATE button on the faceplate to access the Climate Controls.

### 4 — MORE <sup>+</sup>

Push the MORE <sup>+</sup> button on the faceplate to access additional options.

### 5 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

## 12 IDENTIFYING YOUR RADIO

### 6 — BACK

Push the BACK button to return to a previous menu or screen.

### 7 — SCREEN OFF

Push the SCREEN OFF button to turn the touchscreen OFF. To turn the touchscreen back ON, just press the screen.

### 8 — VOLUME/MUTE

Rotate the knob to adjust the Volume. Push the VOLUME/MUTE button to mute the system.

### 9 — PHONE

Push the PHONE button on the faceplate to access the Uconnect Phone feature.

### 10 — MEDIA

Pushing the MEDIA button on the faceplate will allow you to switch to Media mode (USB/iPOD, AUX, SD Card, Bluetooth and CD — if equipped).

## Uconnect 5.0 System w/o Integrated Center Stack



### 1 — RADIO

Push the RADIO button on the faceplate to enter Radio Mode. The different tuner modes; AM, FM and SXM (if equipped), can be selected by pressing the corresponding buttons on the touchscreen in Radio Mode.

## 2 — COMPASS

Push the COMPASS button on the faceplate to display the current direction of the vehicle.

## 3 — SETTINGS

Push the SETTINGS button on the faceplate to display the customer programmable features.

## 4 — MORE <sup>+</sup><sub>MORE</sub>

Push the MORE <sup>+</sup><sub>MORE</sub> button on the faceplate to access additional options.

## 5 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

## 6 — BACK

Push the BACK button to return to a previous menu or screen.

## 7 — SCREEN OFF

Push the SCREEN OFF button to turn the touchscreen OFF. To turn the touchscreen back ON, just press the screen.

## 8 — VOLUME/MUTE

Rotate the rotary knob to adjust the Volume. Push the VOLUME/MUTE button to mute the system.

## 9 — PHONE

Push the PHONE button on the faceplate to access the Uconnect Phone feature.

## 10 — MEDIA

Pushing the MEDIA button on the faceplate will allow you to switch to Media mode (USB/iPOD, AUX, SD Card, Bluetooth and CD — if equipped).

# RADIO MODE

 
## CONTENTS

---

■ RADIO MODE OPERATION. . . . .	.16	□ SiriusXM Satellite Radio Mode — If Equipped . .18
□ Volume/Mute. . . . .	.16	□ SiriusXM All Access Package . . . . .18
□ Enter/Browse & Tune/Scroll Control . . . . .	.16	□ Audio . . . . .20
□ Seek Functions . . . . .	.17	□ Clock Setting . . . . .21
□ Setting Presets. . . . .	.18	



## RADIO MODE OPERATION

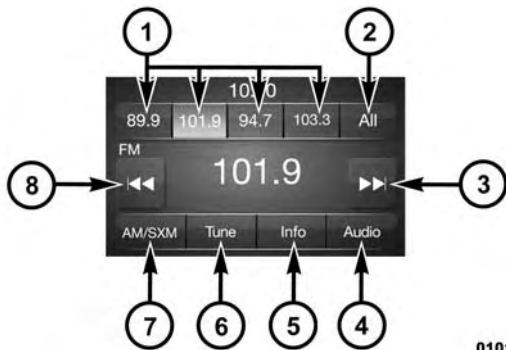

0101073162

- 1 — Station Presets
- 2 — All Presets
- 3 — SEEK Up▶▶
- 4 — Audio

- 5 — Info
- 6 — Tune
- 7 — AM/FM/SXM
- 8 — SEEK Down◀◀

Push the RADIO button on the faceplate to enter Radio Mode. The different tuner modes; AM, FM, and SXM, can then be selected by pressing the corresponding button on the touchscreen in the Radio mode.

### Volume/Mute

Rotate the VOLUME/MUTE rotary knob to adjust the Volume. When the audio system is turned on, the sound will be set at the same volume level as last played.

Push the VOLUME/MUTE button to mute the system. Push the VOLUME/MUTE button again to unmute the system.

### Enter/Browse & Tune/Scroll Control

Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

## Seek Functions

### Seek Up▶▶

Press and release the “Seek Up” ▶▶ button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

### Fast Seek Up▶▶

Press and hold the “Seek Up” ▶▶ button on the touchscreen to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

### Seek Down◀◀

Press and release the “Seek Down” ◀◀ button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

### Fast Seek Down◀◀

Press and hold the “Seek Down” ◀◀ button on the touchscreen to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

## Setting Presets

The Presets are available for all Radio Modes, and are activated by pressing any of the four “Preset” buttons on the touchscreen, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered button on the touchscreen for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. Four presets are visible at the top of the radio screen.

Pressing the “All” button on the touchscreen will display all of the preset stations for that mode.

## SiriusXM Satellite Radio Mode — If Equipped

SiriusXM Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear, coast to coast radio content. SiriusXM is a subscription based service.

### SiriusXM All Access Package

All satellite radio equipped vehicles come with a one year trial to the Sirius All Access package, providing over 160 channels of the best programming for all the places life takes you.

- In your vehicle — You’ll get every channel available on your radio, including all the premium programming like Howard Stern, every NFL game, every MLB game, every NASCAR race, Oprah Radio and more.
- On the go — With a SiriusXM Internet Radio subscription included with the All Access trial, you’ll get SiriusXM on your computer, smartphone, or tablet.

Including:

- A huge On Demand catalog.
- Xtra Channels featuring SiriusXM Latino — A collection of Spanish-language channels.
- MySXM — Allowing you to personalize your favorite music channels.


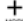

Go to [www.siriusxm.com/getallaccess](http://www.siriusxm.com/getallaccess) for more information. SiriusXM services require subscriptions, sold separately after the 12-month trial included with your new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 to cancel.** See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). All fees and programming subject to change. Our satellite service is

available only to those at least 18 and older in the 48 contiguous USA and D.C. Our SiriusXM satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2015 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. Service available in Canada; see [www.siriusxm.ca](http://www.siriusxm.ca).






This functionality is only available for radios equipped with a Satellite receiver. To receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the touchscreen shows “Acquiring Signal”, you may have to change the vehicle’s position to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

## Audio

1. Push the SETTINGS  button on the right side of the radio faceplate. If the settings button is not present, push the MORE  button on the faceplate then the “Settings  button” button on the touchscreen.
2. Scroll down and press the “Audio” button on the touchscreen to open the Audio menu.
3. The Audio Menu shows the following options for you to customize your audio settings:
  - **Equalizer** — Press the “Equalizer” button on the touchscreen to adjust the Bass, Mid and Treble. Use the “+” or “-” buttons on the touchscreen to adjust the equalizer to your desired settings. Press the “Back Arrow” button on the touchscreen when done.
  - **Balance/Fade** — Press the “Balance/Fade” button on the touchscreen to adjust the sound from the speakers. Use the “arrow” button on the touchscreen to adjust the sound level from the front and rear or right and left side speakers. Press the Center “C” button on the touchscreen to reset the balance and fade to the factory setting. Press the “Back Arrow” button on the touchscreen when done.
  - **Speed Adjustable** — Press the “Speed Adjusted Volume” button on the touchscreen to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the “Back Arrow” button on the touchscreen when done.
  - **Loudness** — Press the “Loudness” button on the touchscreen to select the Loudness feature. When this feature is activated it improves sound quality at lower volumes.

## Clock Setting

1. Push the SETTINGS  button on the right side of the radio faceplate. If the settings button is not present, push the MORE  button on the faceplate then the "Settings  button" button on the touchscreen.
2. Select the "Clock and Date" button on the touchscreen.
3. Next, select "Set Time" to change the time.
4. Select "Set Date" to change the date.
5. To set the time, select the "Seek Up"  or "Seek Down"  arrows as appropriate. Select "12 hrs vs 24 hrs", "AM" or "PM" or select the "Time Zones" (if equipped).
6. Select "Done" when complete.



# MEDIA MODE

 
## CONTENTS

---

■ MEDIA MODE OPERATION. . . . .	.24	□ USB/iPod Mode . . . . .	.27
□ Common Media Functions . . . . .	.25	□ AUX Mode . . . . .	.28
□ Disc Mode — If Equipped . . . . .	.26	□ Bluetooth Mode . . . . .	.29



## MEDIA MODE OPERATION

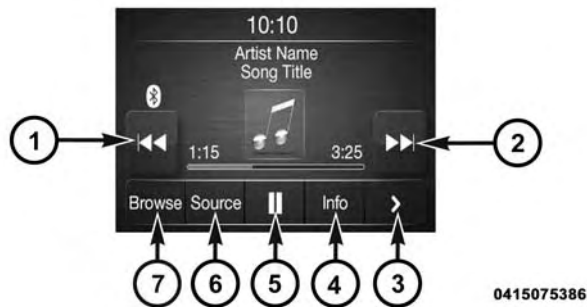

1 — SEEK Down◀◀

2 — SEEK Up▶▶

3 — Additional Functions

4 — Info

5 — Pause/Play

6 — Source

7 — Browse

Media Mode is entered by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and the desired mode button on the touchscreen. Disc (if equipped), USB, SD Card (if equipped), AUX and Bluetooth (if equipped), are the Media sources available. When available, you can select the “Browse” button on the touchscreen to be given these options:

- Now Playing
- Artists
- Albums
- Genres
- Songs
- Playlists
- Folders

You can press the “Source,” “Pause/Play” or the “Info” button on the touchscreen for artist information on the current song playing.

## Common Media Functions

### Seek Up ▶▶/Seek Down◀◀

Press and release the “Right Arrow” ▶▶ button on the touchscreen for the next selection. Press and release the “Left Arrow” ◀◀ button on the touchscreen to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc is within the first second of the current selection.

### Fast Seek Up▶▶

Press and hold the “Right Arrow” ▶▶ button on the touchscreen and the desired mode will begin to fast forward through the current track until the button on the touchscreen is released.

### Fast Seek Down◀◀

Press and hold the “Left Arrow” ◀◀ button on the touchscreen and the desired mode will begin to rewind through the current track until the button on the touchscreen is released.

### Source

Press the “Source” button on the touchscreen to select the desired audio source: Disc (if equipped), USB, SD (if equipped), AUX and Bluetooth (if equipped). This screen will time out after a few seconds and return to the main radio screen if no selection is made.

### Info

Press the “Info” button on the touchscreen to display the current track information. Press the “X” button on the touchscreen to cancel this feature.

## Shuffle

Press the “Shuffle” button on the touchscreen to play the selections on the USB/iPod device in random order to provide an interesting change of pace. Press the “Shuffle” button on the touchscreen a second time to turn this feature off.

## Audio

Refer to “Operating Instructions — Radio Mode” for adjusting the audio settings.

## Repeat

Press the “Repeat” button on the touchscreen to repeat the song selection. To cancel repeat, press the “Repeat” button on the touchscreen a second time.

## Disc Mode — If Equipped

Your vehicle may have a remote Disc player located in the center console storage bin.

Disc Mode is entered by either inserting a CD/Disc or by pushing the MEDIA button on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “Disc.”

## Inserting Compact Disc

Gently insert one Disc into the Disc player with the Disc label following the illustration indicated on the player. The Disc will automatically be pulled into the Disc player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 inch (2.5 cm), a Disc may already be loaded and must be ejected before a new Disc can be loaded.

If you insert a Disc with the ignition ON and the radio ON, the unit will switch to Disc mode and begin to play when you insert the Disc. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

### **Browse**

Press the “Browse” button on the touchscreen to scroll through and select a desired track on the Disc. Press the “Exit” button on the touchscreen if you wish to cancel the browse function.

### **Eject Button — Ejecting a Disc**

Push the EJECT button to eject the Disc. If you have ejected a Disc and have not removed it within 10 seconds, it will be reloaded. If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A Disc can be ejected with the radio and ignition OFF.

### **USB/iPod Mode**

USB/iPod Mode is entered by either inserting a USB Jump Drive or iPod cable into the USB port, or by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “USB/iPod.”

### **Inserting USB/iPod Device**

Gently insert the USB/iPod device into the USB Port. If you insert a USB/iPod device with the ignition ON, the unit will switch to USB/iPod mode and begin to play when you insert the device. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

## Browse

Press the “Browse” button on the touchscreen to select Artist, Albums, Genres, Songs, Playlists or Folders from the USB/iPod device. Once the desired selection is made you can chose from the available media by pressing the button on the touchscreen. Press the “Exit” button on the touchscreen if you wish to cancel the browse function.

## AUX Mode

AUX Mode is entered by inserting a AUX device using a stereo cable with a 3.5 mm audio jack into the AUX port, or by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “AUX.”

## Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert a Auxiliary device with the ignition ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

## Controlling The Auxiliary Device

The control of the Auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the VOLUME/MUTE rotary knob, or with the volume of the attached device.

The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

## Bluetooth Mode

Bluetooth Streaming Audio (BTSA) or Bluetooth Mode is entered by pairing a Bluetooth device containing music to the Uconnect system.

Before proceeding, the Bluetooth device must be paired with the Uconnect Phone to communicate with the Uconnect system.

See the “Pairing Procedure” in this manual for further details.

Once the Bluetooth device is paired to the Uconnect system, push the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “Bluetooth.”

**NOTE:** For mobile phone compatibility and pairing instructions, please visit [UconnectPhone.com](http://UconnectPhone.com).



# UCONNECT PHONE

## CONTENTS

 
---

■ UCONNECT PHONE OPERATION . . . . .	.32	□ Receiving A Call — Accept (And End) . . . . .	.36
□ Pairing A Phone . . . . .	.33	□ Mute (Or Unmute) Microphone During Call . . .	.36
□ Phonebook Download — Phonebook Transfer From Mobile Phone . . . . .	.35	□ Transfer Ongoing Call Between Handset And Vehicle . . . . .	.36
□ Making A Phone Call . . . . .	.36	□ Changing The Volume . . . . .	.37



**WARNING!**

**ALWAYS** drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

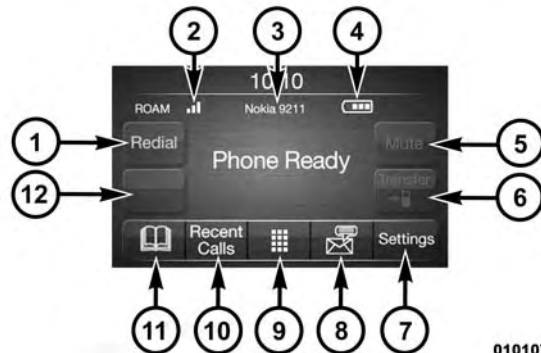**UCONNECT PHONE OPERATION**

0101073167

1 — Call/Redial/Hold  
 2 — Phone Signal Strength  
 3 — Paired Phone  
 4 — Phone Battery Life  
 5 — Mute Microphone  
 6 — Transfer To/From  
 Uconnect System

7 — Uconnect Phone Settings  
 8 — Text Messaging  
 9 — Direct Dial Pad  
 10 — Recent Call Log  
 11 — Browse Phone Book  
 (Contains 911)  
 12 — End Call

The Uconnect Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).

The Uconnect Phone allows you to dial a phone number with your mobile phone using simple voice commands.

**NOTE:** The Uconnect Phone requires a mobile phone equipped with the Bluetooth Hands-Free Profile. To check mobile phone compatibility please visit [UconnectPhone.com](http://UconnectPhone.com).

For Uconnect customer support:

- U.S. residents - visit [UconnectPhone.com](http://UconnectPhone.com) or call 1-877-855-8400
- Canadian residents - call 1-800-465-2001 (English) or 1-800-387-9983 (French)

## Pairing A Phone

To begin using your Uconnect Phone, you must pair your compatible Bluetooth enabled mobile phone. Mobile phone pairing is the process of establishing a wireless connection between a cellular phone and the Uconnect system.

To complete the pairing process, you will need to reference your mobile phone Owner's Manual. Please visit [UconnectPhone.com](http://UconnectPhone.com) for complete mobile phone compatibility information.

### NOTE:

- You must have Bluetooth enabled on your phone to complete this procedure.
  - The vehicle must be in PARK.
1. Place the ignition in the ACC or ON position.
  2. Push the PHONE button on the faceplate.

### 34 UCONNECT PHONE

- If there is no phones currently connected with the system, a pop-up will appear asking if you would like to pair a mobile phone.
3. Select “Yes” to begin the pairing process.
  4. Search for available devices on your Bluetooth enabled mobile phone.
    - Press the Settings button on your mobile phone.
    - Select Bluetooth and ensure it is enabled. Once enabled, the mobile phone will begin to search for Bluetooth connections.
  5. If No is selected, and you still would like to pair a mobile phone, press the “Settings” button from the Uconnect Phone main screen.
    - Select “Paired Phones” then press the “Add Device” button on the touchscreen.
    - Search for available devices on your Bluetooth enabled mobile phone (see below). When prompted on the phone, select “Uconnect” and accept the connection request.
  6. Uconnect Phone will display an in progress screen while the system is connecting.
  7. When your mobile phone finds the Uconnect system, select “Uconnect.”
  8. When prompted on the mobile phone, accept the connection request from Uconnect Phone.
- NOTE:** Some mobile phones will require you to enter the PIN number.

9. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting “Yes” will make this phone the highest priority. This phone will take precedence over other paired phones within range and will connect to the Uconnect system automatically when entering the vehicle. Only one mobile phone and/or one Bluetooth audio device can be connected to the Uconnect system at a time. If “No” is selected, simply select “Uconnect” from the mobile phone/audio device Bluetooth screen, and the Uconnect system will reconnect to the Bluetooth device.

### **Phonebook Download — Phonebook Transfer From Mobile Phone**

If equipped and specifically supported by your phone, Uconnect Phone will ask you if you want to download names (text names) and number entries from your mobile phone’s phonebook. Specific Bluetooth Phones with

Phone Book Access Profile may support this feature. See [UconnectPhone.com](http://UconnectPhone.com) for supported phones.

#### **NOTE:**

- Download and update, if supported, begins as soon as the Bluetooth wireless phone connection is made to the Uconnect Phone, for example, after you start the vehicle.
- You may be asked for permission to initiate the phonebook download.
- A maximum of 2,000 contact names with six numbers per contact will be downloaded and updated every time a phone is connected to the Uconnect Phone.
- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.

- Only the phonebook of the currently connected mobile phone is accessible.
- Only the mobile phone's phonebook is downloaded. SIM card phonebook is not part of the Mobile phonebook.
- This downloaded phonebook cannot be edited or deleted on the Uconnect Phone. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect Phone on the next phone connection.

### **Making A Phone Call**

1. Push the PHONE button on the steering wheel.
2. After the BEEP, say "dial" (or "call" a full name or phone number).

### **Receiving A Call — Accept (And End)**

1. When an incoming call rings or is announced on Uconnect, push the PHONE button on the faceplate.
2. To end a call, push the PHONE button on steering wheel or the PHONE button on the faceplate.

### **Mute (Or Unmute) Microphone During Call**

1. During a call, push the VOICE COMMAND button on the steering wheel.
2. After the BEEP, say "mute" (or "mute off").

### **Transfer Ongoing Call Between Handset And Vehicle**

1. During a call, push the VOICE COMMAND button on the steering wheel.
2. After the BEEP, say "transfer call."

## Changing The Volume

1. Start a dialogue by pushing the PHONE button on the faceplate, then adjust the volume during a normal call.
2. Use the radio ON/VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect system is speaking. Please note the volume setting for Uconnect phone is different than the audio system volume setting.



# UCONNECT 5.0 VOICE RECOGNITION QUICK TIPS

## CONTENTS

---

■ UCONNECT VOICE RECOGNITION . . . . .	.40	□ Media . . . . .	.44
□ Introducing Uconnect . . . . .	.40	□ Phone . . . . .	.45
□ Get Started . . . . .	.41	□ Voice Text Reply . . . . .	.46
□ Basic Voice Commands . . . . .	.42	□ Additional Information . . . . .	.47
□ Radio . . . . .	.43		



## UCONNECT VOICE RECOGNITION

### WARNING!

**ALWAYS** drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

### Introducing Uconnect

Start using Uconnect Voice Recognition with these helpful quick tips. It provides the key Voice Commands and tips you need to know to control your Uconnect 5.0 system.

Key Features:

 
- 5" touchscreen
- Three buttons on either side of the display




## Get Started

1. Visit [UconnectPhone.com](http://UconnectPhone.com) to check mobile device and feature compatibility and to find phone pairing instructions.
2. Reduce background noise. Wind and passenger conversations are examples of noise that may impact recognition.
3. Speak clearly at a normal pace and volume while facing straight ahead. The microphone is positioned on the rearview mirror and aimed at the driver.
4. Each time you give a Voice Command, you must first push either the VR or PHONE button, wait until **after** the beep, then say your Voice Command.
5. You can interrupt the help message or system prompts by pushing the VR or PHONE button and saying a Voice Command from current category.

All you need to control your Uconnect system with your voice are the buttons on your steering wheel.

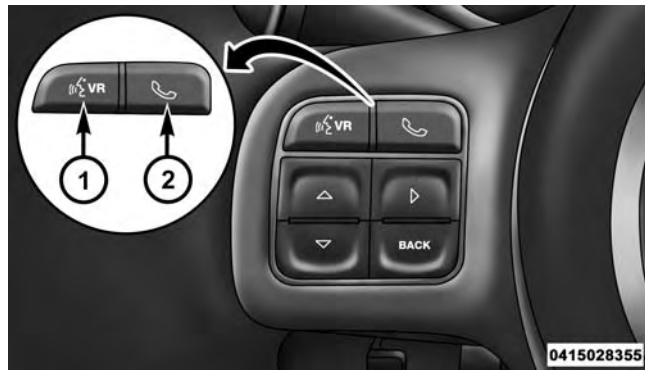

 - 1 — Push To Begin Radio Or Media Functions  
 2 — Push To Initiate, Answer/End A Phone Call, Send Or Receive A Text

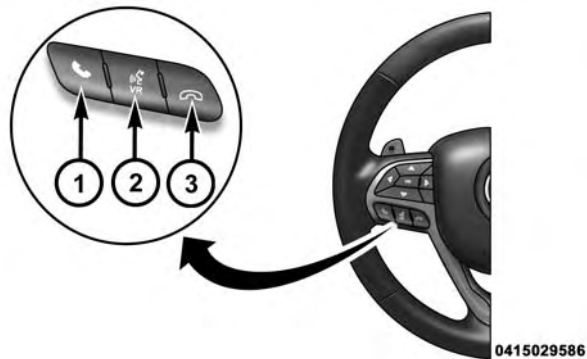

1 — Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text

2 — Push To Begin Radio Or Media Functions

3 — Push To End Call


## Basic Voice Commands

 The basic Voice Commands below can be given at any point while using your Uconnect system.

Push the VR button . After the beep, say...

- **Cancel** to stop a current voice session
- **Help** to hear a list of suggested Voice Commands
- **Repeat** to listen to the system prompts again

Notice the visual cues that inform you of your voice recognition system's status. Cues appear on the touch-screen.

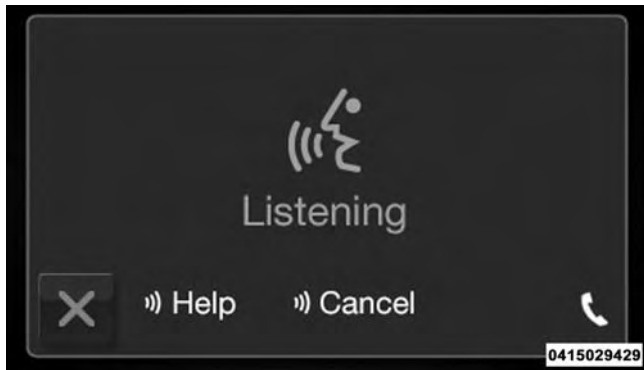


## Radio

Use your voice to quickly get to the AM or FM radio stations.

Push the VR button . After the beep, say...

- **Tune to ninety-five-point-five FM**


- **Tune to Satellite Channel Hits 1**

**TIP:** At any time, if you are not sure of what to say or want to learn a Voice Command, push the VR button  and say “**Help.**” The system will provide you with a list of commands.



 
## Media

Uconnect offers connections via USB, SD, Bluetooth and Auxiliary ports (If Equipped). Voice operation is only available for connected USB and iPod devices. (Remote CD player optional and not available on all vehicles.)

Push the VR button . After the beep, say one of the following commands and follow the prompts to switch your media source or choose an artist.

- **Change source** to Bluetooth
- **Change source** to iPod
- **Change source** to USB
- **Play artist** Beethoven; **Play album** Greatest Hits; **Play song** Moonlight Sonata; **Play genre** Classical

**TIP:** Press the “Browse” button on the touchscreen to see all of the music on your iPod or USB device. Your Voice Command must match **exactly** how the artist, album, song and genre information is displayed.

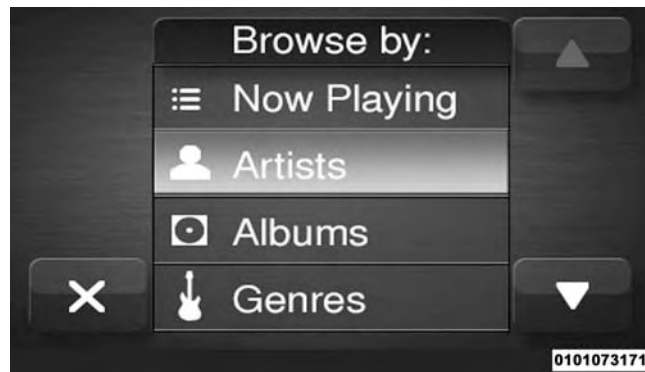


## Phone

Making and answering hands-free phone calls is easy with Uconnect. When the Phonebook button is illuminated on your touchscreen, your system is ready. Check [UconnectPhone.com](http://UconnectPhone.com) for mobile phone compatibility and pairing instructions.


Push the PHONE button . After the beep, say one of the following commands:


- **Call John Smith**
- **Dial** 123-456-7890 and follow the system prompts
- **Redial** (call previous outgoing phone number)
- **Call back** (call previous incoming phone number)

**TIP:** When providing a Voice Command, push the PHONE button  and say “**Call,**” then pronounce the name **exactly** as it appears in your phone book. When a contact has multiple phone numbers, you can say “**Call John Smith work.**”



## Voice Text Reply

Uconnect will announce **incoming** text messages. Push the PHONE button  and say **Listen**. (Must have compatible mobile phone paired to Uconnect system.)

1. Once an incoming text message is read to you, push the PHONE button . After the beep, say... **“Reply”**
2. Listen to the Uconnect prompts. After the beep, repeat one of the pre-defined messages and follow the system prompts.

PRE-DEFINED VOICE TEXT REPLY RESPONSES		
Yes.	Stuck in traffic.	See you later.
No.	Start without me.	I'll be late.

PRE-DEFINED VOICE TEXT REPLY RESPONSES		
Okay.	Where are you?	I will be <number> minutes late.
Call me.	Are you there yet?	
I'll call you later.	I need directions.	See you in <number> of minutes.
I'm on my way.	Can't talk right now.	
I'm lost.		Thanks.

**TIP:** Your mobile phone must have the full implementation of the **Message Access Profile (MAP)** to take advantage of this feature. For details about MAP, visit [UconnectPhone.com](http://UconnectPhone.com). Apple iPhone iOS6 or later supports reading **incoming** text messages only.

## **Additional Information**

© 2015 FCA US LLC. All rights reserved. Mopar and Uconnect are registered trademarks and Mopar Owner Connect is a trademark of FCA US LLC. Android is a trademark of Google Inc. SiriusXM and all related marks and logos are trademarks of SiriusXM Radio Inc.

For Uconnect system support, visit [DriveUconnect.com](http://DriveUconnect.com) or call 1-877-855-8400 (24 hours a day 7 days a week.)





# UCONNECT SETTINGS

## CONTENTS

---

■ CUSTOMER PROGRAMMABLE FEATURES — UCONNECT 5.0 PERSONAL SETTINGS . . . . .	.51	□ Doors & Locks . . . . .	.63
□ Display . . . . .	.52	□ Auto Comfort Systems — If Equipped . . . . .	.66
□ Units . . . . .	.53	□ Engine Off Options . . . . .	.66
□ Voice . . . . .	.54	□ Suspension — If Equipped . . . . .	.67
□ Clock & Date . . . . .	.54	□ Trailer Brake . . . . .	.69
□ Safety/Assistance . . . . .	.55	□ Compass Settings — If Equipped . . . . .	.69
□ Brakes . . . . .	.60	□ Audio . . . . .	.70
□ Lights . . . . .	.61	□ Phone/Bluetooth . . . . .	.72

## 50 UCONNECT SETTINGS

---

- SiriusXM Setup — If Equipped . . . . .72
- Radio Setup . . . . .73
- Restore Settings. . . . .74
- Clear Personal Data. . . . .74

## CUSTOMER PROGRAMMABLE FEATURES — UCONNECT 5.0 PERSONAL SETTINGS

### WARNING!

**ALWAYS** drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Push the SETTINGS button on the faceplate to display the settings menu screen. In this mode the Uconnect system allows you to access programmable features that may be equipped such as Display, Voice, Clock, Safety & Assistance, Lights, Doors & Locks, Auto-On Comfort (if equipped), Engine Off Options, Suspension, Trailer Brake,

Audio, Compass Settings, Phone/Bluetooth, SiriusXM Setup (if equipped), Restore Settings, Clear Personal Data and System Information.

**NOTE:** Only one category may be selected at a time.

When making a selection, press the button on the touchscreen to enter the desired mode. Once in the desired mode, press and release the preferred setting until the button is highlighted. Once the setting is complete, either press the back arrow or Done button on the touchscreen or the Back button on the faceplate to return to the previous menu. Pressing the Up or Down Arrow buttons on the touchscreen on the right side of the screen will allow you to toggle up or down through the list of available settings.

**NOTE:** All settings should be changed with the ignition in the “Run” position.

## Display

After pressing the “Display” button on the touchscreen the following settings will be available.

- *Display Mode*

When in this display you may select the Auto or Manual display settings. To change Mode status, press and release the “Auto” or “Manual” button on the touchscreen.

- *Set Language*

When in this display, you may select one of multiple languages (English/Français/Español) for all display nomenclature, including the trip functions and the navigation system (if equipped). Press the “Language” button on the touchscreen and select from “English,” “Français,” or “Español.”

- *Units*

When in this display, you may select to have the EVIC/DID, odometer, and navigation system (if equipped) changed between US and Metric units of measure. Press “US” or “Metric” to make your selection.

- *Touchscreen Beep*

When in this display, you may turn on or shut off the sound heard when a touchscreen button is pressed. To change the Mode status, press and release the “On” or “Off” button on the touchscreen.

- *Fuel Saver Display — If Equipped*

This feature will allow you to enable fuel saver mode and will be displayed in the EVIC/DID. Press the “Fuel Saver Display” button on the touchscreen select from “On” or “Off.”

- *Navigation Next Turn Pop-ups Displayed In Cluster — If Equipped*

When this feature is selected, the turn-by-turn directions will appear in the display as the vehicle approaches a designated turn within a programmed route. Press the “Navigation Next Turn Pop-ups Displayed In Cluster” button on the touchscreen select from “On” or “Off.”

## Units

After pressing the “Units” button on the touchscreen you may select each unit of measure independently displayed in the Driver Information Display (DID), and navigation system (if equipped). The following selectable units of measure are listed below:

- *Speed*

Select from: “MPH” or “km/h.”

- *Distance*

Select from: “mi” or “km.”

- *Fuel Consumption*

Select from: “MPG” (US), “MPG” (UK), “L/100 km” or “km/L.”

- *Capacity*

Select from: “gal” (US), “gal” (UK), “L/100 km” or “L.”

- *Pressure*

Select from: “psi,” “kPa,” or “bar.”

- *Temperature*

Select from: “°C,” or “°F.”

- *Power*

Select from: “HP” (US), “HP” (UK), and “kW.”

- *Torque*

Select from: “lb-ft” or “Nm.”

### **Voice**

After pressing the “Voice” button on the touchscreen the following settings will be available:

- *Voice Response Length*

When in this display, you may change the Voice Response Length settings. To change the Voice Response Length, press the “Voice Response Length” button on the touchscreen and select from “Brief” or “Detailed.”

- *Show Command List*

When in this display, you may change the Show Command List settings. To change the Show Command List settings, press the “Show Command List” button on the touchscreen and select from “Always,” “With Help” or “Never.”

### **Clock & Date**

After pressing the “Clock & Date” button on the touchscreen the following settings will be available:

- *Set Time*

When in this display, you may set the time and format manually. Press the “Set Time” button then choose from a “12 hour” or “24 hour format.” Press the corresponding arrow above and below the current time to adjust, then select “AM” or “PM.”

- *Set Date*

When in this display, you may set the date manually. Press the “Set Date” button then press the corresponding arrows above and below the current date to adjust.

## Safety/Assistance

After pressing the “Safety/Assistance” button on the touchscreen the following settings will be available:

- *ParkView Backup Camera*

When this feature is selected, the ParkView Backup Camera can be enabled or disabled. To make your selection, press the “ParkView Backup Camera” button on the touchscreen, until a check-mark appears next to setting, indicating that the setting had been selected.

- *ParkView Backup Camera Delay*

When the vehicle is shifted out of REVERSE (with camera delay turned OFF), the rear camera mode is exited and the navigation or audio screen appears again. When the vehicle is shifted out of REVERSE (with camera delay turned ON), the rear view image with dynamic grid lines will be displayed for up to 10 seconds after shifting out of “REVERSE” unless the forward vehicle speed exceeds 8 mph (12 km/h), the transmission is shifted into PARK or the

ignition is switched to the OFF position. To set the ParkView Backup Camera Delay push the SETTINGS button on the faceplate, then the “Safety & Driving Assistance” button on the touchscreen. Press the “Parkview Backup camera Delay” button on the touchscreen to turn the ParkView Delay ON or OFF.

- *ParkView Backup Camera Active Guidelines*

Your vehicle may be equipped with the ParkView Rear Back Up Camera Active Guidelines that allows you to see active guidelines over the ParkView Back up camera display whenever the shift lever/gear selector is put into REVERSE. The image will be displayed on the radio touchscreen display along with a caution note to “check entire surroundings” across the top of the screen. After five seconds, this note will disappear. To make your selection, press the “ParkView Backup Camera Active Guidelines” button on the touchscreen and make your selection. Press arrow button on the touchscreen to return to the previous menu.



- *Fixed ParkView Backup Camera Guidelines*

Fixed ParkView Backup Camera Guidelines Your vehicle may be equipped with the ParkView Rear Back Up Camera Fixed Guidelines that allows you to see fixed guidelines over the ParkView Back up camera display whenever the shift lever is put into REVERSE. The image will be displayed on the radio touchscreen display along with a caution note to “check entire surroundings” across the top of the screen. After five seconds, this note will disappear. To make your selection, press the “ParkView Backup Camera Fixed Guidelines” button on the touchscreen, until a check-mark appears next to setting, indicating that the setting had been selected.

- *Forward Collision Warning — If Equipped*

The Front Collision Warning (FCW) feature provides an audible and/or visual warning to potential forward collisions. The feature can be set to Far, or set to Near. The default status of FCW is the Far setting. This means the

system will warn you of a possible collision with the vehicle in front of you when you are farther away. This gives you the most reaction time. To change the setting for more dynamic driving, select the Near setting. This warns you of a possible collision when you are much closer to the vehicle in front of you. To change the FCW status, press and release the “Near” or “Far” button.

- *Front Collision Sensitivity — If Equipped*

The Front Collision Warning (FCW) feature can be set to Far, set to Near or turned Off. The default status of FCW is the Far setting. This means the system will warn you of a possible collision with the vehicle in front of you when you are farther away. This gives you the most reaction time. To change the setting for more dynamic driving, select the Near setting. This warns you of a possible collision when you are much closer to the vehicle in front of you. This allows for a more dynamic driving experience. To change the FCW status, press and release the OFF, Near or Far button.

- *Forward Collision Warning (FCW) — Active Braking*

The FCW system includes Advanced Brake Assist (ABA). When this feature is selected, the ABA applies additional brake pressure when the driver requests insufficient brake pressure to avoid a potential frontal collision. The ABA system becomes active at 5 mph (8 km/h). To make your selection, press the “Forward Collision Warning Active Braking” button on the touchscreen, until a check-mark appears next to setting, indicating that the setting had been selected.

- *ParkSense*

The ParkSense system will scan for objects behind the vehicle when the transmission shift lever/gear selector is in REVERSE and the vehicle speed is less than 18 km/h (11 mph). It will provide an alert (audible and/or visual) to indicate the proximity to other objects. The system can be enabled with Sound Only, or Sound and Display. To change the ParkSense status, press and release the “Sound Only” or “Sounds and Display” button.

- *Front ParkSense Volume*

The Front ParkSense Chime Volume settings can be selected from the DID or Uconnect System. The chime volume settings include LOW, MEDIUM, and HIGH. The factory default volume setting is MEDIUM. To make your selection, press the “Front ParkSense Vol.” button on the touchscreen, until a check-mark appears next to setting, indicating that the setting had been selected. ParkSense will retain its last known configuration state through ignition cycles.

- *Rear ParkSense Volume*

The Rear ParkSense Chime Volume settings can be selected from the DID or Uconnect System. The chime volume settings include LOW, MEDIUM, and HIGH. The factory default volume setting is MEDIUM. To make your selection, press the “Rear ParkSense Vol.” button on the touchscreen, until a check-mark appears next to setting, indicating that the setting had been selected. ParkSense will retain its last known configuration state through ignition cycles.

- *Rear ParkSense Braking Assist — If Equipped*

When this feature is selected, the park assist system will detect objects located behind the vehicle and utilize autonomous braking to stop the vehicle.

- *LaneSense Warning — If Equipped*

When this feature is selected, it sets the distance at which the steering wheel will provide feedback for potential lane departures. The LDW sensitivity can be set to provide either an “Early,” “Medium,” or “Late” warning zone start point.

- *LaneSense Strength — If Equipped*

When this feature is selected, it sets the strength of the steering wheel feedback for potential lane departures. The amount of directional torque the steering system can apply to the steering wheel to correct for vehicle lane departure can be set at “Low,” “Medium” or “High.”

- *Tilt Side Mirrors In Reverse*

When this feature is selected, the exterior sideview mirrors will tilt downward when the ignition is in the RUN position and the transmission shift lever is in the REVERSE position. The mirrors will move back to their previous position when the transmission is shifted out of REVERSE. To make your selection, press the “Tilt Side Mirrors in Reverse” button on the touchscreen, until a check-mark appears next to setting, indicating that the setting had been selected.

- *Auto Folding Side Mirrors*

When this feature is selected, the system automatically folds and unfolds side mirrors at vehicle off and vehicle on. To make your selection, press the “Auto Folding Side Mirrors” button on the touchscreen, until a check-mark appears next to setting, indicating that the setting had been selected.

- *Electric Power Steering — If Equipped*

The Steering Feel Options feature will allow you to adjust the steering effort and feel. Press the “Sport” button on the touchscreen to provide the greatest amount of steering feel, requiring the highest amount of steering effort. Press the “Normal” button on the touchscreen to provide greater steering feel, requiring greater steering effort. Press the “Comfort” button on the touchscreen to provide a balance of steering feel and steering effort.

- *Paddle Shifters*

When this feature is selected, the paddle shifters can be enabled or disabled. To make your selection, press the “Paddle Shifters” button on the touchscreen, until a check-mark appears next to setting, indicating that the setting had been selected.

- *Blind Spot Alert*

When this feature is selected, the Blind Spot Alert feature Provides alerts, visual and/or audible, to indicate objects in your blind spot. The Blind Spot Alert feature can be activated in “Lights” mode. When this mode is selected, the Blind Spot Monitor (BSM) system is activated and will only show a visual alert in the exterior mirrors. When “Lights & Chime” mode is activated, the Blind Spot Monitor (BSM) will show a visual alert in the exterior mirrors as well as an audible alert when the turn signal is on. When “Off” is selected, the Blind Spot Monitor (BSM) system is deactivated. To change the Blind Spot Alert status, press the “Off,” “Lights” or “Lights & Chime” button on the touchscreen.

**NOTE:** If your vehicle has experienced any damage in the area where the sensor is located, even if the fascia is not damaged, the sensor may have become misaligned. Take your vehicle to an authorized dealer to verify sensor alignment. Having a sensor that is misaligned will result in the BSM not operating to specification.

- *Rain Sensing Auto Wipers*

When this feature is selected, the system will automatically activate the windshield wipers if it senses moisture on the windshield. To make your selection, press the “Rain Sensing” button on the touchscreen and make your selection.

- *Hill Start Assist — If Equipped*

When this feature is selected, the Hill Start Assist (HSA) system is active. Refer to “Electronic Brake Control System” in “Starting And Operating” for system function and operating information. To make your selection, press the “Hill Start Assist” button on the touchscreen and make your selection.

## Brakes

After pressing the “Brakes” button on the touchscreen the following settings will be available:

- *Brake Service*

This feature provides a means for a technician or vehicle owner to utilize a vehicle integrated, menu driven system, to command the electric park brake retraction, to service the rear foundation brakes (brake pads, calipers, rotors, etc.).

- *Auto Park Brake*

Auto Park Brake will set the park brake once the vehicle is set in park (or at key off for a manual transmission)

- *Hold ‘n Go*

This feature will engage the park brake automatically if the vehicle is left unsecured. If the automatic transmission is not in PARK, the seat belt is unbuckled, the driver

door is open, the vehicle is at a standstill, and there is no attempt to depress the brake pedal or accelerator pedal, the park brake will automatically engage to prevent the vehicle from rolling.

## Lights

After pressing the “Lights” button on the touchscreen, the following settings will be available:

- *Interior Ambient Lighting*

When this feature is selected, it allows adjustment of the brightness of the interior ambient lighting. To change the interior ambient lighting, press the “+” or “-” button on the touchscreen to select your desired level.

- *Headlight Sensitivity*

When this feature is selected, it Adjusts the headlight sensitivity. To change the headlight sensitivity setting, press the “ headlight sensitivity” button on the touchscreen and choose either “1,” “2,” or “3” buttons on the touchscreen to select your desired time interval.

- *Headlight Off Delay*

When this feature is selected, it allows the adjustment of the amount of time the headlights remain on after the engine is shut off. To change the Headlight Off Delay setting, press the “Headlight Off Delay” button on the touchscreen and choose either “0,” “30,” “60,” or “90” buttons on the touchscreen to select your desired time interval.

- *Headlight Illumination On Approach*

When this feature is selected, it allows the adjustment of the amount of time the headlights remain on when the doors are unlocked with the Remote Keyless Entry (RKE) transmitter. To change the Illuminated Approach status, press the “Illuminated Approach” button on the touchscreen and choose either “0,” “30,” “60,” or “90” buttons on the touchscreen to select your desired time interval.

- *Greeting Lights*

When this feature is selected, it automatically turns on the headlights after unlocking the vehicle with key fob. To make your selection, press the “Greeting Lights” button and select from “On” or “Off.”

- *Headlights With Wipers — If Equipped*

When this feature is selected, and the headlight switch is in the AUTO position, the headlights will turn on approximately 10 seconds after the wipers are turned on. The headlights will also turn off when the wipers are turned off, if they were turned on by this feature. To make your selection, press the “Lights w/Wipers” button and select from “On” or “Off.”

- *Auto Dim High Beams — If Equipped*

When this feature is selected, the high beam headlights will activate/deactivate automatically under certain conditions. To make your selection, press the “Auto High Beams” button on the touchscreen, and select from “On” or “Off.”

- *Daytime Running Lights — If Equipped*

When this feature is selected, the headlights will turn on whenever the engine is running. To make your selection, press the “Daytime Running Lights” button on the touchscreen, and select from “On” or “Off.”

- *Steering Directed Lights*

When this feature is selected, the headlights turn relative to a change in the direction of the steering wheel. To make your selection, press the “Steering Directed Lights” button on the touchscreen, and select from “On” or “Off.”

- *Cornering Lights*

When this feature is selected, the headlights turn relative to a change in the direction of the steering wheel. To make your selection, press the “Cornering Lights” button on the touchscreen, and select from “On” or “Off.”

- *Flash Lights With Lock*

When this feature is selected, the exterior lights will flash when the doors are locked or unlocked with the Remote Keyless Entry (RKE) transmitter. This feature may be selected with or without the sound horn on lock feature selected. To make your selection, press the “Flash Lights w/Lock” button on the touchscreen, and select from “On” or “Off.”

- *Flash Lights with Sliding Door*

When this feature is selected, the hazard lights will flash when the sliding doors are opened or closed with the Remote Keyless Entry (RKE) transmitter, or when using

the passive entry feature. To make your selection, press the “Flash Lights With Sliding Door” button on the touchscreen, and select from “On” or “Off.”

## **Doors & Locks**

After pressing the “Doors & Locks” button on the touchscreen, the following settings will be available:

- *Auto Door Locks*

When this feature is selected, all doors will lock automatically when the vehicle reaches a speed of 15 mph (24 km/h). To make your selection, press the “Auto Door Locks” button on the touchscreen and select from “On” or “Off.”

- *Auto Unlock On Exit*

When this feature is selected, all doors will unlock when the vehicle is stopped, the transmission is in the PARK or NEUTRAL position and the driver’s door is opened. To make your selection, press the “Auto Unlock On Exit” button on the touchscreen and select from “On” or “Off.”



- *Flash Lights With Lock*

When this feature is selected, the exterior lights will flash when the doors are locked or unlocked with the Remote Keyless Entry (RKE) transmitter. This feature may be selected with or without the sound horn on lock feature selected. To make your selection, press the “Flash Lights w/Lock” button on the touchscreen, and select from “On” or “Off.”

- *Sound Horn With Lock*

When this feature is selected, the horn will sound when the door locks are activated. To make your selection, press the “Horn w/Lock” Button and choose “Off,” “1st Press” or “2nd Press.”

- *Sound Horn With Remote Start*

When this feature is selected, the horn will sound when the remote start is activated. To make your selection, press the “Horn w/Remote Start” button on the touchscreen and select from “On” or “Off.”

- *Memory Linked to Fob — If Equipped*

This feature provides automatic driver seat positioning to enhance driver mobility when entering and exiting the vehicle. To make your selection, press the “Memory Linked to Fob” button on the touchscreen and select from “On” or “Off.”

**NOTE:** The seat will return to the memorized seat location if “Memory Linked to Fob” is set to (ON) when the Remote Keyless Entry (RKE) transmitter is used to unlock the door.

- *Passive Entry*

This feature allows you to lock and unlock the vehicle’s door(s) without having to push the Remote Keyless Entry (RKE) transmitter lock or unlock buttons. It automatically unlocks the doors when the outside door handle is grabbed. To make your selection, press the “Passive Entry” button on the touchscreen and select from “On” or “Off.”

- *Remote Door Unlock*

This feature will allow you to program your remote door locks to open “All doors” or only the “Driver door” with the first push of the Remote Keyless Entry (RKE) transmitter or grabbing the Passive Entry door handle. To make your selection, press the “Remote Door Unlock” button on the touchscreen and choose from “All” or “Driver.”

**NOTE:** If “Driver Door” is selected, the (RKE) transmitter will have to be pushed two times in order to unlock all doors.

- *Power Lift Gate Alert*

When this feature is selected, an alert plays when the power liftgate is raising or lowering. To make your selection, press the “Power Lift Gate Alert” button on the touchscreen and select from “On” or “Off.”

- *Sliding Door Alert*

When this feature is selected, a chime plays when the sliding door reverses or an obstacle is sensed. To make your selection, press the “Sliding Door Alert” button on the touchscreen and select from “On” or “Off.”

- *Flash Lights with Sliding Door*

When this feature is selected, the headlights flash when the sliding door is opening. To make your selection, press the “Flash Lights with Sliding Door” button on the touchscreen and select from “On” or “Off.”

- *Hands Free Power Liftgate*

When this feature is selected, hands free technology automatically opens or closes the power sliding door. To make your selection, press the “Hands Free Power Liftgate” button on the touchscreen and select from “On” or “Off.”

- *Hands Free Sliding Door*

When this feature is selected, hands free technology automatically opens or closes the power sliding door. To make your selection, press the “Hands Free Sliding Door” button on the touchscreen and select from “On” or “Off.”

### **Auto Comfort Systems — If Equipped**

After pressing the “Auto-On Comfort” button on the touchscreen the following settings will be available:

- *Auto-On Driver Heated/Ventilated Seat & Steering Wheel With Vehicle Start — If Equipped*

When this feature is selected the driver’s heated seat and heated steering wheel will automatically turn ON when temperatures are below 40° F (4.4° C). When temperatures are above 80° F (26.7° C) the driver vented seat will turn ON. To make your selection, press the “Auto Heated Seats” button on the touchscreen, then select either “On” or “Off.”

### **Engine Off Options**

After pressing the “Engine Off Options” button on the touchscreen the following settings will be available.

- *Easy Exit Seats — If Equipped*

When this feature is selected, the Driver’s seat will automatically move rearward once the engine is shut off. To make your selection, press the “Easy Exit Seats” button on the touchscreen and make your selection.

- *Headlight Off Delay*

When this feature is selected, the driver can choose to have the headlights remain on for 0, 30, 60, or 90 seconds when exiting the vehicle. Press the “Headlight Off Delay” button on the touchscreen and choose from “0,” “30,” “60,” or “90” seconds to select your desired time interval.

- *Engine Off Power Delay*

When this feature is selected, the power window switches, radio, Uconnect phone system (if equipped), DVD video system (if equipped), power sunroof (if equipped), and power outlets will remain active for up to 10 minutes after the ignition is cycled to OFF. Opening either front door will cancel this feature. Press the “Engine Off Power Delay” button on the touchscreen and choose from “0 sec,” “45 sec,” “5 min” or “10 min” to select your desired time interval.

- *Auto Entry/Exit — If Equipped*

When this feature is selected, it automatically lowers the vehicle ride height position when shifted into park. Press the “Auto Entry/Exit” button on the touchscreen and choose from “On” or “Off.”

- *Radio Off Delay*

When this feature is selected, the radio will stay on for a preset time after the ignition key is turned to STOP/OFF. To change the Radio Off Delay status, press the “0 MIN” or “20 MIN” button on the touchscreen to select your desired time interval.

### **Suspension — If Equipped**

After pressing the “Suspension” button on the touchscreen the following settings will be available:

- *Sound Horn With Lower*

When this feature is selected, a short horn sound will occur when the RKE transmitter REMOTE LOWER button is pressed. To make your selection, press the “Horn w/lower” button on the touchscreen, select “On” or “Off”.

- *Flash Lights With Lower*

When this feature is selected, the front and rear turn signals will flash when the RKE transmitter REMOTE LOWER button is pressed twice. To make your selection, press the “Light w/Lower” button on the touchscreen, select “On” or “Off”.

- *Auto Entry/Exit Suspension*

When this feature is selected, the vehicle automatically lowers from ride height position when vehicle shifted to park for easy entry/exit. To make your selection, press the “Auto Entry/Exit” button on the touchscreen, select “On” or “Off”.

- *Display Suspension Messages*

When “All” is selected, all the Air Suspension Alerts will be displayed. When “Warning Only” is selected only the Air Suspension Warnings will be displayed.

- *Automatic Aero Mode (1500 Model Only)*

When this feature is selected the Ride Height will automatically be adjusted depending on the vehicle speed. To make your selection, press the “Aero Mode” button on the touchscreen, select “On” or “Off”.

- *Tire Jack Mode*

When this feature is selected the air suspension system is disabled to prevent auto leveling of the suspension, while the vehicle is on a jack changing a tire. To make your selection, press the “Tire Jack Mode” button on the touchscreen, select “On” or “Off”.

- *Transport Mode*

When this feature is selected the air suspension system is disabled to assist with flat bed towing. To make your selection, press the “Transport Mode” button on the touchscreen, select “On” or “Off”.

- *Wheel Alignment Mode*

This feature prevents auto leveling of the air suspension while performing a wheel alignment service. Before performing a wheel alignment this mode must be enabled. Refer to your authorized dealer for further information.

### **Trailer Brake**

After pressing the “Trailer Brake” button on the touchscreen the following settings will be available:

- *Trailer Select*

When this feature is selected, the Trailer Type can be selected between “Trailer 1,” “Trailer 2,” “Trailer 3” and “Trailer 4.”

- *Trailer Brake Type*

When this feature is selected, the Trailer Brake Type can be changed between “Light Electric,” “Heavy Electric,” “Light EOH” and “Heavy EOH.”

 
### **Compass Settings — If Equipped**

After pressing the “Compass Settings” button on the touchscreen the following settings will be available:

- *Variance*

Compass Variance is the difference between Magnetic North and Geographic North. To compensate for the differences the variance should be set for the zone where the vehicle is driven, per the zone map. Once properly set, the compass will automatically compensate for the differences, and provide the most accurate compass heading.

**NOTE:** Keep magnetic materials away from the top of the instrument panel, such as iPod's, Mobile Phones, Laptops and Radar Detectors. This is where the compass module is located, and it can cause interference with the compass sensor, and it may give false readings.

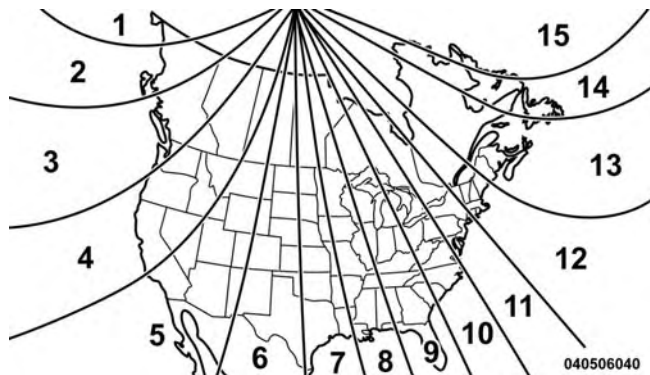

- *Perform Compass Calibration*

Press the “Calibration” button on the touchscreen to change this setting. This compass is self-calibrating, which eliminates the need to manually reset the compass. When the vehicle is new, the compass may appear erratic until it is calibrated. You may also calibrate the compass by pressing the “ON” button on the touchscreen and completing one or more 360-degree turns (in an area free from large metal or metallic objects). The compass will now function normally.

### Audio

After pressing the “Audio” button on the touchscreen the following settings will be available:

- *Equalizer*

When in this display you may adjust the Bass, Mid and Treble settings. Adjust the settings with the “+” and “-” buttons on the touchscreen or by selecting any point on the scale between the “+” and “-” buttons on the touchscreen.

- *Balance/Fade*

This feature allows you to adjust the Balance and Fade settings. Press and drag the speaker icon or use the arrows to adjust, tap the “C” icon to readjust to the center.

- *Speed Adjusted Volume*

This feature increases or decreases volume relative to vehicle speed. To change the Speed Adjusted Volume press the “Speed Adjusted Volume” button on the touchscreen and select from “Off,” “1,” “2” or “3” buttons on the touchscreen.

- *Surround Sound — If Equipped*

This feature provides simulated surround sound mode. To make your selection, press the “Surround Sound” button on the touchscreen, select “On” or “Off.”

- *Loudness — If Equipped*

This feature improves sound quality at lower volumes. To make your selection, press the “Loudness” button on the touchscreen, select “On” or “Off.”

- *Auto-On Radio*

The Radio automatically turns on when vehicle is in run or will recall whether it was on or off at last ignition off. To make your selection, press the “Loudness” button on the touchscreen, select “On,” “Off” or “Recall Last.”

- *Radio Off With Door — If Equipped*

The radio remains on until driver or passenger door is opened or when Radio Off Delay selected time expires. To make your selection, press the “Radio Off With Door” button on the touchscreen, select “On,” “Off”.



- *AUX Volume Offset — If Equipped*

This feature provides the ability to tune the audio level for portable devices connected through the AUX input. To make your selection, press the “AUX Volume Offset” button on the touchscreen, select “On” or “Off.”

### **Phone/Bluetooth**

After pressing the “Phone/Bluetooth” button on the touchscreen the following setting will be available:

- *Paired Devices*

This feature shows which phones are paired to the Phone/Bluetooth system. For further information, refer to your Uconnect Supplement Manual.

- *Phone Pop-Ups in Cluster*

This feature allows phone pop-ups to be displayed in the driver screen. For further information, refer to your Uconnect Supplement Manual.

### **SiriusXM Setup — If Equipped**

After pressing the “SiriusXM Setup” button on the touchscreen, the following settings will be available:

- *Tune Start*

Tune Start begins playing the current song from the beginning when you tune to a music channel using one of the twelve presets, so you can enjoy the complete song. This feature occurs the first time the preset is selected during that current song. Tune Start works in the background, so you will not even realize it’s on, except that you will miss the experience of joining your favorite song with only a few seconds left to play. To make your selection, press the “Tune Start” button on the touchscreen, select “On” or “Off.”

- *Channel Skip*

SiriusXM can be programmed to designate a group of channels that are the most desirable to listen to or to exclude

undesirable channels while scanning. To make your selection, press the “Channel Skip” button on the touchscreen, select the channels you would like to skip followed by pressing the back arrow button on the touchscreen.

- *Subscription Information*

New vehicle purchasers or lessees will receive a free limited time subscription to SiriusXM Satellite Radio with your radio. Following the expiration of the free services, it will be necessary to access the information on the Subscription Information screen to re-subscribe.

Press the “Subscription Info” button on the touchscreen to access the Subscription Information screen.

Write down the SIRIUS ID numbers for your receiver. To reactivate your service, either call the number listed on the screen or visit the provider online.

**NOTE:** SiriusXM Travel Link is a separate subscription and is available for U.S. residents only.

## Radio Setup

After pressing the “Radio Setup” button on the touchscreen the following settings will be available.

- *Traffic Announcement — If Equipped*

When this feature is selected it allows the system to pause receivers and media to issue a traffic bulletin. To change the Traffic Announcement setting press the “Off” or “On” button on the touchscreen. A check mark will appear in the box when selected.

- *Alternative Frequency — If Equipped*

When this feature is selected it allows the frequency to change automatically to maintain the strongest signal. To change the Alternative Frequency setting press the “Off” or “On” button on the touchscreen. A check mark will appear in the box when selected.

- *Regional*

When this feature is selected it forces regional service-following enabling automatic switching to network stations. To change the Regional setting press the “Off” or “On” button on the touchscreen. A check mark will appear in the box when selected.

### **Restore Settings**

After pressing the “Restore Settings” button on the touchscreen the following setting will be available:

- *Restore Settings*

When this feature is selected it will reset the Display, Clock, Audio, and Radio Settings to their default settings. To restore the settings to their default setting, press the “Restore Settings” button and select from “Yes” or “No.” If “Yes” is selected a pop-up will appear asking “Are you sure you want to reset your settings to default?” select “Yes” to restore, or “Cancel” to exit.

### **Clear Personal Data**

After pressing the “Clear Personal Data Settings” button on the touchscreen the following settings will be available:

- *Clear Personal Data*

When this feature is selected it will remove all personal data including Bluetooth devices and presets. To remove all personal information, press the “Clear Personal Data” button and select from “Yes” or “No.” If “Yes” is selected a pop-up will appear asking “Are you sure you want to clear all personal data?” select “Yes” to Clear, or “Cancel” to exit.

---


# MORE BUTTON

## CONTENTS

---

■ MORE MAIN MENU . . . . .	.76
----------------------------	-----

## MORE MAIN MENU

Push the MORE  button located on the faceplate to display the MORE Main Menu. The MORE Main Menu may contain the following options:

- *Clock*

Press the “Clock” button to change the clock display to a larger font.

- *Settings*

Press the “Settings  ” button to access the Settings main menu.

- *Cargo Camera*

Press the “Cargo Cam” button to activate or deactivate the cargo camera.

- *Headrest Fold*

Press the “Headrest Fold” button to fold the headrests.

- *Mirror Dimming*

Press the “Mirror Dimmer” button to dim the rearview mirror.

 
- *Screen Off*

Press the “Screen Off” button to turn the touchscreen off.

- *Compass*

Press the “Compass” button to display the compass.

All features listed may not be available on your vehicle.



16UC5CHRY-526-AC  
Third Edition  
Uconnect 5.0  
Printed in the USA



©2015 FCA US LLC. All Rights Reserved.  
Chrysler, Dodge, Jeep, Ram, Mopar and Uconnect are trademarks of FCA US LLC.  
FIAT is a registered trademark of FCA Group Marketing S.p.A.,  
used under license by FCA US LLC.