



**Radio 4.3**

# Owner's Manual Supplement

# TABLE OF CONTENTS

SECTION		PAGE
1	SAFETY GUIDELINES .....	3
2	INTRODUCTION .....	7
3	RADIO MODE .....	11
4	DISC MODE .....	21
5	USB MODE .....	25
6	AUX MODE .....	29
7	BLUETOOTH MODE .....	31
8	MORE & SETTINGS .....	35

1

2

3

4

5

6

7

8



# SAFETY GUIDELINES

## CONTENTS

---

■ SAFETY GUIDELINES . . . . .	4
■ CYBERSECURITY . . . . .	5

### SAFETY GUIDELINES

Ensure that all persons read this manual carefully before using the radio system. It contains instructions on how to use the system in a safe and effective manner.

#### WARNING!

**ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

- Use these features only when safe to do so. If prolonged viewing of the screen is required, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Make certain the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.
- The law in some states prohibits the Front Seat DVD Viewer. As a result, it may be disabled prior to delivery to you. If you move to another state, you should consult your dealer for the proper enable/disable setting for your new state. Currently all states prohibit front seat video viewers except for: Arkansas, Delaware, Georgia, Hawaii, Idaho, Iowa, Kentucky, Mississippi, Missouri, Montana, North Dakota and Ohio.

## CYBERSECURITY

Your vehicle may be a connected vehicle and may be equipped with both wired and wireless networks. These networks allow your vehicle to send and receive information. This information allows systems and features in your vehicle to function properly.

Your vehicle may be equipped with certain security features to reduce the risk of unauthorized and unlawful access to vehicle systems and wireless communications. Vehicle software technology continues to evolve over time and FCA US LLC, working with its suppliers, evaluates and takes appropriate steps as needed. Similar to a computer or other devices, your vehicle may require software updates to improve the usability and performance of your systems or to reduce the potential risk of unauthorized and unlawful access to your vehicle systems.

The risk of unauthorized and unlawful access to your vehicle systems may still exist, even if the most recent version of vehicle software (such as Uconnect software) is installed.

1

### WARNING!

- **It is not possible to know or to predict all of the possible outcomes if your vehicle's systems are breached. It may be possible that vehicle systems, including safety related systems, could be impaired or a loss of vehicle control could occur that may result in an accident involving serious injury or death.**

*(Continued)*

**WARNING! (Continued)**

- **ONLY** insert media (e.g., USB, SD card, or CD) into your vehicle if it came from a trusted source. Media of unknown origin could possibly contain malicious software, and if installed in your vehicle, it may increase the possibility for vehicle systems to be breached.
- As always, if you experience unusual vehicle behavior, take your vehicle to your nearest authorized dealer immediately.

**NOTE:**

- FCA or your dealer may contact you directly regarding software updates.
- To help further improve vehicle security and minimize the potential risk of a security breach, vehicle owners should:
  - Routinely check [www.driveuconnect.com/software-update](http://www.driveuconnect.com/software-update) to learn about available Uconnect software updates.
  - Only connect and use trusted media devices (e.g. personal mobile phones, USBs, CDs).

Privacy of any wireless and wired communications cannot be assured. Third parties may unlawfully intercept information and private communications without your consent. For further information, refer to “Onboard Diagnostic System (OBD II) Cybersecurity” in “Maintaining Your Vehicle” in your Owner’s Manual on the DVD.

---

# INTRODUCTION

## CONTENTS

---

■ Uconnect 4.3 SYSTEM . . . . .	8
---------------------------------	---



## Uconnect 4.3 SYSTEM

### **WARNING!**

**ALWAYS** drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.



**1 — RADIO**

Push the RADIO button, located on the faceplate, to enter the Radio Mode. The different tuner modes: AM, FM and SAT can be selected by pushing the corresponding buttons in the Radio Mode.

**2 — SETTINGS**

Push the SETTINGS button, on the faceplate, to access the Settings list. Clock, Display, Audio, Bluetooth and SiriusXM Settings are described in this manual. See your vehicles Owner's Manual on the DVD for more details.

**3 — MORE**

Push the MORE button, located on the faceplate, to access additional options. Options available such as: Uconnect Phone (if equipped) and Compass can be accessed by pushing the corresponding buttons in the More Menu.

**4 — SCREEN OFF**

Push the SCREEN OFF button, on the faceplate, to turn the touchscreen OFF. To turn the screen back ON, just press the touchscreen.

**5 — CLIMATE**

Push the CLIMATE Control button on the faceplate to access climate controls. Refer to Climate Controls in your vehicles Owner's Manual for further details.

**6 — PLAYER**

Push the PLAYER button, located on the faceplate, to access media sources such as: Disc, USB Device and AUX as long as the requested media is present.

# RADIO MODE

## CONTENTS

---

■ RADIO OPERATION . . . . .	.12	□ Setting Presets. . . . .	.15
□ Overview . . . . .	.12	□ Audio . . . . .	.15
□ Common Radio Functions . . . . .	.12	□ SiriusXM Satellite Radio Mode — If Equipped . .	.16
□ Seek And Direct Tune Functions . . . . .	.13		

## RADIO OPERATION

### Overview

The radio is equipped with the following modes:

- FM
- AM
- SAT SiriusXM Satellite Radio (if equipped)

Press the RADIO button, upper left corner, to enter the Radio Mode. The different tuner modes; AM, FM, and SAT, can then be selected by pressing the corresponding buttons on the touchscreen.

### Common Radio Functions

The following operations offer the same functionality across all Radio Modes, and further instructions are provided where differences exist.

### ON/OFF & Volume Control



Push the ON/OFF Volume Control knob to turn on the radio. Push the ON/OFF Volume Control knob a second time to turn off the radio.

The Volume control turns continuously (360 degrees) in either direction, without stopping. Turning the ON/OFF Volume Control knob clockwise increases the Volume and counterclockwise decreases it.

When the audio system is turned on, the sound will be set at the same Volume level as last played.

## ENTER/BROWSE & TUNE/SCROLL Control



Turn the TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

### Info

Press the “Info” button to display channel number/frequency, song title, genre and artist. This feature is only available in FM and SAT modes.

### Exit

The Exit button provides a means to close the Direct Tune Screen.

### Go

Press the green GO button on the touchscreen to allow you to commit an entry, at which time, the radio will tune

to the entered Channel, and close the Direct Tune Screen. The GO button on the touchscreen is only for SiriusXM Satellite radio mode.

## Seek And Direct Tune Functions

The Seek Up and Down functions are activated by pressing the Double Arrow buttons to the right and left of the radio station display, or by pushing the left Steering Wheel Audio Control (if equipped) up or down.

### Seek Up

Press and release the Seek Up ►► button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

### Fast Seek Up

Press and hold the Seek Up ►► button on the touchscreen to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

### Seek Down

Press and release the Seek Down ◀◀ button on the touchscreen to tune the radio to the next listenable station or channel.


During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

### Fast Seek Down

Press and hold the Seek Down ◀◀ button on the touchscreen to advance the radio through the available stations

or channel at a faster rate, the radio stops at the next available station or channel when the button is released.

### Direct Tune

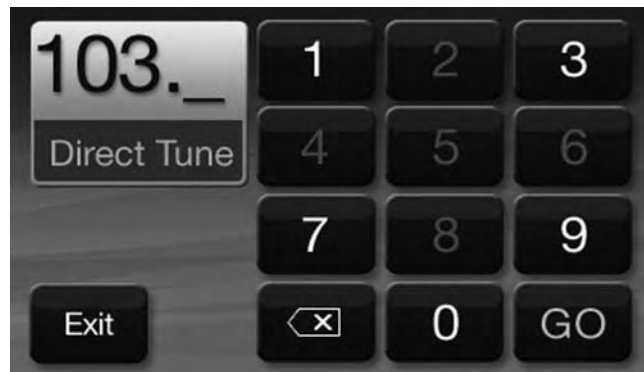

The Direct Tune touchscreen is available in AM, FM, and SAT radio modes and can be used to direct tune the radio

to a desired station or channel. Press the “Tune” button located at the bottom of the radio touchscreen.

Press the available numbered button to begin selecting a desired station. Once a number has been entered, any numbers that are no longer possible (stations that cannot be reached) will become deactivated/grayed out.

If you accidentally entered the wrong station number, press the “X” button to clear the radio station numbers and reenter the correct station number.

Once the last digit of a station has been entered, the Direct Tune screen will close and the system will automatically tune to that station.

The selected Station or Channel number is displayed in the Direct Tune text box.

## Setting Presets

The Presets are available for all Radio Modes and are activated by pressing any of the four Preset buttons located at the top of the touchscreen.

When you are receiving a station that you wish to commit into memory press and hold the desired numbered button for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. A set of four presets are visible at the top of the radio touchscreen.

## Audio

1. Push the SETTINGS button on the right side of the unit.
2. Scroll down and press the “Audio” button to enter the Audio menu.



The Audio Menu shows the following options for you to customize your audio settings.

### Equalizer

- Press the “Equalizer” button to adjust the Bass, Mid and Treble. Use the “+” or “-” buttons to adjust the equalizer to your desired settings. Press the “Back Arrow” button when done.

### Balance/Fade

- Press the “Balance/Fade” button to adjust the sound from the speakers. Use the “Arrow” button to adjust the sound level from the front and rear or right and left side speakers. Press the Center “C” button to reset the balance and fade to the factory setting. Press the “Back Arrow” button when done.

### Speed Adjusted Volume

- Press the “Speed Adjusted Volume” button to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the “Back Arrow” button when done.
3. Press the “Exit” button to exit from the Audio Menu.

### SiriusXM Satellite Radio Mode — If Equipped

SiriusXM services require a subscription, sold separately after the 12-month trial period included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 to cancel.**

See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). All fees and programming subject to change. Our satellite service is available only to those

at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2015 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

This functionality is only available for radios equipped with a Satellite receiver. To receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you might have to change the vehicle's position to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

### **No Subscription**

Radios equipped with a Satellite receiver, require a subscription to the SiriusXM Service. When the Radio does not have the necessary subscription, the Radio is able to receive the Preview channel only.

### **Acquiring SiriusXM Subscription**

To activate the SiriusXM subscription, call the toll free number on the SiriusXM Settings. You will need to provide the Sirius ID (ESN) located on your vehicle's screen.

The satellite mode is activated by pressing the AM/SAT button on the touchscreen located at the bottom of the radio screen. Press the AM/SAT button on the touchscreen and then press the SAT button on the touchscreen.

When in SiriusXM Satellite mode:

- The SiriusXM Presets are displayed at the top of the screen.
- The SiriusXM Channel Number is displayed along with Artist and Song name.
- The SiriusXM function buttons on the touchscreen are displayed on the bottom.

In addition to the tuning functions common to all Radio modes, the browse, info, and more button on the faceplate functions are available in SiriusXM Mode. Pressing the more button slides over the additional functions that are on the second level of the bottom bar. This second level stays for 10 seconds and then returns to the main top level of the bottom bar. The second level displays audio, fav, gamezone and replay buttons.

### **Browse**

Press the “Browse” button at the bottom left of the screen to enter the Browse screen.

The Browse screen in SAT mode provides you the ability to browse by All, Favorites or Genres. You can also access Gamezone, and Traffic and Weather settings in the Browse screen.

### **Favorites**

Press the “More...” button and then the “Fav” button to access the favorites feature.

The favorites feature enables you to set a favorite artist, or song. The Radio then uses this information to alert you when either the favorite song, or works by the favorite artist are being played at any time by any of the SiriusXM Channels.

### **Gamezone**

Press the “More...” button and then the “Gamezone” button to access the Gamezone feature. This feature provides you with the ability to Select teams, edit the selection, and set Alerts.

## Replay

The replay function provides a means to store and replay up to 22 minutes of music audio and 48 minutes of talk radio. Once the channel is switched, content in replay memory is lost.

Press the “Replay” button. The Play/Pause, Rewind/Forward and Live buttons will display at the top of the screen, along with the replay time.

You can exit by pressing the “Replay” button any time during the Replay mode.

## Play/Pause

Press the “Pause” or “Play” buttons to pause playing of the content at any time that the content is playing live or rewound content. Play can be resumed again by pressing the “Pause/Play” button.

## Rewind

Press the “RW” button to rewind the content in steps of five seconds. Pressing the “RW” button for more than two seconds rewinds the content. The Radio begins playing the content when the “RW” button is released.

## Forward

Each press of the “FW” button forwards the content in steps of five seconds. Forwarding of the content can only be done when the content is previously rewound, and therefore, can not be done for live content. A continuous press of the “FW” button also forwards the content. The Radio begins playing the content when the “FW” button is released.

## Live

Press the “Live” button to resume playing Live content.



---

# DISC MODE

## CONTENTS

---

■ DISC MODE OPERATION . . . . .	.22	□ Source . . . . .	.24
□ Overview . . . . .	.22	□ Info . . . . .	.24
□ Seek Up/Down. . . . .	.23	□ Shuffle . . . . .	.24
□ Browse. . . . .	.23	□ Audio . . . . .	.24

## DISC MODE OPERATION

### Overview

Disc Mode is entered by either inserting a Disc or by pressing the PLAYER button located left of the display. Once in Player Mode, press the Source button and select "Disc."

A "No Disc" message will be displayed on the screen in the Disc mode when a Disc is not present in the Radio.

### Inserting Compact Disc

Gently insert one Disc into the Disc player with the Disc label facing up. The CD will automatically be pulled into the Disc player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 inch (2.5 cm), a disc may already be loaded and must be ejected before a new disc can be loaded.

If you insert a disc with the ignition ON and the radio ON, the unit will switch to Disc mode and begin to play

the disc. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

### CAUTION!

- **This CD player will accept 4-3/4 inch (12 cm) discs only. The use of other sized discs may damage the CD player mechanism.**
- **Do not use adhesive labels. These labels can peel away and jam the player mechanism.**
- **Uconnect is a single CD player. Do not attempt to insert a second CD if one is already loaded.**
- **Dual-media disc types (one side is a DVD, the other side is a CD) should not be used, and they can cause damage to the player.**

## EJECT Button — Ejecting A Disc



Push the EJECT button to eject the Disc.

If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A disc can be ejected with the radio and ignition OFF.

## Seek Up/Down

Press and release the Seek Up ►► button for the next selection on the Disc. Press and release the Seek Down ◀◀ button to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc is within the first eight seconds of the current selection.

## Fast Seek Up

Press and hold the Seek Up ►► button and the Disc player will begin to fast forward through the current track until the button is released.

## Fast Seek Down

Press and hold the Seek Down ◀◀ button and the Disc player will begin to rewind through the current track until the button is released.

## Browse

Press the “browse” button on the touchscreen to scroll through and select a desired track on the Disc. Press the “exit” button on the touchscreen if you wish to cancel the browse function.



## Source

Press the source button to select the desired audio source: “CD,” “AUX” or “USB.” This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Info

Press the “Info” button to display the current track information. Press the “X” button to cancel this feature.

## Shuffle

Press the “more...” button on the touchscreen then the “shuffle” button on the touchscreen to play the selections on the compact disc in random order to provide an interesting change of pace. Press the “shuffle” button on the touchscreen a second time to turn this feature off.

## Audio

Refer to Operating Instructions — Radio Mode for adjusting the audio settings.

# USB MODE

## CONTENTS

---

■ USB OPERATION . . . . .	.26	□ Source . . . . .	.27
□ Overview . . . . .	.26	□ Info . . . . .	.27
□ Seek Up/Down. . . . .	.26	□ Shuffle . . . . .	.27
□ Browse. . . . .	.26	□ Audio . . . . .	.27

## USB OPERATION

### Overview

USB/iPod Mode is entered by either inserting a USB Jump Drive or an iPod cable into the USB port, or by pushing the PLAYER button located left of the display. Once in Player Mode, press the Sourc" button and select "USB/iPod."

### Inserting USB Device

Gently insert the USB device into the USB Port. If you insert a USB device into the USB port, with the ignition ON and the radio ON, the unit will switch to USB mode and begin to play. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

### Seek Up/Down

Press and release the Seek Up ►► button for the next selection on the USB/iPod device. Press and release the

Seek Down ◀◀ button to return to the beginning of the current selection, or return to the beginning of the previous selection if the USB/iPod device is within the first eight seconds of the current selection.

### Fast Seek Up

Press and hold the Seek Up ►► button on the touchscreen and the USB/iPod device will begin to fast forward through the current track until the button on the touchscreen is released.

### Fast Seek Down

Press and hold the Seek Down ◀◀ button and the USB/iPod device will begin to rewind through the current track until the button is released.

### Browse

Press the Browse button on the touchscreen to select Artist, Albums, Genres, Songs, Playlists or Folders from the USB/iPod device. Once the desired selection is made

you can chose from the available media by pressing the button on the touchscreen. Press the exit button on the touchscreen if you wish to cancel the browse function.

### **Source**

Press the source button on the touchscreen to select the desired audio source, CD, AUX or USB/iPod. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

### **Info**

Press the “Info” button to display the current track information. Press the “X” button to cancel this feature.

### **Shuffle**

Press the “More...” button then the “Shuffle” button to play the selections on the USB/iPod device in random order to provide an interesting change of pace. Press the “Shuffle” button a second time to turn this feature off.

### **Audio**

Refer to Operating Instructions — Radio Mode for adjusting the audio settings.



---

# AUX MODE

## CONTENTS

---

■ AUX MODE OPERATION . . . . .	.30	□ Source . . . . .	.30
□ Overview . . . . .	.30	□ Audio . . . . .	.30

## AUX MODE OPERATION

### Overview

AUX Mode is entered by inserting a AUX device using a cable with a 3.5 mm audio jack into the AUX port or by pushing the PLAYER button located left of the display. Once in Player Mode, press the Source button and select "AUX."

### Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you connect an Auxiliary device with a 3.5 mm stereo cable into the AUX Port, with the ignition ON and the radio ON, the unit will switch to AUX mode and begin to play.

### Controlling The Auxiliary Device

The control of the auxiliary device (e.g., selecting play-lists, play, fast forward, etc.) cannot be provided by the

radio; use the device controls instead. Adjust the volume with the ON/OFF VOLUME rotary knob, or with the volume of the attached device.

**NOTE:** The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

### Source

Press the source button to select the desired audio source: "CD," "AUX" or "USB." This screen will time out after a few seconds and return to the main radio screen if no selection is made.

### Audio

Refer to Operating Instructions — Radio Mode for adjusting the audio settings.

---

# BLUETOOTH MODE

## CONTENTS

---

■ BLUETOOTH OPERATION. . . . .	.32	□ Source . . . . .	.33
□ Overview . . . . .	.32	□ Info . . . . .	.33
□ Seek Up/Down. . . . .	.32	□ Audio . . . . .	.33



## BLUETOOTH OPERATION

### Overview

Bluetooth Streaming Audio (BTSA) or Bluetooth Mode is entered by pairing a Bluetooth device, containing music, to the Uconnect System.

Before proceeding, the Bluetooth device needs to be paired through Uconnect to communicate with the Uconnect System.

**NOTE:** See the pairing procedure in the Owner's Manual on the DVD for more details.

Once the Bluetooth device is paired to the Uconnect System, push the PLAYER button located on the left side of the display. Once in Player Mode, press the Source button and select "Bluetooth."

### Seek Up/Down

Press and release the Seek Up ►► button on the touchscreen for the next selection on the Bluetooth device. Press and release the Seek Down ◀◀ button on the touchscreen to return to the beginning of the current selection, or return to the beginning of the previous selection if the Bluetooth device is within the first eight seconds of the current selection.

### Fast Seek Up

Press and hold the Seek Up ►► button and the Bluetooth device will begin to fast forward through the current track until the button is released.

### Fast Seek Down

Press and hold the Seek Down ◀◀ button and the Bluetooth device will begin to rewind through the current track until the button is released.

## Source

Press the Source button on the touchscreen to select the desired audio source; CD, USB/iPod, AUX or Bluetooth. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

## Info

Press the “Info” button to display the current track information. Press the “Info” button a second time to cancel this feature.

## Audio

Refer to Operating Instructions — Radio Mode for adjusting the audio settings.



---

# MORE & SETTINGS

## CONTENTS

---

■ MORE BUTTON . . . . .	.36	■ SETTINGS BUTTON . . . . .	.38
□ More Main Menu . . . . .	.36	□ Settings Main Menu . . . . .	.38
□ Clock Setting . . . . .	.37	□ Display . . . . .	.39

## MORE BUTTON

### More Main Menu

Push the MORE button to display the More Main Menu. The More Main Menu contains the following options:

#### Economy — If Equipped

Refer to “Understanding Your Instrument Panel/Uconnect System” section in your vehicle Owner’s Manual on the DVD for details.

#### Phone

Refer to “Understanding The Features Of Your Vehicle/Uconnect 4.3” section in your vehicle Owner’s Manual on the DVD for details.

#### Outlet — If Equipped

Refer to “Understanding The Features Of Your Vehicle/Power Inverter” section in your vehicle Owner’s Manual on the DVD for details.

#### Time

Refer to this section for details.

#### Compass

Refer to “Understanding Your Instrument Panel/Uconnect System” section in your vehicle Owner’s Manual on the DVD for details.

## Clock Setting

1. Push the MORE button on the right side of the display, then press the “Time” button. Next, press the “Set” button.

Or,

Push the SETTINGS button on the right side of the display, then press the “Clock” button.

The Time setting screen is displayed and the clock can be adjusted as described in the following procedure.

2. Press the “Up or Down” arrows to adjust the hours or minutes, next select the AM or PM button. You can also select 12hr or 24hr format by pressing the desired button.



Once the time is set press the “Done” button to exit the time screen.

## SETTINGS BUTTON

### Settings Main Menu

Push the SETTINGS button to display the Settings Main Menu. The Settings Main Menu contains the following options:

#### Display

Refer to this section for details.

#### Clock

Refer to this section for details.

#### Safety/Assistance

Refer to “Understanding Your Instrument Panel”, “Uconnect System” section in your vehicle Owner’s Manual on the DVD for details.

### Lights

Refer to “Understanding Your Instrument Panel”, “Uconnect System” section in your vehicle Owner’s Manual on the DVD for details.

### Doors & Locks

Refer to “Understanding Your Instrument Panel”, “Uconnect System” section in your vehicle Owner’s Manual on the DVD for details.

### Heated Seats

Refer to “Understanding The Features Of Your Vehicle”, “Seats” section in your vehicle Owner’s Manual on the DVD for details.

### Engine Off Options

Refer to “Understanding Your Instrument Panel”, “Uconnect System” section in your vehicle Owner’s Manual on the DVD for details.

## Compass Settings

Refer to “Understanding Your Instrument Panel”, “Uconnect System” section in your vehicle Owner’s Manual on the DVD for details.

## Audio

Refer to the Operating Instructions – Radio section in this manual for details.

## Phone/Bluetooth

Refer to “Understanding The Features Of Your Vehicle”, “Uconnect 4.3” section in your vehicle Owner’s Manual on the DVD for details.

## SiriusXM Setup

Refer to the Operating Instructions – Radio section in this manual for details.

## Display

Your Uconnect display can be customized by following the steps:

1. Push the SETTINGS button on the right side of the display.



2. Then press the “Display” button.



The Display Menu shows the following options for you to customize your display:

- **Brightness**

Press the “Brightness” button and use the “+” or “-” buttons to adjust the brightness of the display screen with the headlights on or off.

- **Mode**

Press the “Mode” button to adjust the display screen brightness for Day, Night or Auto selection.

- **Language**

Press the “Language” button to select between English, French or Spanish.

- **Units**

Press the “Units” button to select between U.S. and Metric units of measure.

- **Touchscreen Beep**

Press the “Touchscreen Beep” button to turn the ON or OFF the sound heard when a screen button is pressed.

3. Press the “Exit” button to exit from the Display Menu.



16UC43-526-AB  
Second Edition Rev 1  
Radio 4.3  
Printed in the USA



©2015 FCA US LLC. All Rights Reserved.  
Chrysler, Dodge, Jeep, Ram, Mopar and Uconnect are trademarks of FCA US LLC.  
FIAT is a registered trademark of FCA Group Marketing S.p.A.,  
used under license by FCA US LLC.