



2018 **RENEGADE** QUICK REFERENCE GUIDE

**Jeep**

# STARTING AND OPERATING

## Electric Park Brake (EPB)

Your vehicle is equipped with a new Electric Park Brake System (EPB) that offers greater convenience. The EPB switch is located in the center console.



**Park Brake Switch**

To apply the park brake manually, pull up on the switch momentarily. The BRAKE warning lamp in the instrument cluster and an indicator on the switch will illuminate.

To release the park brake manually, the ignition switch must be in RUN. Then put your foot on the brake pedal and push the park brake switch down momentarily. Once the park brake is fully disengaged, the BRAKE warning lamp and the switch indicator will extinguish.

The park brake can also be automatically released. With the engine running and the transmission in gear, release the brake pedal and depress the throttle pedal. For safety reasons, your seat belt must also be fastened.

### NOTE:

- You may hear a slight whirring sound from the back of the vehicle while the parking brake engages or disengages.
- If your foot is on the brake pedal while you are engaging or disengaging the parking brake, you may notice a small amount of brake pedal movement.
- The new Auto Park Brake feature can be used to apply the park brake automatically every time you park the vehicle. Auto Park Brake can be enabled and disabled in the Settings menu in Uconnect.

- The parking brake can be engaged even when the ignition is OFF, however, it can only be disengaged when the ignition is in the RUN mode.
- Safehold is a new feature that will automatically apply the park brake under certain conditions. The EPB monitors the status of the driver's seat belt, driver's door and pedal positions to determine if the driver may have exited while the vehicle is still capable of moving and will then automatically apply the park brake to prevent the vehicle from rolling.
- The EPB fault lamp will illuminate if the EPB switch is held for longer than 20 seconds in either the released or applied position. The light will extinguish upon releasing the switch.

### Auto Park Brake

The EPB can be programmed to be applied automatically whenever the vehicle speed is below 1.9 mph (3 km/h) and the automatic transmission is placed in PARK, or with a manual transmission, whenever the ignition is

in the OFF mode. Auto Park Brake is enabled and disabled by customer selection through the Customer Programmable Features section of the Uconnect Settings.

Any single Auto Park Brake application can be bypassed by pushing the EPB switch to the release position while the transmission is placed in PARK (automatic transmission) and the ignition is in the RUN mode. In some cases, like Automatic or Dual clutch transmission, when the ignition is in the OFF mode EPB can automatically apply even if it has been previously disabled

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

## Selec-Terrain

Selec-Terrain combines the capabilities of the vehicle control systems, along with driver input, to provide the best performance for all terrains.

### Mode Selection Guide

Rotate the Selec-Terrain knob to select the desired mode.



Selec-Terrain Switch



Selec-Terrain Switch (Trailhawk)

- **AUTO:** This four-wheel drive operation is a continuous operation, is fully automatic and can be used on and off road. This mode balances traction to ensure maneuverability and acceleration improvement compared to a vehicle with two wheel drive. This mode also reduces fuel consumption, since it allows the disconnect of the drive shaft where conditions permit.

- **SNOW:** This mode allows you to have greater stability under conditions of bad weather. It's used on and off road and on surfaces with poor traction, such as roads covered with snow. When in SNOW mode (depending on certain operating conditions), the transmission will use second gear (rather than first gear) during launches, to minimize wheel slippage, except for in 4-Low (Trailhawk models only).
- **SAND:** For off-road driving or use on surfaces with poor traction, such as sandy bottoms. The transmission is set to provide maximum traction. This mode allows more wheel spin and higher shift points to help motor through loose areas.
- **MUD:** For off-road driving or use on surfaces with poor traction, such as roads covered by mud or wet grass.

- **ROCK** (Trailhawk only): This mode is only available in 4WD LOW range. The device sets the vehicle to maximize traction and allow the highest steering capacity for off-road surfaces. This mode gives you the maximum performance off-road. Use for low speed obstacles such as large rocks, deep ruts, etc.

**NOTE:**

- Rock mode is only available on the vehicles equipped with the Trailhawk package.
- Activate the Hill Descent Control or Selec Speed Control for steep downhill control.

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

## PASSIVE ENTRY

### Keyless Enter-N-Go – If Equipped

The Passive Entry system is an enhancement to the vehicle's Remote Keyless Entry system and a feature of Keyless Enter-N-Go. This feature allows you to lock and unlock the vehicle's door(s) without having to push the key fob lock or unlock buttons.

**NOTE:**

- Passive Entry can be enabled or disabled.
- If wearing gloves on your hands, or if it has been raining/snowing on the Passive Entry door handle, the unlock sensitivity can be affected, resulting in a slower response time.
- If the vehicle is unlocked by the Passive Entry Door Handle, and no door is opened within 60 seconds, the vehicle will re-lock and if equipped, the security alarm will arm.

- The key fob may not be able to be detected by the vehicle keyless-go system if it is located next to a mobile phone, laptop or other electronic device; these devices may block the key fob's wireless signal and prevent the keyless-go system from starting the vehicle.
- For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

## To Unlock From The Driver's Or Passenger's Side Doors

With a valid Passive Entry key fob within 5 ft (1.5 m) of the driver's door handle, grab the front driver door handle to unlock the driver's door automatically.



Grab The Door Handle To Unlock

### NOTE:

If "Unlock All Doors 1st Press" is programmed, all doors will unlock when you grab hold of the front driver's door handle."

## To Unlock From The Passenger Side

With a valid Passive Entry key fob within 5 ft (1.5 m) of the passenger door handle, grab the front passenger door handle to unlock all four doors and the liftgate automatically.

### NOTE:

All doors will unlock when the front passenger door handle is grabbed regardless of the driver's door unlock preference setting ("Unlock Driver Door 1st Press" or "Unlock All Doors 1st Press").

## To Lock The Vehicle's Doors And Liftgate

With one of the vehicle's Passive Entry key fobs within 5 ft (1.5 m) of the driver or passenger front door handles, push the door handle lock button to lock all four doors.

Do NOT grab the door handle when pushing the door handle lock button. This could unlock the door(s).



**Push The Door Handle Button To Lock**



**DO NOT Grab The Door Handle When Locking**

**NOTE:**

The Passive Entry system will not operate if the key fob battery is dead.

The vehicle doors can also be locked by using the lock button located on the vehicle's interior door panel.

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

# LIFTGATE

## Opening

To unlock the liftgate, use the key fob or activate the power door lock switches located on the driver door handle.

To open the liftgate, squeeze the electronic liftgate release and pull the liftgate open with one fluid motion.

The Liftgate Passive Entry unlock feature is built into the Electronic Liftgate release. With a valid Passive Entry key fob within 5 ft (1.5 m) of the Liftgate, push the Electronic Liftgate release to open with one fluid motion.



**Passive Entry Liftgate Handle Location**

- 1 — Liftgate Handle
- 2 — Liftgate Passive Entry Location

## Closing

Grasp the liftgate closing handle and initiate lowering the liftgate. Release the handle when the liftgate takes over the closing effort.

### **NOTE:**

Before closing the liftgate, make sure to be in possession of the key because the liftgate may be locked.

### **To Lock The Liftgate**

With a valid Passive Entry key fob within 5 ft (1.5 m) of the liftgate, pushing the Keyless Enter-N-Go — Passive Entry lock button located to the right of the outside handle release will lock the vehicle.

### **NOTE:**

The liftgate unlock feature is built into the electronic liftgate release.

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

## MY SKY SUN ROOF

### Power MySky Retractable Roof

#### To Open/Close The Front Panel

The power MySky switches are located on the overhead console. The switches are used to open and close the front panel.

#### Venting The Front Panel


To vent the front panel push and release the vent switch. During the vent operation, any push on the open/close switch will stop the closing of the panel.

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

## WINDSHIELD WIPER/WASHER FEATURES

### Front Wiper Operation

The windshield wiper/washer controls are located on the lever on the right side of the steering column.

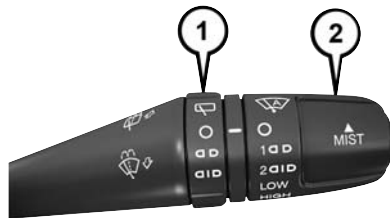

#### Windshield Wiper Stalk

- 1 — Rear Wiper Operation
- 2 — Front Wiper Operation

### Front Wiper Operation

The front wipers are operated by rotating a switch, located on the end of the lever.

### Rear Wiper Operation

The rear wiper/washer is operated by rotating a switch, located at the middle of the lever.

#### NOTE:

When the front wipers are activated and reverse gear is engaged, the rear wiper will activate to clear the rear window.

### Rain Sensing Wipers — If Equipped

This feature senses moisture on the windshield and automatically activates the wipers for the driver. The feature is especially useful for road splash or overspray from the windshield washers of the vehicle ahead. Rotate the end of the multifunction lever to one of two settings to activate this feature. Rain Sensing Wipers are activated through the Uconnect Settings.

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).



## PARKVIEW

### **Parkview Rear Back-Up Camera**

You can see an on-screen image of the rear of your vehicle whenever the transmission is shifted into REVERSE. The ParkView Rear Back-Up Camera image will be displayed on the Uconnect Display, located on the center stack of the instrument panel.

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

## LIGHTS

### **Front Fog Lights – If Equipped**

The front fog light switch is built into the headlight switch.

To activate the front fog lights, turn on the parking lights or the low beam headlights and push the fog light button on the headlight switch. To turn off the front fog lights, push the fog light button on the headlight switch a second time or turn off the headlight switch.

An indicator light in the instrument cluster illuminates when the fog lights are turned on.

#### **NOTE:**

The fog lights will operate with the low beam headlights or parking lights on. Selecting the high beam headlights will turn off the fog lights.

### **Cornering Lights**

The cornering lights are a feature to improve visibility at night while turning the vehicle. When activated, a light incorporated in the front fog light will illuminate on the side of the vehicle the steering wheel is rotated or the turn signal indicator is on. It can be activated through the Uconnect System.

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

## SAFETY FEATURES

### Forward Collision Warning With Mitigation – If Equipped

The Forward Collision Warning (FCW) system provides the driver with active braking, audible and visual warnings [within the instrument cluster display] and may apply a brake jerk to warn the driver when it detects a potential frontal collision. The warnings and limited braking are intended to provide the driver with enough time to react and avoid or mitigate the potential collision.

FCW monitors the information from the forward-looking sensor, as well as the Electronic Brake Controller (EBC) to calculate a probable collision. When the system determines that a collision is probable, a warning message (both audible and visual) will be displayed within the cluster display along with a brake jerk warning (previously enabled in the Uconnect Settings). When the system senses the driver applying the brakes to avoid a probable collision, additional brake force will be

provided to the vehicle. When the system determines a collision with the vehicle in front of you is no longer probable, the warning message will be deactivated.

#### NOTE:

The FCW feature can be customized and turned off through the Uconnect System touchscreen.

For further information, and applicable warnings and cautions, please refer to the Owner's Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

### Blind Spot Monitoring – If Equipped

The Blind Spot Monitoring (BSM) system uses two radar-based sensors, located inside the rear bumper fascia, to detect highway licensable vehicles (automobiles, trucks, motorcycles, etc.) that enter the blind spot zones from the rear/front/side of the vehicle.

### Rear Cross Path

The Rear Cross Path (RCP) feature is intended to aid the driver when backing out of parking spaces where their vision of oncoming vehicles may be blocked. Proceed slowly and cautiously out of the parking space until the rear end of the vehicle is exposed. The RCP system will then have a clear view of the cross traffic and if an oncoming vehicle is detected, alert the driver.

#### Mode Of Operation

Three selectable modes of operation are available in the Uconnect System. They are available through the Uconnect System.

#### Blind Spot Monitoring Fault Warnings

Sensor Blinded – In the case of a sensor blinded:

- BSM Mirror Warning Lights are turned on continuously.
- An instrument cluster message will display “Blind Spot Monitoring Unavailable - Wipe Rear Bumper Corners.”

System Not Available – In the case of the system being temporary unavailable:

- BSM Mirror Warning Lights are turned on continuously.
- An instrument cluster message will display “Blind Spot Monitoring Temporary Unavailable.”

In the case of the system being completely unavailable:

- A chime will turn on.
- An instrument cluster message will display “Blind Spot Monitoring Unavailable - Service Required.”

For further information, and applicable warnings and cautions, please refer to the Owner’s Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

## LaneSense – If Equipped

The LaneSense system is operational at speeds above 37 mph (60 km/h) and below 112 mph (180 km/h). The LaneSense system uses a forward looking camera to detect lane markings and measure vehicle position within the lane boundaries.

### Turning LaneSense On Or Off

The default status of LaneSense is “off”. The LaneSense button is located on the center stack.

### LaneSense Warning Message

The LaneSense system will indicate the current lane drift condition through the instrument cluster display. The instrument cluster display will provide a visual warning depicting the unintentional lane departure.

When both lane markings are detected and the driver unintentionally drifts out of the lane (no turn signal applied), the LaneSense system provides a haptic warning in the form of torque applied to the steering wheel to prompt the driver to remain within the lane boundaries.

The driver may manually override the haptic warning by applying torque into the steering wheel at any time. When only a single lane marking is detected and the driver unintentionally drifts across the lane marking (no turn signal applied), the LaneSense system provides a visual warning through the instrument cluster display to prompt the driver to remain within the lane. When only a single lane marking is detected, a haptic (torque) warning will not be provided.

### NOTE:

The LaneSense system can be customized and turned off through the Uconnect System touchscreen.

For further information, and applicable warnings and cautions, please refer to the Owner’s Manual at [www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. Residents) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian Residents).

## FRONT USB PORT/AUDIO JACK (AUX) PORT

### USB Port



Front USB Port And AUX Jack

- 1 — USB Port
- 2 — AUX Jack

This feature allows an iPod or external USB device to be plugged into the USB port. The USB port supports certain iPod and iPhone devices. The USB port also supports playing music from external USB devices. Some iPod software versions may not fully support the USB port features. Please visit Apple's website for iPod software updates. Connect your iPod or compatible device using a USB cable connected to the USB port. USB memory sticks with audio files can also be used. Then, audio

from the device can be played on the vehicle's sound system while providing the artist, track title, and album information on the radio display (if available on device). When connected, the iPod/USB device can be controlled using the radio or steering wheel audio controls to play, skip to the next or previous track, browse, and list the contents.

### AUX/Audio Jack

The AUX/audio jack provides a means to connect a portable audio device, such as an MP3 player, to the vehicle's sound system. This requires the use of a 3.5 mm stereo audio patch cable. AUX mode is entered by pushing the Media button. Once in Media mode, select the AUX button when the audio jack is connected. Volume on the connected device may need to be adjusted to optimize audio quality.

## SIRIUSXM GUARDIAN — IF EQUIPPED

### Activation

To use SiriusXM Guardian emergency, remote and security services, you must activate your SiriusXM Guardian account.

1. Press the Apps icon on the bottom of your in-vehicle touchscreen.
2. Select the "Activate Services" icon from your list of apps.
3. Select "Customer Care" to speak with a SiriusXM Guardian Customer Care agent who will activate services in your vehicle, or select "Enter Email" to activate on the web.

Once you have activated your services, you're only a few steps away from using remote services.



**Mobile App**

To use SiriusXM Guardian remote services, download the Uconnect Mobile app:

- Once downloaded, use your Owner Account login and password to open the app.
- Include similar language: You will use your SiriusXM Guardian PIN to execute these remote services.

- Press the “Location” button on the bottom menu bar of the app to bring up a map to locate your vehicle or send a location to your Uconnect Navigation, if equipped.
- Press the “Settings” side menu in the upper left corner of the app to bring up app settings and access the Assist Call Centers.

For further information:

- U.S. residents visit: [siriusxm.com/guardian](http://siriusxm.com/guardian)
- Canadian residents visit: [siriusxm.ca/guardian/](http://siriusxm.ca/guardian/)

## Features

SiriusXM Guardian keeps you connected to your vehicle. You have access to safety, remote and security services.

### In-Vehicle Features

SiriusXM Guardian enhances your ownership and driving experience by connecting your vehicle to an operable network. When connected to an operable network, you have access to:

- SOS Call: Connect to a live agent who contact emergency services and stays on the line with you until help arrives.
- Customer Care Assistance: Speak with a live agent when you press the ASSIST button on your rearview mirror to get Roadside Assistance or support.

### Remote Services

SiriusXM Guardian helps you activate features from a distance. The remote services are:

- Vehicle Finder helps you find where you parked your car.
- Send & Go allows you to send preset destinations to your navigation system for easy access on the go.
- Remote Door Lock/Unlock lets you unlock or lock your doors from any distance.
- Remote Horn & Lights allows you to sound your horn and flash your lights to easily find your car.
- Receive monthly Vehicle Health Reports, and Alerts whenever a problem is detected under the hood.

## Security Services

The Uconnect Mobile App helps you activate features from a distance. The remote services are:

- Receive text or email notifications if your vehicle's security alarm goes off.
- Receive stolen vehicle assistance, using GPS technology to help authorities locate your vehicle if it is stolen.

SiriusXM Guardian remote services can be used with the Uconnect app from virtually anywhere.

For further information on SiriusXM Guardian or the Uconnect Mobile App, refer to your Uconnect Owner's Manual Supplement.

## Vehicle Finder And Send & Go

Two of the most convenient remote features of the Uconnect Mobile App are Vehicle Finder and Send & Go.

### Vehicle Finder

Vehicle Finder allows you to find the location of your vehicle when you have lost it. You can also sound the alarm and flash the lights to make finding your vehicle even easier. To find your vehicle:

1. Press the "Location" tab on the Uconnect Mobile App bottom bar.
2. Select the "Vehicle" icon to determine the location of your vehicle.
3. Select the "Find Route" button that appears, once your vehicle is located.
4. Select your preferred Navigation App to route a path to your vehicle.

### Send & Go

Send & Go allows you to search for a destination on your mobile device and then send the route to your vehicle's built-in navigation system. To send a navigation route to your vehicle:

1. Press the "Location" tab on the Uconnect Mobile App bottom bar.
2. Either type in the destination you would like to navigate to, or search through one of the categories provided.
3. Select the destination you want to route to from the list that appears.
4. Press the "Send To Vehicle" button, and then confirm the destination by pressing "Yes," to send the navigation route to the Uconnect Navigation in your vehicle.
5. Finally, confirm the route inside your vehicle by pressing the "Go Now" option on the pop-up that appears on the touchscreen, when the vehicle is started.

# JEEP VEHICLE OWNERS MOBILE APP

## NOTE:

The Owner's Mobile App content is applicable to vehicles sold in the U.S. market and are not available from the Canadian App Store or Google Play Store.

## Key Features

- Owner Information For Your Vehicle
- Accident Assistant
- Online Service Scheduling
- Roadside Assistance
- Maintenance History
- And More

To get this FREE application, go directly to the App Store or Google Play Store and enter the search keyword "Jeep".

The Jeep Vehicle Owner's Information Application is the essential app for owners of Jeep brand vehicles. The app puts driver and lifestyle information right in the palm of your hand, anywhere you go. Whether it's providing information about specific product features, taking a tour through your vehicle's equipment, stay-

ing up to date on your vehicle's health, knowing what steps to take following an accident, or scheduling your next appointment, we know you'll find the app an important extension of your Jeep vehicle. Simply download the FREE app, select your make and model and enjoy the ride.

## Features/Benefits

- Available for free on iOS and Android smartphones and tablets.
- Select Jeep brand vehicles from model year 2011 to current model year.
- You can also add other Chrysler, Dodge, Ram, FIAT, or Alfa Romeo vehicles.\*
- Easy access to vehicle information anywhere you go using categories, bookmarks, search and an A-Z index.
- Vehicle information such as operating instructions, maintenance, service history, vehicle controls and emergency procedures.
- Find a dealer or an FCA-certified repair facility.

- Easily document and email an accident report.
- A parking reminder that allows you to drop a pin on your location and navigate back to your vehicle.
- Contact customer care with one click.
- Access to vehicle heritage, parts, accessories, and social media networks.
- Schedule your next service appointment.
- Available in English and Spanish.

\*App supports selected vehicles from model year 2011 to present.

To get this FREE application, go directly to the App Store or Google Play Store and enter the search keyword "Jeep".



Whether it's providing information about specific product features, taking a tour through your vehicle's heritage, knowing what steps to take following an accident, or scheduling your next appointment, we know you'll find the app an important extension of your Jeep® brand vehicle. Simply download the app, select your make and model and enjoy the ride.

To get this app, go directly to the App Store or Google Play and enter the search keyword "JEEP" (U.S. residents only).

[www.jeep.com/en/owners](http://www.jeep.com/en/owners) (U.S.) provides special offers tailored to your needs, customized vehicle galleries, personalized service records and more. To get this information, just create an account and check back often.

Get warranty and other information online – you can review and print or download a copy of the Owner's Manual, Navigation/Uconnect manuals and the limited warranties provided by FCA US LLC for your vehicle by visiting [www.mopar.com](http://www.mopar.com) (U.S.) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canada). Click on the applicable link in the "Popular Topics" area of the [mopar.com](http://www.mopar.com) (U.S.) or [www.owners.mopar.ca](http://www.owners.mopar.ca) (Canada) homepage and follow the instructions to select the applicable year, make and model of your vehicle.

**DOWNLOAD A FREE ELECTRONIC COPY** of the most up-to-date Owner's Manual, media and warranty booklet by visiting:

[www.mopar.com/en-us/care/owners-manual.html](http://www.mopar.com/en-us/care/owners-manual.html) (U.S. residents);

[www.owners.mopar.ca](http://www.owners.mopar.ca) (Canadian residents).

[Jeep.com](http://Jeep.com) (U.S.)

[Jeep.ca](http://Jeep.ca) (Canada)



18BU-ORG-AA  
**RENEGADE**  
Second Edition  
Quick Reference Guide