


Jeep® Gladiator

QUICK START GUIDE

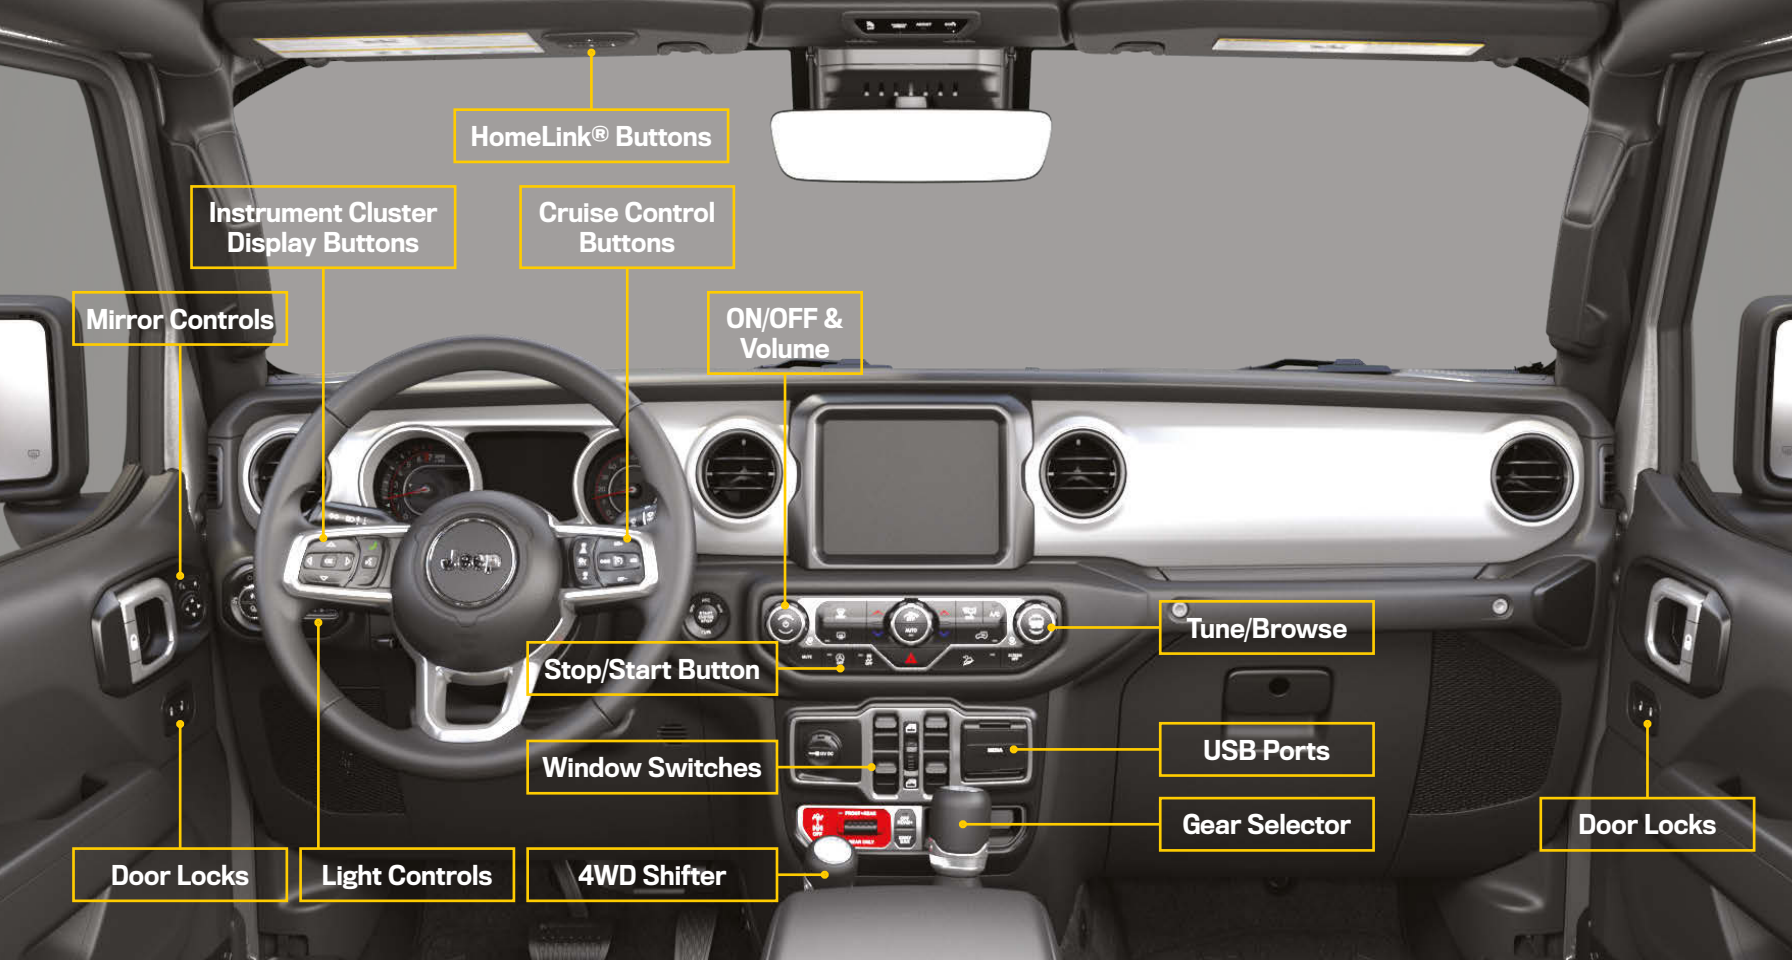





HomeLink®

GARAGE DOOR OPENER



- 1 While the car is ON, hold the handheld garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle.
- 2 Push and hold both the HomeLink® button being programmed and the button on the garage door transmitter.

TO ERASE ALL SET CHANNELS:

Push and hold the two outside HomeLink® buttons for 20 seconds until the orange indicator flashes. An individual channel cannot be erased.



ROLLING OR NON-ROLLING?

Check your garage door opener motor in your garage for a “LEARN” or “TRAIN” button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

- 3 **For Non-Rolling Code** garage door openers, watch for the indicator light to go constant.
For Rolling Code garage door openers, watch for the indicator light to go from a slow blink to blinking rapidly.
- 4 **For Rolling Code** garage door openers only, firmly push and release the “LEARN” or “TRAIN” button on your garage door opener motor in your garage, then push the HomeLink® button in your vehicle for two long presses.
- 5 If the programming was successful, your garage door should open and close with your chosen HomeLink® button.

For more detailed connecting instructions, see “Universal Garage Door Opener (HomeLink®)” in your Owner’s Manual. Please call 1-800-355-3515 if you require assistance.



Lights & Wipers Operation




PUSH
TO ACTIVATE **HIGH BEAMS**

PULL
FOR **FLASH-TO-PASS**



WHY DID MY HIGH BEAMS TURN ON?

If your vehicle is equipped with Auto High Beams, they'll turn on automatically in specific light levels. You can turn this feature on or off through your radio.

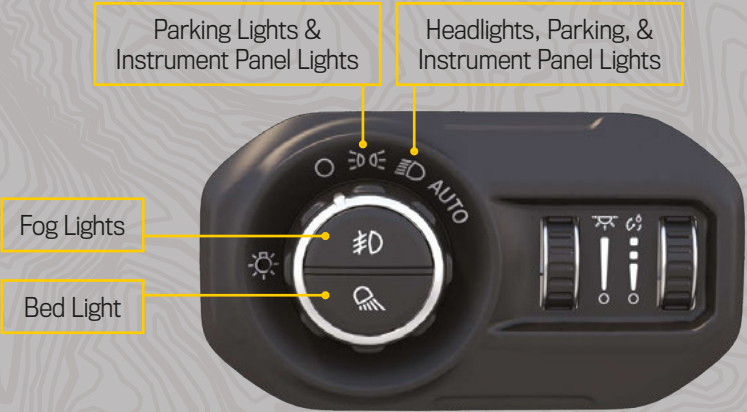

PUSH UP
TO **MIST** THE WINDSHIELD

PULL
TO ACTIVATE THE **WINDSHIELD WASHER**



Connected Services

WITH CONNECTED SERVICES YOU CAN...



Lock Your Vehicle



Unlock Your Vehicle



Remote Start Your Vehicle



Cancel Remote Start



Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES

- ① Press "Apps" on the touchscreen.
- ② Press "Activate Services".
- ③ Press "Activate Now".
- ④ There are two ways to activate: via email or via an agent. On the next page, you can either enter your name and email, or press "Call An Agent" to directly speak with someone.

TIP:

You can use your remote commands from the Uconnect App, your Owner's Site account, or by calling an agent.

However, not all remote commands will work when calling the agent.

Mopar® YOUR Way

REAP THE BENEFITS OF YOUR OWNER'S PROFILE

Get an online experience all on your own—tailored to you and your vehicle—accessible anytime, anywhere.



24/7 Access to Everything You Need



Custom dashboard for every vehicle in your garage



Access to your vehicle's owner's manual, warranty & more



Ability to set preferred dealer & schedule service with ease



Maintenance records and up-to-date vehicle health reports**



Special offers on exceptional Mopar® service at your dealership



Remote vehicle commands right from your mobile device**

**Requires an active SiriusXM Guardian™ subscription

*Canadian residents aren't required to create a profile, as one is created when a SiriusXM Guardian™ account is activated.

UTILIZE YOUR SERVICES & OWNER PROFILE

Pair a Phone

1

Make sure Bluetooth® is enabled on your mobile device.

2

With the vehicle in the ACC or ON/RUN position, press the Phone button in the vehicle's touchscreen menu bar.

3

Press "Pairing" and then press "Paired Phones and Audio Devices".

4

Select "Add Device" then follow the prompts on your phone and in the touchscreen.

KEEP IN MIND:

Some mobile phones will require you to enter a PIN as part of the connection process.

For more detailed connecting instructions, refer to "Phone Operation" in your Uconnect radio book.



Ready to **remove** a phone or audio device?



- ① Press the "Pairing" button on the touchscreen.
- ② Press "Paired Phones and Audio Devices".
- ③ Press "Settings" next to the phone or device you want to remove.
- ④ Press "Delete Device".
- ⑤ Press "X" to exit the settings screen. The device should be removed.

YOU MAY ALSO BE ABLE TO **CONNECT YOUR APPS**

If your vehicle is equipped with Android Auto™ & Apple CarPlay®, connect your unlocked smartphone to one of the media USB ports in your vehicle.

Once connected and recognized, the Android™ or CarPlay® icon will replace the phone icon on your personalized menu bar.

KEEP IN MIND:



For Android™ Users, if the Android Auto™ app was not previously downloaded, it will download the first time you plug in your device.



For Apple® Users, Apple CarPlay® is only compatible with iPhone5® or later and requires Siri being enabled in Settings.

4x4 Operation

FIVE-POSITION TRANSFER CASE

2WD HIGH

Used for normal street and highway driving.

4WD HIGH AUTO

Sends power to the front wheels.

4WD HIGH PT

Forces the front and rear wheels to rotate at the same speed.

NEUTRAL

Used for flat towing behind another vehicle.

4WD LOW

Provides low speed four-wheel drive. Forces the front and rear wheels to rotate at the same speed.

If your vehicle is equipped with a four-position transfer case, see "Four-Wheel Drive Operation" in your Owner's Manual.



AXLE LOCK


To unlock the axles, push the axle lock **OFF** button.

TIP:

When the rear axle is locked, pushing the switch down again will lock or unlock the front axle.

OFF ROAD+

When activated, the vehicle's performance will improve depending on which 4WD mode is activated.

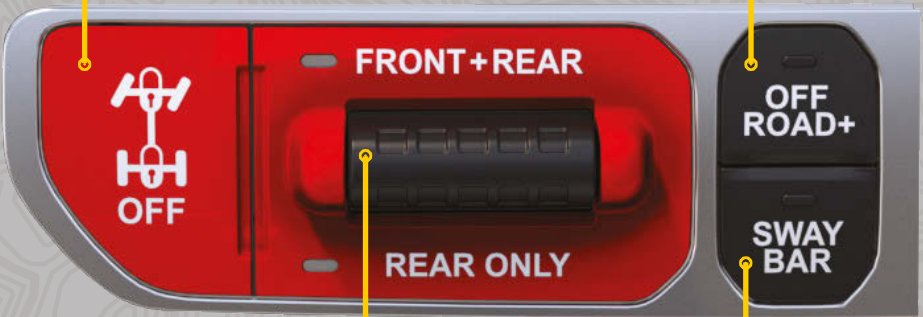

AXLE LOCK SWITCH

- ▲ Push the switch up to lock the front axle & rear axle.
- ▼ Push the switch down to lock the rear axle only.

SWAY BAR DISCONNECT

Shift to either 4WD High or 4WD Low and push the **SWAY BAR** button.


KEEP IN MIND:

Sway Bar Disconnect should be off during normal driving conditions.



Top & Door Removal

Hard Top

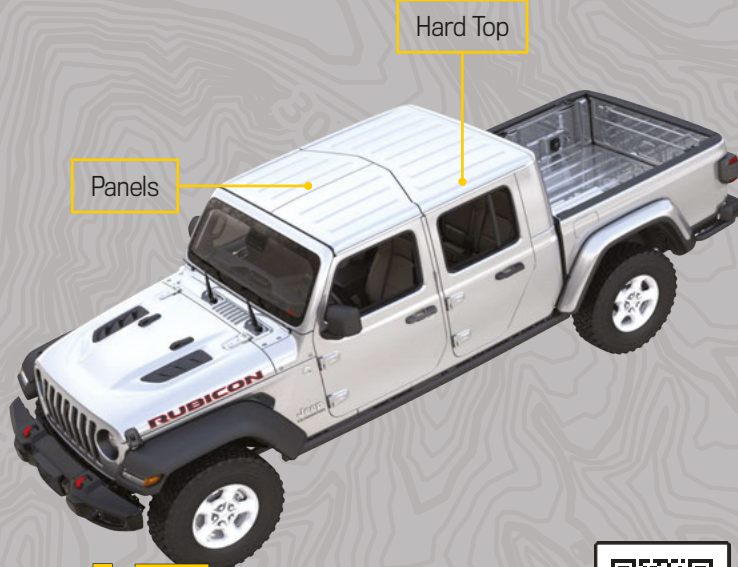

**HARD TOP
INSTALL / REMOVE**

**READY TO REMOVE
YOUR DOORS?**




**FRONT DOOR
REMOVAL**



**REAR DOOR
REMOVAL**

Soft Top

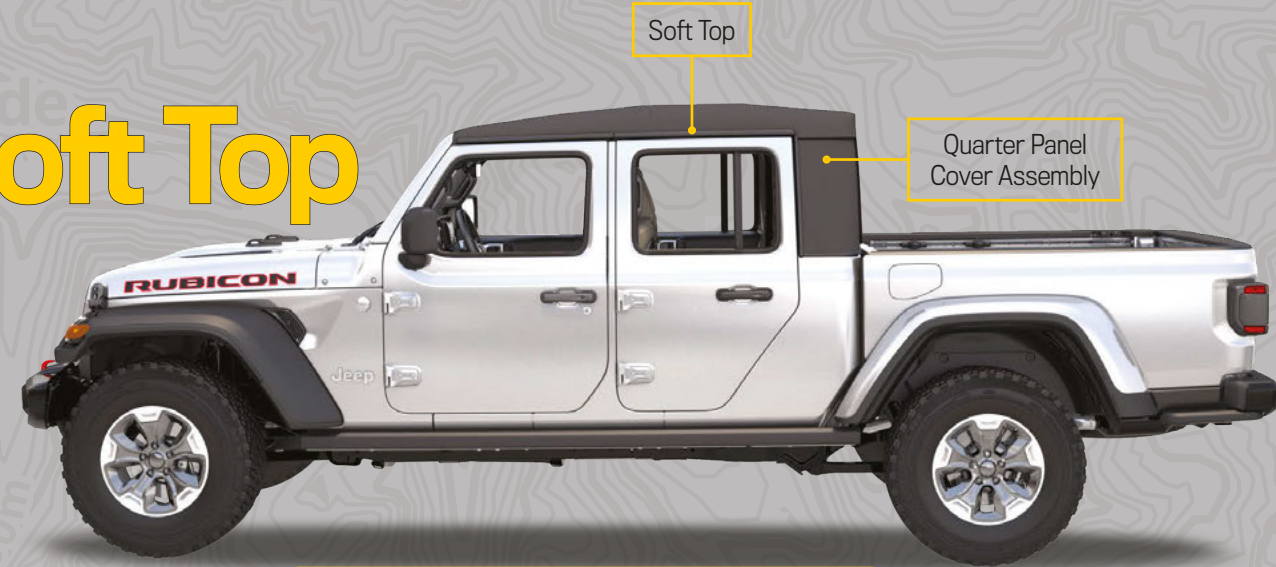

RAISING


















































 









LOWERING



**INSTALL/
REMOVE**

REMOVE YOUR DOORS & TOP

Warning & Indicator Lights

	Air Bag		Battery Charge		Brake		Door Open		Electric Power Steering Fault
	Electronic Throttle Control (ETC)		Engine Coolant Temperature		Hood Open		Oil Pressure		Oil Temperature
	Seat Belt Reminder		Transmission Temperature		Vehicle Security		4WD		4WD Low
	4WD Part Time		Anti-Lock Brake System (ABS)		Axle Locker Fault		Cargo Light On		Cruise Control Fault
	Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF		Engine Check/Malfunction Indicator		Forward Collision Warning OFF		Front And Rear Axle Lock
	Loose Fuel Filler Cap		Low Diesel Exhaust Emissions Additive		Low Fuel		Low Washer Fluid		Neutral
	Off-Road+		Rear Axle Lock		Service 4WD		Service Adaptive Cruise Control		Service Forward Collision Warning (FCW)
	Service Stop/Start System		Sway Bar		Sway Bar Fault		Tire Pressure Monitoring System (TPMS)		Wait To Start
	Water In Fuel		4WD Auto		Adaptive Cruise Control (ACC) Set Without Target		Adaptive Cruise Control (ACC) Set With Target		Cruise Control Set With Premium Cluster
	Front Fog		Parking/Headlights On		Stop/Start Active		Turn Signal		2WD High
	Adaptive Cruise Control Ready Base Cluster		Adaptive Cruise Control Ready Premium Cluster		Adaptive Cruise Control Set With Base Cluster		Cruise Control Ready		Cruise Control Set With Base Cluster
	Selec - Speed Control (SSC)		High Beam						

For additional information on any of the topics in this publication, please refer to your Owner's Manual.