



> 2014 **CHARGER** // USER GUIDE

Includes SRT

DODGE 



> IMPORTANT

This User Guide is intended to familiarize you with the important features of your vehicle. **The DVD enclosed contains your Owner's Manual, Navigation/Uconnect® Manuals, Warranty Booklets, Tire Warranty and Roadside Assistance (new vehicles purchased in the U.S.) or Roadside Assistance (new vehicles purchased in Canada) in electronic format.** We hope you find it useful. Replacement DVD kits may be purchased by visiting www.techauthority.com.
Copyright 2016 FCA US LLC.

If you are the first registered retail owner of your vehicle, you may obtain a complimentary printed copy of the Owner's Manual, Navigation/Uconnect® Manuals or Warranty Booklet by calling 1-800-423-6343 (U.S.) or 1-800-387-1143 (Canada) or by contacting your dealer.

The driver's primary responsibility is the safe operation of the vehicle. Driving while distracted can result in loss of vehicle control, resulting in a collision and personal injury. Chrysler Group LLC strongly recommends that the driver use extreme caution when using any device or feature that may take their attention off the road. Use of any electrical devices such as cell phones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous and could lead to a serious collision. Texting while driving is also dangerous and should never be done while the vehicle is moving. If you find yourself unable to devote your full attention to vehicle operation, pull off the road to a safe location and stop your vehicle. Some States or Provinces prohibit the use of cellular telephones or texting while driving. It is always the driver's responsibility to comply with all local laws.

TABLE OF CONTENTS

INTRODUCTION/WELCOME

| | |
|---|---|
| WELCOME FROM CHRYSLER GROUP LLC | 2 |
|---|---|

CONTROLS AT A GLANCE

| | |
|------------------------------|---|
| DRIVER COCKPIT | 4 |
| INSTRUMENT CLUSTER | 6 |

GETTING STARTED

| | |
|---|----|
| KEY FOB | 8 |
| REMOTE START | 10 |
| KEYLESS ENTER-N-GO™ | 10 |
| TRUNK LOCK AND RELEASE | 14 |
| VEHICLE SECURITY ALARM | 14 |
| SEAT BELT | 15 |
| SUPPLEMENTAL RESTRAINT SYSTEM (SRS) – AIR BAGS | 16 |
| CHILD RESTRAINTS | 18 |
| FRONT SEATS | 23 |
| REAR SEATS | 25 |
| HEATED/VENTILATED SEATS | 26 |
| HEATED AND COOLED CUPHOLDERS | 27 |
| HEATED STEERING WHEEL | 28 |
| ADJUSTABLE PEDALS | 29 |
| TILT/TELESCOPING STEERING COLUMN | 30 |

OPERATING YOUR VEHICLE

| | |
|--|----|
| ENGINE BREAK-IN RECOMMENDATIONS | 31 |
| TURN SIGNAL/WIPER/WASHER/ HIGH BEAM LEVER | 32 |
| HEADLIGHT SWITCH | 33 |
| SPEED CONTROL | 34 |
| ELECTRONIC SHIFTER – 3.6L ENGINE | 39 |
| TRANSMISSION MODES/AUTOSTICK® | 40 |
| CLIMATE CONTROLS | 42 |
| POWER SUNROOF | 45 |
| WIND BUFFETING | 47 |

ELECTRONICS

| | |
|---|----|
| YOUR VEHICLE'S SOUND SYSTEM | 48 |
| IDENTIFYING YOUR RADIO | 50 |
| Uconnect® 4.3 & 4.3S AT A GLANCE | 51 |
| Uconnect® 8.4 & 8.4N AT A GLANCE | 52 |
| RADIO | 54 |
| SiriusXM SATELLITE RADIO | 55 |
| iPod®/CD/AUX CONTROLS | 58 |
| GARMIN® NAVIGATION | 60 |
| SiriusXM TRAVEL LINK | 63 |
| STEERING WHEEL AUDIO CONTROLS | 64 |
| PLAYING iPod®/USB/MP3 DEVICES | 64 |
| Uconnect® PHONE | 66 |
| Uconnect® VOICE COMMAND | 71 |
| ELECTRONIC VEHICLE INFORMATION CENTER (EVIC) | 74 |
| PROGRAMMABLE FEATURES | 75 |
| UNIVERSAL GARAGE DOOR OPENER | 76 |
| POWER OUTLET | 79 |

UTILITY

| | |
|--|----|
| TRAILER TOWING WEIGHTS (MAXIMUM TRAILER WEIGHT RATINGS) | 80 |
| RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.) | 80 |

SRT

| | |
|---|----|
| AUTOSTICK® | 81 |
| ELECTRONIC CONTROL DAMPING SYSTEM | 82 |
| SRT PERFORMANCE FEATURES | 83 |
| SUMMER/THREE-SEASON TIRES | 85 |

WHAT TO DO IN EMERGENCIES

| | |
|--|-----|
| ROADSIDE ASSISTANCE | 86 |
| INSTRUMENT CLUSTER WARNING LIGHTS | 86 |
| IF YOUR ENGINE OVERHEATS | 90 |
| JACKING AND TIRE CHANGING | 91 |
| TIREFIT KIT | 97 |
| BATTERY LOCATION | 103 |
| JUMP-STARTING | 103 |
| SHIFT LEVER OVERRIDE – 5 SPEED TRANSMISSION | 105 |
| TOWING A DISABLED VEHICLE | 108 |
| FREEDOM A STUCK VEHICLE | 109 |
| EVENT DATA RECORDER (EDR) | 110 |

MAINTAINING YOUR VEHICLE

| | |
|-------------------------------------|-----|
| OPENING THE HOOD | 111 |
| FUEL DOOR RELEASE | 112 |
| ENGINE COMPARTMENT | 114 |
| FLUIDS AND CAPACITIES | 117 |
| MAINTENANCE SCHEDULE | 120 |
| SRT MAINTENANCE SCHEDULE | 125 |
| FUSES | 130 |
| TIRE PRESSURES | 135 |
| WHEEL AND WHEEL TRIM CARE | 136 |
| EXTERIOR BULBS | 137 |

CONSUMER ASSISTANCE

| | |
|--|-----|
| CHRYSLER GROUP LLC CUSTOMER CENTER | 138 |
| CHRYSLER CANADA INC. CUSTOMER CENTER | 138 |
| ASSISTANCE FOR THE HEARING IMPAIRED | 138 |
| PUBLICATIONS ORDERING | 138 |
| REPORTING SAFETY DEFECTS IN THE UNITED STATES | 139 |

MOPAR® ACCESSORIES

| | |
|---|-----|
| AUTHENTIC ACCESSORIES BY MOPAR® | 140 |
|---|-----|

FREQUENTLY ASKED QUESTIONS

| | |
|-----------------|-----|
| FAQ's | 141 |
|-----------------|-----|

| | |
|-----------------|-----|
| INDEX | 142 |
|-----------------|-----|

INTRODUCTION/WELCOME

WELCOME FROM CHRYSLER GROUP LLC

Congratulations on selecting your new Chrysler Group LLC vehicle. Be assured that it represents precision workmanship, distinctive styling, and high quality - all essentials that are traditional to our vehicles.

Your new Chrysler Group LLC vehicle has characteristics to enhance the driver's control under some driving conditions. These are to assist the driver and are never a substitute for attentive driving. They can never take the driver's place. Always drive carefully.

Your new vehicle has many features for the comfort and convenience of you and your passengers. Some of these should not be used when driving because they take your eyes from the road or your attention from driving. Never text while driving or take your eyes more than momentarily off the road.

This guide illustrates and describes the operation of features and equipment that are either standard or optional on this vehicle. This guide may also include a description of features and equipment that are no longer available or were not ordered on this vehicle. Please disregard any features and equipment described in this guide that are not available on this vehicle. Chrysler Group LLC reserves the right to make changes in design and specifications and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

This User Guide has been prepared to help you quickly become acquainted with the important features of your vehicle. It contains most things you will need to operate and maintain the vehicle, including emergency information.

The DVD includes a computer application containing detailed owner's information which can be viewed on a personal computer or MAC computer. The multimedia DVD also includes videos which can be played on any standard DVD player (including the Uconnect[®] Touchscreen Radios). Additional DVD operational information is located on the back of the DVD sleeve.

For complete owner information, refer to your Owner's Manual on the DVD in the owner's kit provided at the time of new vehicle purchase. For your convenience, the information contained on the DVD may also be printed and saved for future reference.

Chrysler Group LLC is committed to protecting our environment and natural resources. By converting from paper to electronic delivery for the majority of the user information for your vehicle, together we greatly reduce the demand for tree-based products and lessen the stress on our environment.

INTRODUCTION/WELCOME

VEHICLES SOLD IN CANADA

With respect to any vehicles sold in Canada, the name Chrysler Group LLC shall be deemed to be deleted and the name Chrysler Canada Inc. used in substitution.

WARNING!

- Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious personal injury.
- Always make sure that objects cannot fall into the driver foot well while the vehicle is moving. Objects can become trapped under the brake pedal and accelerator pedal causing a loss of vehicle control.
- Failure to properly follow floor mat installation or mounting can cause interference with the brake pedal and accelerator pedal operation causing loss of control of the vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever/gear selector.
- Never use the 'PARK' position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.
- Refer to your Owner's Manual on the DVD for further details.

USE OF AFTERMARKET PRODUCTS (ELECTRONICS)


The use of aftermarket devices including cell phones, MP3 players, GPS systems, or chargers may affect the performance of on-board wireless features including Keyless Enter-N-Go™ and Remote Start range. If you are experiencing difficulties with any of your wireless features, try disconnecting your aftermarket devices to see if the situation improves. If your symptoms persist, please see an authorized dealer.

CHRYSLER, DODGE, JEEP, RAM TRUCK, SRT, ATF+4, MOPAR and Uconnect are registered trademarks of Chrysler Group LLC.

COPYRIGHT ©2014 CHRYSLER GROUP LLC



CONTROLS AT A GLANCE

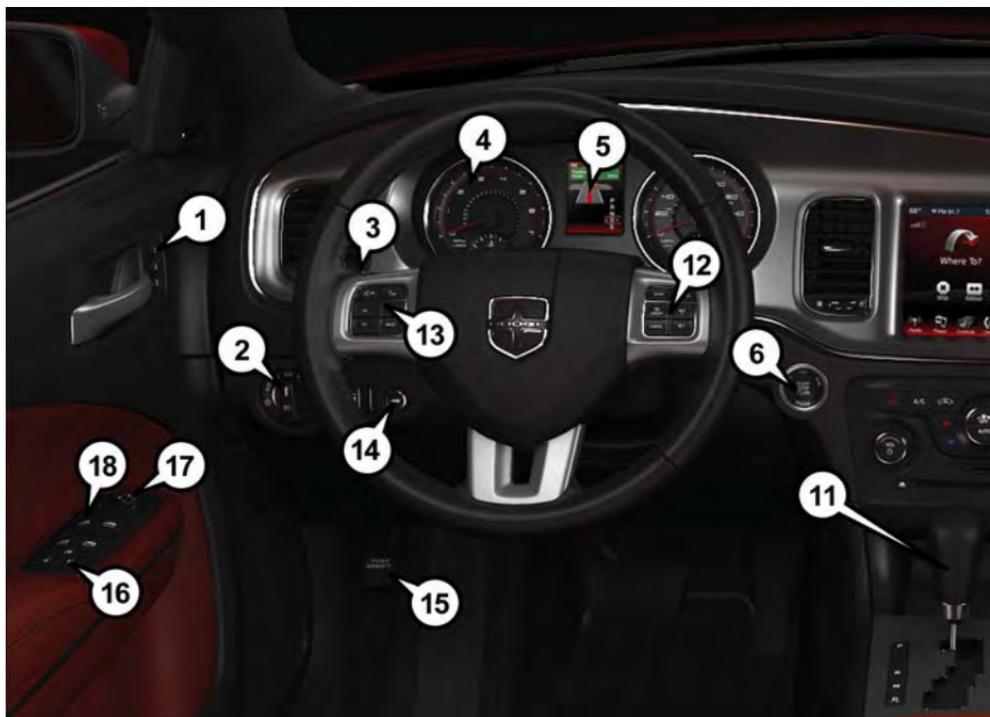

DRIVER COCKPIT

1. Memory Seat pg. 23
2. Headlight Switch pg. 33
3. Turn Signal/Wiper/Washer/High Beams Lever (behind steering wheel) pg. 32
4. Instrument Cluster pg. 6
5. Electronic Vehicle Information Center (EVIC) Display
6. Engine Start/Stop Button pg. 12
7. Your Vehicle's Sound System pg. 48
8. Switch Panel
 - Hazard Lights
 - Electronic Stability Control (ESC) OFF Indicator Light pg. 88
9. Climate Controls pg. 42

CONTROLS AT A GLANCE



- 10. Power Outlet pg. 79
- 11. Shift lever
- 12. Speed Control pg. 34
- 13. Electronic Vehicle Information Center (EVIC) Controls pg. 74
- 14. Trunk Release Button
- 15. Power Brake Pedal
- 16. Power Door Lock Switches
- 17. Power Mirrors Switch
- 18. Power Window Switches

CONTROLS AT A GLANCE



INSTRUMENT CLUSTER

1. Engine Coolant Temperature Gauge
2. Tachometer
3. Electronic Vehicle Information Center (EVIC) Display

Warning Lights

- | | | | |
|---|--|---|---|
|  | - Low Fuel Warning Light |  | - Engine Temperature Warning Light |
|  | - Charging System Light |  | - Seat Belt Reminder Light |
|  | - Oil Pressure Warning Light |  | BRAKE - Brake Warning Light |
|  | - Anti-Lock Brake (ABS) Light |  | - Malfunction Indicator Light (MIL) |
|  | - Air Bag Warning Light |  | - Electronic Stability Control (ESC) Activation/Malfunction Indicator Light |
|  | - Electronic Throttle Control (ETC) Light | | |
|  | - Tire Pressure Monitoring System (TPMS) Light | | |

(See page 86 for more information.)

CONTROLS AT A GLANCE



4. Fuel Gauge
5. Speedometer
6. Fuel Filler Location

Indicators

- | | | | |
|---|---|---|---|
|  | - Turn Signal Indicators |  | - Electronic Stability Control (ESC) Off Indicator* |
|  | - High Beam Indicator |  | - Door Ajar Indicator |
|  | - Front Fog Light Indicator |  | - Decklid Ajar Indicator |
|  | - Vehicle Security Indicator* |  | - Windshield Washer Fluid Low Indicator |
|  | - Electronic Speed Control Set Indicator |  | - Sport Mode Indicator |
|  | - Adaptive Cruise Control (ACC) ON Indicator* |  | - Sport Suspension Indicator |

Electronic Vehicle Information Center (EVIC) Messages

ECO/Fuel Economy

Oil Change Required

Low Tire Pressure

Press Brake Pedal and Push Button to Start

Turn Signal On

GETTING STARTED

KEY FOB

Locking And Unlocking The Doors

- Push and release the LOCK button on the RKE transmitter to lock all doors. The turn signal lights will flash and the horn will chirp to acknowledge the signal.
- Push and release the UNLOCK button on the RKE transmitter once to unlock the driver's door or twice within five seconds to unlock all doors. The turn signal lights will flash to acknowledge the unlock signal. The illuminated entry system will also turn on.

1st Push Of Key Fob Unlocks

This feature lets you program the system to unlock either the driver's door or all doors on the first push of the UNLOCK button on the RKE transmitter. To change the current setting, refer to your Owner's Manual on the DVD for further information.

Opening The Trunk

- Press the Trunk Release button on the transmitter two times within five seconds to open the trunk.

Panic Alarm

- Press the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.



Key Fob

- 1 – Trunk Release
- 2 – Unlock Door(s)
- 3 – Lock Door(s)
- 4 – Remote Start
- 5 – Panic

Emergency Key

Should the battery in the vehicle or the Key Fob transmitter go dead, there is an emergency key located in the Key Fob.

- To remove the emergency key, slide the button at the back of the Key Fob sideways with your thumb and then pull the key out with your other hand.

The emergency key is also for locking the glove compartment.



Emergency Key

WARNING!

- Never use the PARK position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.
- When leaving the vehicle, always remove the Key Fob from the ignition and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.
- Do not leave the Key Fob in or near the vehicle, or in a location accessible to children, and do not leave the ignition of a vehicle equipped with Keyless Enter-N-Go™ in the ACC or ON/RUN mode. A child could operate power windows, other controls, or move the vehicle.

GETTING STARTED

REMOTE START

- Push the REMOTE START button (🔑) on the Key Fob twice within five seconds. Pushing the REMOTE START button a third time shuts the engine off.
- To drive the vehicle, push the UNLOCK button and cycle the ignition to the ON/RUN position.

With Remote Start, the engine will only run for 15 minutes (timeout) unless the ignition is cycled to the ON/RUN position.

The vehicle must be cycled to the ON/RUN position after two consecutive timeouts.

WARNING!

- Do not start or run an engine in a closed garage or confined area. Exhaust gas contains Carbon Monoxide (CO) which is odorless and colorless. Carbon Monoxide is poisonous and can cause you or others to be severely injured or killed when inhaled.
- Keep Key Fob transmitters away from children. Operation of the Remote Start System, windows, door locks or other controls could cause you and others to be severely injured or killed.

KEYLESS ENTER-N-GO™

The Keyless Enter-N-Go™ system is an enhancement to the vehicle's Key Fob. This feature allows you to lock and unlock the vehicle's door(s) and trunk without having to press the Key Fob lock or unlock buttons, as well as starting and stopping the vehicle with the press of a button.

To Unlock From The Driver Or Passenger Side:

- With a valid Keyless Enter-N-Go™ Key Fob located outside the vehicle and within 5 ft (1.5 m) of the driver or passenger side door handle, lift either front door handle to unlock the door automatically.



Lift the door handle to unlock

GETTING STARTED

To Lock The Vehicle

- Both front door handles have LOCK buttons located on the outside of the handle. With one of the vehicle's Keyless Enter-N-Go™ Key Fobs located outside the vehicle and within 5 ft (1.5 m) of the driver's or passenger front door handle, press the door handle LOCK button to lock all four doors and trunk.
- DO NOT grab the door handle, when pressing the door handle lock button. This could unlock the door(s).



NOTE:

- If "Unlock All Doors 1st Press" is programmed all doors will unlock when you grab hold of the front driver's door handle. To select between "Unlock Driver Door 1st Press" and "Unlock All Doors 1st Press", refer to the Uconnect® Settings in your vehicle's Owner's Manual on the DVD or Programmable Features in this guide for further information.
- If a Key Fob is detected in the vehicle when locking the vehicle using the power door lock switch, the doors will unlock and the horn will chirp three times. On the third attempt, your Key Fob can be locked inside the vehicle.
- After pressing the Keyless Enter-N-Go™ LOCK button, you must wait two seconds before you can lock or unlock the vehicle using the door handle. This is done to allow you to check if the vehicle is locked by pulling the door handle, without the vehicle reacting and unlocking.
- If a Keyless Enter-N-Go™ door handle has not been used for 72 hours, the Keyless Enter-N-Go™ feature for that handle may time out. Pulling the deactivated front door handle will reactivate the door handle's Keyless Enter-N-Go™ feature.

GETTING STARTED

To Enter The Trunk

- With a valid Keyless Enter-N-Go™ Key Fob located outside the vehicle and within 5 ft (1.5 m) of the deck lid, press the button on the right side of Center High Mounted Stop Light (CHMSL) which is located on the deck lid.
- Whenever the vehicle is unlocked, you can enter the trunk by pressing the button on the right side of the CHMSL.

NOTE:

Refer to your Owner's Manual on the DVD for further information.



1 – Trunk Button

Engine Starting/Stopping

Starting

With a valid Keyless Enter-N-Go™ Key Fob inside the vehicle:

1. Shift the transmission into PARK or NEUTRAL.
2. While pressing the brake pedal, press the ENGINE START/STOP button once. If the engine fails to start, the starter will disengage automatically after 10 seconds.
3. To stop the cranking of the engine prior to the engine starting, press the button again.



1 – Engine START/STOP Button

NOTE:

In case the ignition switch does not change with the push of a button, the RKE transmitter (Key Fob) may have a low or dead battery. In this situation a back up method can be used to operate the ignition switch. Put the nose side of the Key Fob (side opposite of the Emergency Key) against the ENGINE START/STOP button and push to operate the ignition switch.

Stopping

1. Bring the vehicle to a complete stop.
2. Shift the transmission to PARK (P).
3. Push the ENGINE START/STOP button once. The ignition switch will return to the OFF position.

NOTE:

If the transmission is not in PARK and the vehicle is in motion, the ENGINE START/STOP button must be held for two seconds with the vehicle speed above 5 mph (8 km/h) before the engine will shut off.

Accessory Positions With Engine Off**NOTE:**


The following functions are with the driver's foot OFF the Brake Pedal (transmission in PARK or NEUTRAL).

Beginning With The Ignition Switch In The OFF Position:

- Push the ENGINE START/STOP button once to cycle the ignition to the ACC position.
- Push the ENGINE START/STOP button a second time to cycle the ignition to the ON/RUN position.
- Push the ENGINE START/STOP button a third time to return the ignition to the OFF position.

NOTE:

If the ignition is left in the ACC or ON/RUN (engine not running) position and the transmission is in PARK, the system will automatically time out after 30 minutes of inactivity and the ignition is returned to the OFF position.

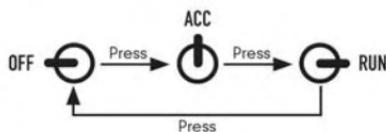

Accessory Positions

GETTING STARTED

TRUNK LOCK AND RELEASE

- The trunk lid can be released from inside the vehicle by pressing the TRUNK RELEASE button located on the instrument panel to the left of the steering wheel.

NOTE:

The transmission must be in PARK before the button will operate.

- The trunk lid can be released from outside the vehicle by pressing the TRUNK button on the Remote Keyless Entry (RKE) transmitter twice within five seconds.
- With the ignition in the ON/RUN position, the Trunk Open symbol will display in the instrument cluster indicating that the trunk is open. The odometer display will reappear once the trunk is closed.
- With the ignition in the OFF position or the key removed from the ignition switch, the Trunk Open symbol will display until the trunk is closed.
- Refer to your Owner's Manual on the DVD for further information on trunk operation with the Passive Entry feature.

Trunk Emergency Release

- As a security measure, a Trunk Internal Emergency Release lever is built into the trunk latching mechanism. In the event of an individual being locked inside the trunk, the trunk can be simply opened by pulling on the glow-in-the-dark handle attached to the trunk latching mechanism.

WARNING!

Do not allow children to have access to the trunk, either by climbing into the trunk from outside, or through the inside of the vehicle. Always close the trunk lid when your vehicle is unattended. Once in the trunk, young children may not be able to escape, even if they entered through the rear seat. If trapped in the trunk, children can die from suffocation or heat stroke.

VEHICLE SECURITY ALARM

To Arm:

- Press the Keyless Enter-N-Go™ START/STOP button until the Electronic Vehicle Information Center (EVIC) indicates that the vehicle ignition is "OFF". Press the power door lock switch while the door is open, press the Key Fob LOCK button, or with one of the Key Fobs located outside the vehicle and within 5 ft (1.5 m) of the driver's and passenger front door handles, press the Keyless Enter-N-Go™ LOCK button located on the door handle.

NOTE:

After pressing the Keyless Enter-N-Go™ LOCK button, you must wait two seconds before you can lock or unlock the vehicle via the door handle.

To Disarm:

- Press the Key Fob UNLOCK button or with one of the Key Fobs located outside the vehicle and within 5 ft (1.5 m) of the driver's and passenger front door handles, grab the Keyless Enter-N-Go™ door handle and enter the vehicle, then press the Keyless Enter-N-Go™ START/STOP button (requires at least one valid Key Fob in the vehicle).

SEAT BELT

Be sure everyone in your vehicle is in a seat and using a seat belt properly.

- Position the lap belt across your thighs, below your abdomen. To remove slack in the lap portion, pull up a bit on the shoulder belt. To loosen the lap belt if it is too tight, tilt the latch plate and pull on the lap belt. A snug belt reduces the risk of sliding under the belt in a collision.
- Position the shoulder belt on your chest so that it is comfortable and not resting on your neck. The retractor will withdraw any slack in the belt.

A shoulder belt placed behind you will not protect you from injury during a collision. You are more likely to hit your head in a collision if you do not wear your shoulder belt. The lap and shoulder belt are meant to be used together.

A belt that is too loose will not protect you properly. In a sudden stop you could move too far forward, increasing the possibility of injury. Wear your seat belt snugly.

A frayed or torn belt could rip apart in a collision and leave you with no protection. Inspect the belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the system. Seat belt assemblies must be replaced after a collision if they have been damaged (bent retractor, torn webbing, etc.).

The seat belts for both front seating positions are equipped with pretensioning devices that are designed to remove slack from the seat belt in the event of a collision.

A deployed pretensioner or a deployed air bag must be replaced immediately.

WARNING!

In a collision, you and your passengers can suffer much greater injuries if you are not properly buckled up. You can strike the interior of your vehicle or other passengers, or you can be thrown out of the vehicle. Always be sure you and others in your vehicle are buckled up properly.

GETTING STARTED

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) – AIR BAGS

- This vehicle has Advanced Front Air Bags for both the driver and front passenger as a supplement to the seat belt restraint systems. The driver's Advanced Front Air Bag is mounted in the center of the steering wheel. The passenger's Advanced Front Air Bag is mounted in the instrument panel, above the glove compartment. The words AIRBAG are embossed on the air bag covers. In addition, the vehicle is equipped with a Supplemental Driver Side Knee Air Bag mounted in the instrument panel below the steering column.
- The Advanced Front Air Bags have a multistage inflator design. This allows the air bag to have different rates of inflation based on several factors, including the severity and type of collision.
- This vehicle may be equipped with driver and/or front passenger seat track position sensors that may adjust the inflation rate of the Advanced Front Air Bags based upon seat position.
- This vehicle may be equipped with a driver and/or front passenger seat belt buckle switch that detects whether the driver or front passenger seat belt is fastened. The seat belt buckle switch may adjust the inflation rate of the Advanced Front Air Bags.
- This vehicle may be equipped with Supplemental Side Air Bag Inflatable Curtains (SABIC) to protect the driver, front, and rear passengers sitting next to a window. The SABIC air bags are located above the side windows and their covers are labeled: AIRBAG.

GETTING STARTED

- If the Air Bag Warning Light  is not on during starting, stays on, or turns on while driving, have the vehicle serviced by an authorized service center immediately.
- Refer to the Owner's Manual on the DVD for further details regarding the Supplemental Restraint System (SRS).

NOTE:

The Air Bag System is designed to be maintenance free.

WARNING!

- Relying on the air bags alone could lead to more severe injuries in a collision. The air bags work with your seat belt to restrain you properly. In some collisions, the air bags won't deploy at all. Always wear your seat belts even though you have air bags.
- Being too close to the steering wheel or instrument panel during Advanced Front Air Bag deployment could cause serious injury, including death. Air bags need room to inflate. Sit back, comfortably extending your arms to reach the steering wheel or instrument panel.
- Supplemental Side Air Bag Inflatable Curtains and Supplemental Seat-Mounted Side Air Bags need room to inflate. Do not lean against the door or window. Sit upright in the center of the seat.
- Being too close to the Supplemental Side Air Bag Inflatable Curtain and/or Seat-Mounted Side Air Bag during deployment could cause you to be severely injured or killed.
- Do not drive your vehicle after the air bags have deployed. If you are involved in another collision, the air bags will not be in place to protect you.
- After any collision, the vehicle should be taken to an authorized dealer immediately.

GETTING STARTED

CHILD RESTRAINTS

Children 12 years or younger should ride properly buckled up in a rear seat, if available. According to crash statistics, children are safer when properly restrained in the rear seats rather than in the front.

Every state in the United States and all Canadian provinces require that small children ride in proper restraint systems. This is the law, and you can be prosecuted for ignoring it.

NOTE:

- For additional information, refer to www.seatcheck.org or call 1-866-SEATCHECK (1-866-732-8243).
- Canadian residents, should refer to Transport Canada's website for additional information: <http://www.tc.gc.ca/eng/roadsafety/safedrivers-childsafety-index-53.htm>


LATCH – Lower Anchors And Tethers For Children

- Your vehicle is equipped with the child restraint anchorage system called LATCH, which stands for Lower Anchors and Tethers for Children.



Lower Anchors

- All rear seating positions have lower anchors and top tether anchors.

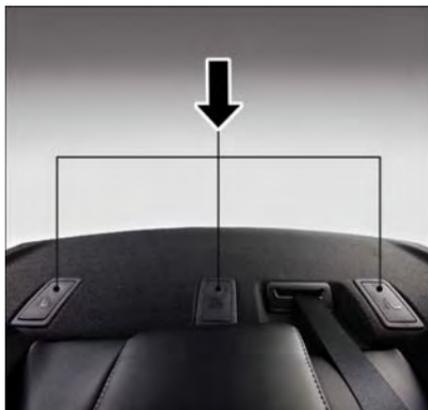


Tether Anchors

LATCH System Weight Limit

You may use the LATCH anchorage system until the combined weight of the child and the child restraint is 65 lbs (29.5 kg). Use the seat belt and tether anchor instead of the LATCH system once the combined weight is more than 65 lbs (29.5 kg).

Locating LATCH Anchorages

The lower anchorages are round bars that are found at the rear of the seat cushion where it meets the seatback, below the anchorage symbols  on the seatback. They are just visible when you lean into the rear seat to install the child restraint. You will easily feel them if you run your finger along the gap between the seatback and seat cushion.

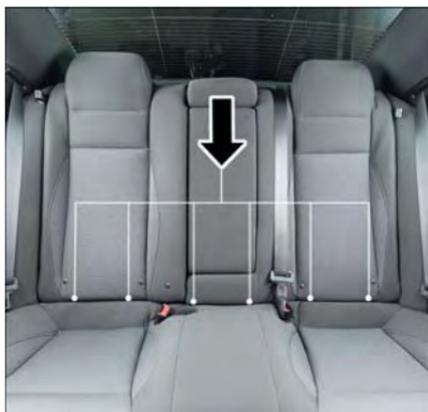

LATCH Lower Anchors

GETTING STARTED

Locating Tether Anchorages

In addition, there are tether strap anchorages behind each rear seating position located in the panel between the rear seat-back and the rear window. These tether strap anchorages are under a plastic cover with the tether anchorage symbol  on it.



Tether Anchorages

Center Seat LATCH

If a child restraint installed in the center position blocks the seat belt webbing or buckle for the outboard position, do not use that outboard position. If a child seat in the center position blocks the outboard LATCH anchors or seat belt, do not install a child seat in that outboard position.

Installing The Child Restraint Using The LATCH Lower Anchors

NOTE:

Never "share" a LATCH anchorage with two or more child restraints.

1. Loosen the adjusters on the lower straps and on the tether strap of the child seat so that you can more easily attach the hooks or connectors to the vehicle anchorages.
2. Attach the lower hooks or connectors of the child restraint to the lower anchorages in the selected seating position.
3. If the child restraint has a tether strap, connect it to the top tether anchorage. See below for directions to attach a tether anchor.
4. Tighten all of the straps as you push the child restraint rearward and downward into the seat. Remove slack in the straps according to the child restraint manufacturer's instructions.
5. Test that the child restraint is installed tightly by pulling back and forth on the child seat at the belt path. It should not move more than 1 inch (25.4 mm) in any direction.

Installing The Child Restraint Using The Vehicle Seat Belts

The seat belts in the passenger seating positions are equipped with a Switchable Automatic Locking Retractor (ALR) that is designed to keep the lap portion of the seat belt tight around the child restraint. Any seat belt system will loosen with time, so check the belt occasionally, and pull it tight if necessary.

Tether Anchorage Weight Limit

Always use the tether anchor when using the seat belt to install a forward facing child restraint, up to the recommended weight limit of the child restraint.

To Install A Child Seat Using An ALR:

1. Pull enough of the seat belt webbing from the retractor to pass it through the belt path of the child restraint. Do not twist the belt webbing in the belt path.
2. Slide the latch plate into the buckle until you hear a “click.”
3. Pull on the webbing to make the lap portion tight against the child seat.
4. To lock the seat belt, pull down on the shoulder part of the belt until you have pulled all the seat belt webbing out of the retractor. Then, allow the webbing to retract back into the retractor. As the webbing retracts, you will hear a clicking sound. This means the seat belt is now in the Automatic Locking mode.
5. Try to pull the webbing out of the retractor. If it is locked, you should not be able to pull out any webbing. If the retractor is not locked, repeat the last step.
6. Finally, pull up on any extra webbing to tighten the lap portion around the child restraint while you push the child restraint rearward and downward into the vehicle seat.
7. If the child restraint has a top tether strap and the seating position has a top tether anchorage, connect the tether strap to the anchorage and tighten the tether strap. See below for directions to attach a tether anchor.
8. Test that the child restraint is installed tightly by pulling back and forth on the child seat at the belt path. It should not move more than 1 inch (25.4 mm) in any direction.

Installing The Top Tether Strap (With Either Lower Anchors Or Vehicle Seat Belt):


When installing a forward-facing child restraint, always secure the top tether strap, up to the tether anchor weight limit, whether the child restraint is installed with the lower anchors or the vehicle seat belt.

Tether Strap Installation

1. Rotate or lift the cover to access the anchor directly behind the seat where you are placing the child restraint.
2. Route the tether strap to provide the most direct path for the strap between the anchor and the child seat.
3. If your vehicle is equipped with adjustable rear head restraints, raise the head restraint, and where possible, route the tether strap under the head restraint and between the two posts. If not possible, lower the head restraint and pass the tether strap around the outboard side of the head restraint.

GETTING STARTED

4. Attach the tether strap hook of the child restraint to the top tether anchorage and remove slack in the tether strap according to the child restraint manufacturer's instructions.

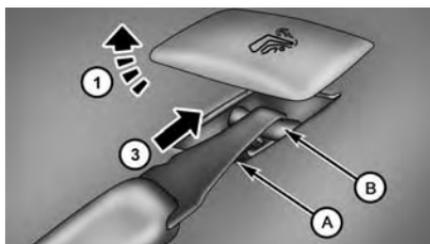

Tether Strap Attachment

- 1 – Cover
- 3 – Attaching Strap
- A – Tether Strap Hook
- B – Tether Anchor

Center Tether Attachment

1. Lower the adjustable center head restraint to the full down position.
2. Route the tether strap over the seatback and head restraint.
3. Attach the tether strap hook of the child restraint to the center tether anchorage located in the panel between the rear seatback and the rear window.
4. Remove slack in the tether strap according to the child restraint manufacturer's instructions.

WARNING!

- In a collision, an unrestrained child, even a tiny baby, can become a projectile inside the vehicle. The force required to hold even an infant on your lap could become so great that you could not hold the child, no matter how strong you are. The child and others could be severely injured or killed. Any child riding in your vehicle should be in a proper restraint for the child's size.
- Never place a rear-facing child restraint in front of an air bag. A deploying Passenger Advanced Front Air Bag can cause death or serious injury to a child 12 years or younger, including a child in a rear-facing child restraint.
- Only use a rear-facing child restraint in a vehicle with a rear seat.
- Improper installation of a child restraint to the LATCH anchorages can lead to failure of an infant or child restraint. The child could be severely injured or killed. Follow the manufacturer's directions exactly when installing an infant or child restraint.
- An incorrectly anchored tether strap could lead to increased head motion and possible injury to the child. Use only the anchor positions directly behind the child seat to secure a child restraint top tether strap.
- If your vehicle is equipped with a split rear seat, make sure the tether strap does not slip into the opening between the seatbacks as you remove slack in the strap.


FRONT SEATS

Power Seats

The power seat switches are located on the outboard side of the front seat cushions.

The power seat switch controls forward/back, up/down and tilt adjustment. The recline switch controls the angle of the seatback.

- Press the switch forward or rearward and the seatback will move in either direction.

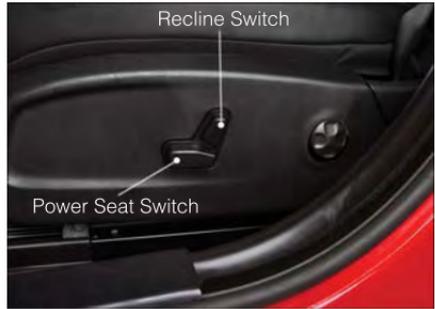

Power Lumbar

- Push the switch forward to increase the lumbar support. Push the switch rearward to decrease the lumbar support.
- Pushing upward or downward on the switch will raise and lower the position of the support.



Memory Seat

- The memory seat feature allows you to set two different driver seating positions (excluding lumbar position), outside mirrors, radio station preset settings and tilt/telescoping steering column position (if equipped). The memory seat buttons are located on the driver's door panel.
- To set a memory position:
 1. Cycle the vehicles ignition to the ON position.
 2. Adjust all memory profile settings.
 3. Press and release the S (SET) button.



GETTING STARTED

4. Press and release the 1 or 2 button within five seconds.

NOTE:

Before programming your RKE transmitters you must select the feature through the Uconnect[®] system. Refer to “Uconnect[®] Settings ” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD for further details.

- To program a Key Fob to the memory position:
 1. Cycle the vehicles ignition to the OFF position.
 2. Select the desired memory profile 1 or 2.
 3. Press and release the S (SET) button on the memory switch, then within five seconds press and release the 1 or 2 button accordingly.
 4. Press and release the LOCK button on the RKE transmitter within 10 seconds.
- To recall the saved positions, press 1 or 2 on the memory switch or press UNLOCK on the programmed RKE transmitter.

Easy Entry/Exit Feature

- The memory seat has an Easy Entry/Exit feature. This feature provides automatic driver seat positioning to enhance driver mobility when entering and exiting the vehicle.

NOTE:

The Easy Entry/Exit feature is not enabled when the vehicle is delivered from the factory. To enable (or later disable) this feature you must select “Easy Exit Seats” in “Engine Off Options” through the programmable features in the Uconnect[®] system.

- Refer to “Uconnect[®] Customer Programmable Features” in “Electronics” of this User Guide.
- For further details refer to “Uconnect[®] Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD.

Manual Seat Adjustments

Forward/Rearward

- Lift up on the adjusting bar located at the front of the seat near the floor and release it when the seat is at the desired position. Then, using body pressure, move forward and backward on the seat to be sure that the seat adjusters have latched.



Recliner

- Lean forward in the seat and lift the recliner lever, then lean back to the desired position and release the lever.
- Lift the lever to return the seatback to an upright position.

CAUTION!

Do not place any article under a power seat or impede its ability to move as it may cause damage to the seat controls. Seat travel may become limited if movement is stopped by an obstruction in the seat's path.

WARNING!

- Adjusting a seat while the vehicle is moving is dangerous. The sudden movement of the seat could cause you to lose control. The seat belt might not be properly adjusted, and you could be severely injured or killed. Only adjust a seat while the vehicle is parked.
- Do not ride with the seatback reclined so that the seat belt is no longer resting against your chest. In a collision, you could slide under the seat belt and be severely injured or killed. Use the recliner only when the vehicle is parked.

REAR SEATS

Folding Rear Seatback

- Pull on the loops, located near the outer top of the seatbacks, to fold down either or both seatbacks. These loops can be tucked away when not in use.
- When the seatback is raised to the upright position, make sure it is latched by strongly pulling on the top of the seatback above the seat loop.



GETTING STARTED

WARNING!

- Be certain that the seatback is securely locked into position. If the seatback is not securely locked into position, the seat will not provide the proper stability for child seats and/or passengers. An improperly latched seat could cause you and others to severely injured or killed.
- The cargo area in the rear of the vehicle (with the rear seatbacks in the locked-up or folded-down position) should not be used as a play area by children when the vehicle is in motion. They could be severely injured or killed in a collision. Children should be seated and using the proper restraint system.

HEATED/VENTILATED SEATS

Front Ventilated Seats

Located in the seat cushion and seatback are small fans that draw the air from the passenger compartment and pull air through fine perforations in the seat cover to help keep the driver and front passenger cooler in higher ambient temperatures.

There are two ventilated seat control buttons located in the touchscreen that allow the driver and passenger to operate the seats independently.

The ventilated seat buttons are used to control the speed of the fans located in the seat.

To operate the system, press the “Controls” button on touchscreen located on the bottom of the Uconnect[®] display.

- Press the ventilated seat button  once to choose HIGH.
- Press the ventilated seat button  a second time to choose LOW.
- Press the ventilated seat button  a third time to turn the ventilated seat OFF.

NOTE:

Vehicle Equipped With Remote Start

On models that are equipped with remote start, this feature can be programmed to come on during a remote start through the Uconnect[®] system. Refer to “Uconnect[®] Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD.

Front Heated Seats

- There are two heated seat control buttons located in the touchscreen that allow the driver and passenger to operate the seats independently.
- Press the heated seat button  once to turn the High setting On. Press the heated seat button a second time to turn the Low setting On. Press the heated seat button a third time to turn the heating elements Off.
- If the High-level setting is selected, the system will automatically switch to Low-level after approximately 60 minutes. The Low-level setting will turn Off automatically after approximately 45 minutes.

NOTE:**Vehicle Equipped With Remote Start**

On models that are equipped with remote start, this feature can be programmed to come on during a remote start through the Uconnect® system. Refer to “Uconnect® Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD.

Rear Heated Seats

- Second row heated seat switches are located on the rear of the center console.
- Press the switch once to select High-level heating. Press the switch a second time to select Low-level heating. Press the switch a third time to shut the heating elements Off.
- If the High-level setting is selected, the system will automatically switch to Low-level after approximately 60 minutes. The Low-level setting will turn Off automatically after approximately 45 minutes.

**WARNING!**

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical conditions must exercise care when using the seat heater. It may cause burns even at low temperatures, especially if used for long periods of time.
- Do not place anything on the seat that insulates against heat, such as a blanket or cushion. This may cause the seat heater to overheat. Sitting in a seat that has been overheated could cause serious burns due to the increased surface temperature of the seat.

HEATED AND COOLED CUPHOLDERS

Your vehicle may be equipped with heated and cooled cupholders. The cupholders are designed to help keep warm beverages warm and cold beverages cool.

- Press the “Cold” symbol once to turn on the cupholder; press the symbol a second time to turn the cupholder off. Press the “Hot” symbol once to activate the cupholder; press the symbol a second time to turn off the cupholder.



GETTING STARTED

WARNING!

When the “Hot” symbol is selected, avoid contact with the heated portion of the cupholder in order to avoid burns.

WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical conditions must exercise care when using the heated cup holders. It may cause burns even at low temperatures, especially if used for long periods of time.
- Keep the cup holders free of debris such as anything that insulates against heat, for this may cause the cup holders to overheat. Coming in contact with overheated cup holders could cause serious burns due to the increased surface temperature.

HEATED STEERING WHEEL

The steering wheel contains a heating element that heats the steering wheel to one temperature setting.

The heated steering wheel control button is located within the climate or controls screen of the touchscreen.

- Press the heated steering wheel button  once to turn the heating element On.
- Press the heated steering wheel button  a second time to turn the heating element Off.

Once the heated steering wheel has been turned on, it will operate for up to 80 minutes before automatically shutting off. The heated steering wheel can shut off early or may not turn on when the steering wheel is already warm.

NOTE:

Vehicle Equipped With Remote Start

On models that are equipped with remote start, this feature can be programmed to come on during a remote start through the Uconnect® system. Refer to “Uconnect® Settings” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD.

WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion, or other physical conditions must exercise care when using the steering wheel heater. It may cause burns even at low temperatures, especially if used for long periods.
- Do not place anything on the steering wheel that insulates against heat, such as a blanket or steering wheel covers of any type and material. This may cause the steering wheel heater to overheat.

ADJUSTABLE PEDALS

The adjustable pedal switch is located on the front side of the driver's seat cushion side shield.

- Press the switch forward to move the pedals forward (toward the front of the vehicle).
- Press the switch rearward to move the pedals rearward (toward the driver).

NOTE:

The pedals cannot be adjusted when the vehicle is in REVERSE or when the Electronic Speed Control is set.



CAUTION!

Do not place any article under the adjustable pedals or impede its ability to move, as it may cause damage to the pedal controls. Pedal travel may become limited if movement is stopped by an obstruction in the adjustable pedal's path.

WARNING!

Do not adjust the pedals while the vehicle is moving. You could lose control and have a collision. Always adjust the pedals while the vehicle is parked.

GETTING STARTED

TILT/TELESCOPING STEERING COLUMN

Manual Tilt/Telescoping Steering Column

- The tilt/telescoping control handle is located below the steering wheel at the end of the steering column.
- To unlock the steering column, push the lever downward (toward the floor).
- To tilt the steering column, move the steering wheel upward or downward as desired.
- To lengthen or shorten the steering column, pull the steering wheel outward or push it inward as desired.
- To lock the steering column in position, push the lever upward until fully engaged.



Power Tilt/Telescoping Steering Column

- The power tilt/telescoping steering control is located below the turn signal/wiper/washer/high beam lever on the steering column.
- To tilt the steering column, move the power tilt/telescoping control up or down as desired. To lengthen or shorten the steering column, pull the control toward you or push the control away from you as desired.



WARNING!

- Do not adjust the steering wheel while driving. The tilt/telescoping adjustment must be locked while driving. Adjusting the steering wheel while driving or driving without the tilt/telescoping adjustment locked could cause the driver to lose control of the vehicle. Failure to follow this warning may result in you and others being severely injured or killed.
- Moving the steering column while the vehicle is moving is dangerous. Without a stable steering column, you could lose control of the vehicle and have a collision. Adjust the column only while the vehicle is stopped.

ENGINE BREAK-IN RECOMMENDATIONS

A long break-in period is not required for the engine and drivetrain (transmission and axle) in your vehicle.

Drive moderately during the first 300 miles (500 km). After the initial 60 miles (100 km), speeds up to 50 or 55 mph (80 or 90 km/h) are desirable.

While cruising, brief full-throttle acceleration within the limits of local traffic laws contributes to a good break-in. Wide-open throttle acceleration in low gear can be detrimental and should be avoided.

The engine oil installed in the engine at the factory is a high-quality energy conserving type lubricant. Oil changes should be consistent with anticipated climate conditions under which vehicle operations will occur. For the recommended viscosity and quality grades, refer to "Maintaining Your Vehicle."

NOTE:

A new engine may consume some oil during its first few thousand miles (kilometers) of operation. This should be considered a normal part of the break-in and not interpreted as an indication of an engine problem or malfunction.

CAUTION!

Never use Non-Detergent Oil or Straight Mineral Oil in the engine or damage may result.

Engine Break-In Recommendation – SRT Version

A long break-in period is not required for the drivetrain (engine, transmission, and rear axle) in your new vehicle.

Drive moderately during the first 500 miles (800 km). After the initial 60 miles (100 km), speeds up to 50 or 55 mph (80 or 90 km/h) are desirable.

While cruising, brief full-throttle acceleration within the limits of local traffic laws contributes to a good break-in. However, wide-open throttle acceleration in low gear can be detrimental and should be avoided.

The engine oil is a high performance synthetic lubricant, the transmission fluid, and axle lubricant installed at the factory is high-quality and energy-conserving. Oil, fluid, and lubricant changes should be consistent with anticipated climate and conditions under which vehicle operations will occur. For the recommended viscosity and quality grades, refer to "Maintaining Your Vehicle".

NOTE:


A new engine may consume some oil during its first few thousand miles (kilometers) of operation. This should be considered a normal part of the break-in and not interpreted as an indication of difficulty.

OPERATING YOUR VEHICLE

CAUTION!

Never use Non-Detergent Oil or Straight Mineral Oil in the engine or damage may result.

TURN SIGNAL/WIPER/WASHER/HIGH BEAM LEVER

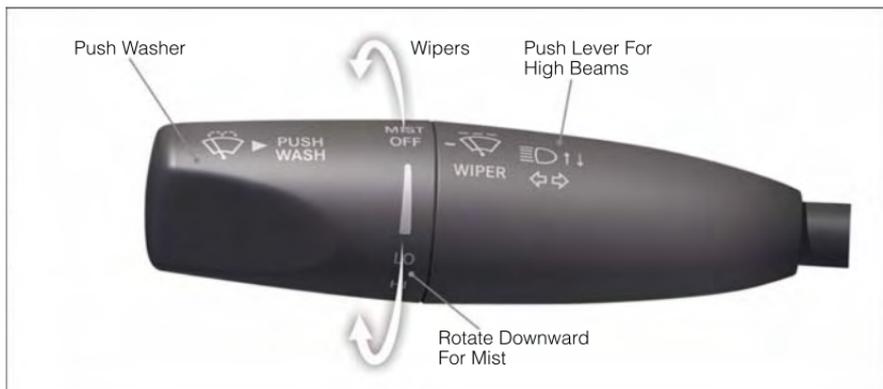

Turn Signal/Lane Change Assist

- Tap the lever up or down once and the turn signal (right or left) will flash three times and automatically turn off.

Front Wipers

Intermittent, Low And High Operation

- Rotate the end of the lever to the first detent position for one of four intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Mist

- Rotate the end of the lever downward when a single wipe is desired.

OPERATING YOUR VEHICLE

NOTE:

The mist feature does not activate the washer pump; therefore, no washer fluid will be sprayed on the windshield. The wash function must be activated in order to spray the windshield with washer fluid.

Washer Operation

- Push the end of the lever inward and hold for as long as spray is desired.

Rain Sensing Wipers

- This feature senses moisture on the vehicle's windshield and automatically activates the wipers for the driver when the switch is in the intermittent position. Rotate the end of the lever to one of four settings to activate this feature and adjust sensitivity.
- Rain Sensing can be turned on and off using the Uconnect® System, refer to the Owner's Manual on the DVD for further details.

High Beam Operation

- Push the lever forward to activate the high beams. Pull the lever toward you for flash to pass.

NOTE:

For safe driving, turn off the high beams when oncoming traffic is present to prevent headlight glare and as a courtesy to other motorists.

HEADLIGHT SWITCH

Automatic Headlights/Parking Lights/Headlights

- Rotate the headlight switch, located on the instrument panel to the left of the steering wheel, to the first detent from the off position for parking light  and to the second detent for headlight .
- With the parking lights or low beam headlights on, press the headlight switch for front fog lights. Pressing the switch a second time will deactivate the front fog lights. Turning the headlight switch off will also deactivate the front fog lights.
- Rotate the headlight switch to "AUTO" for AUTO headlights.
- When set to AUTO, the system automatically turns the headlights on or off based on ambient light levels.



OPERATING YOUR VEHICLE

Automatic High Beams

The Automatic High Beams system provides increased forward lighting at night by automating high beam control through the use of a digital camera mounted on the inside rearview mirror. This camera detects vehicle specific light and automatically switches from high beams to low beams until the approaching vehicle is out of view. This feature is programmable through the Uconnect® system. Refer to “Uconnect® Settings ” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD for further details.

Instrument Panel Dimmer

- Rotate the dimmer control to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.
- Rotate the dimmer control up to increase the brightness of the instrument panel and cupholders when the parking lights or headlights are on.
- Rotate the dimmer control up to the next detent position to fully brighten the odometer and radio when the parking lights or headlights are on.
- Rotate the dimmer control up to the last detent position to turn on the interior lighting.
- If your vehicle is equipped with a touchscreen, the dimming is programmable through the Uconnect® system. Refer to “Uconnect® Settings ” in “Understanding Your Instrument Panel” in the Owner’s Manual on the DVD for further details.

Ambient Light Dimmer

- Rotate the ambient light control up or down to increase or decrease the brightness of the release handle, map pocket (if equipped), overhead and floor lighting when the parking lights or headlights are on.
- Rotate to extreme bottom position to turn off.

SPEED CONTROL

- The Speed Control switches are located on the steering wheel.

Cruise ON/OFF

- Push the ON/OFF button to activate the Speed Control.

CRUISE READY  will appear on the instrument cluster to indicate the Speed Control is on.

- Push the ON/OFF button a second time to turn the system off.



OPERATING YOUR VEHICLE

SET

- With the Speed Control on, push and release the SET - button to set a desired speed.

Accel/Decel

To Increase Speed

- When the Electronic Speed Control is set, you can increase speed by pushing the RES + button.

The speed increment shown is dependant on the speed of U.S. (mph) or Metric (km/h) units:

U.S. Speed (mph)

- Pressing the RES + button once will result in a 1 mph increase in set speed. Each subsequent tap of the button results in an increase of 1 mph.
- If the button is continually pressed, the set speed will continue to increase until the button is released, then the new set speed will be established.

Metric Speed (km/h)

- Pressing the RES + button once will result in a 2 km/h increase in set speed. Each subsequent tap of the button results in an increase of 2 km/h.
- If the button is continually pressed, the set speed will continue to increase until the button is released, then the new set speed will be established.

To Decrease Speed

- When the Electronic Speed Control is set, you can decrease speed by pushing the SET - button.

The speed decrement shown is dependant on the speed of U.S. (mph) or Metric (km/h) units:

U.S. Speed (mph)

- Pressing the SET - button once will result in a 1 mph decrease in set speed. Each subsequent tap of the button results in a decrease of 1 mph.
- If the button is continually pressed, the set speed will continue to decrease until the button is released, then the new set speed will be established.

Metric Speed (km/h)

- Pressing the SET - button once will result in a 2 km/h decrease in set speed. Each subsequent tap of the button results in a decrease of 2 km/h.
- If the button is continually pressed, the set speed will continue to decrease until the button is released, then the new set speed will be established.

Resume

- To resume a previously selected set speed in memory, push the RES + button and release.

OPERATING YOUR VEHICLE

Cancel

- Push the CANCEL button, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.

WARNING!

Leaving the Electronic Speed Control system on when not in use is dangerous. You could accidentally set the system or cause it to go faster than you want. You could lose control and have an accident. Always leave the system OFF when you are not using it.

Adaptive Cruise Control (ACC)

If your vehicle is equipped with Adaptive Cruise Control the controls operate exactly the same as the standard cruise control with one difference. You can set a specified distance you would like to maintain between you and the vehicle in front of you.

If the ACC sensor detects a vehicle ahead, ACC will apply limited braking or acceleration automatically to maintain a preset following distance, while matching the speed of the vehicle ahead.

If the sensor does not detect a vehicle directly ahead of you, it functions like a standard cruise control system, maintaining the speed you set.

Distance Setting (ACC Only)

The specified following distance for ACC can be set by varying the distance setting between 3 (long), 2 (medium), and 1 (short). Using this distance setting and the vehicle speed, ACC calculates and sets the distance to the vehicle ahead. This distance setting displays in the Electronic Vehicle Information Center (EVIC).

- To set or change the distance setting, press the Distance button and release. Each time the button is pressed, the distance setting adjusts between long (3), medium (2), and short (1). The distance setting will default to the last set mode the next time the vehicle is restarted and the ACC system is turned on.

Mode (ACC Only)

If desired, the Adaptive Cruise Control mode can be turned off and the system can be operated as a standard (fixed speed) Cruise Control. When in the standard (fixed speed) Cruise Control mode the distance setting feature will be disabled and the system will maintain the speed you set.

- To change modes, press the MODE button when the system is in either the OFF, READY, or SET position. "Cruise Ready" will be displayed if the system was in ACC READY or ACC SET position. "Cruise Off" will be displayed if the system was in the ACC OFF position. To switch back to Adaptive Cruise Control mode, press the MODE button a second time.

Refer to your Owner's Manual on the DVD for further information.

Forward Collision Warning

The Forward Collision Warning (FCW) system provides the driver with audible and visual warnings (within the EVIC) when it detects a potential frontal collision. The warnings are intended to provide the driver with enough time to react and avoid the potential collision.

Changing FCW Status

The FCW feature has three settings and can be changed within the Uconnect® System:

- Far
- Near
- Off

NOTE:

The FCW settings can only be changed when the vehicle is in PARK.

Far

The default status of FCW is the "Far" setting.

The far setting provides warnings for potential collisions more distant in front of the vehicle, allowing the driver to have the most reaction time to avoid a collision.

This setting is designed to provide early warnings per NHTSA (National Highway Traffic Safety Administration) recommendations.

More cautious drivers that do not mind frequent warnings may prefer this setting.

NOTE:

This setting gives you the most reaction time.

Near

Changing the FCW status to the "Near" setting, allows the system to warn you of a potential frontal collision when you are much closer.

This setting provides less reaction time than the "Far" setting, which allows for a more dynamic driving experience.

More dynamic or aggressive drivers that want to avoid frequent warnings may prefer this setting.

Off

Changing the FCW status to "Off" prevents the system from warning you of a potential frontal collision.

NOTE:

- If FCW is set to "Off", "FCW OFF" will be displayed in the EVIC.
- Refer to the Owner's Manual on the DVD for further details.

OPERATING YOUR VEHICLE

WARNING!

- Leaving the Electronic or Adaptive Speed Control system on when not in use is dangerous. You could accidentally set the system or cause it to go faster than you want. You could lose control and have a collision. Always leave the Electronic or Adaptive Speed Control system off when you are not using it.
- Electronic Speed Control can be dangerous where the system cannot maintain a constant speed. Your vehicle could go too fast for the conditions, and you could lose control. A collision could be the result. Do not use Electronic Speed Control in heavy traffic or on roads that are winding, icy, snow-covered or slippery.
- Adaptive Cruise Control (ACC) is a convenience system. It is not a substitute for active driving involvement. Pay attention to road, traffic, and weather conditions, vehicle speed, distance to the vehicle ahead, and brake operation to ensure safe operation of the vehicle under all road conditions. Your attention is always required while driving to maintain safe control of your vehicle. Failure to follow these warnings can result in a collision or serious personal injury.

The ACC system:

- Does not react to pedestrians, oncoming vehicles, and stationary objects (i.e., a stopped vehicle in a traffic jam or a disabled vehicle).
- Cannot take street, traffic, and weather conditions into account, and may be limited upon adverse sight distance conditions.
- Does not predict the lane curvature or the movement of preceding vehicles and will not compensate for such changes.
- Does not always fully recognize complex driving conditions, which can result in wrong or missing distance warnings.
- Can only apply a maximum of 25% of the vehicle's braking capability, and may not bring the vehicle to a complete stop.

You should switch off the ACC system:

- When driving in fog, heavy rain, heavy snow, sleet, heavy traffic, and complex driving situations (i.e., in highway construction zones).
- When entering a turn lane or highway off ramp; when driving on roads that are winding, icy, snow-covered, slippery, or have steep uphill or downhill slopes; and when towing a trailer.
- When circumstances do not allow safe driving at a constant speed.
- Failure to follow these warnings can result in a collision.
- Forward Collision Warning (FCW) is not intended to avoid a collision on its own. The driver has the responsibility to avoid a collision by controlling the vehicle via braking and steering. Failure to follow this warning could lead to serious injury or death.

OPERATING YOUR VEHICLE

ELECTRONIC SHIFTER – 3.6L ENGINE

- Your vehicle is equipped with a fuel efficient 8 speed transmission. The electronic shift lever in this vehicle does not slide like a conventional shifter. Instead, the shift lever is spring loaded and moves forward and rearward, always returning to the center position after each gear is selected.



- The transmission gear range (PRND) is displayed both on the shift lever and in the Electronic Vehicle Information Center (EVIC).



Shifting From PARK To DRIVE

- Firmly depress the brake pedal, press the lock button on the shift lever, then pull and hold the shift lever fully rearward until "D" is highlighted in the EVIC.
- To shift back into PARK from DRIVE, bring the vehicle to a complete stop, firmly depress the brake pedal, press the lock button on the shift lever, then push and hold the shift lever fully forward until "P" is highlighted in the EVIC.

OPERATING YOUR VEHICLE

Shifting From REVERSE To NEUTRAL

- Pull the shift lever rearward to the first detent and release. "N" will be highlighted in the EVIC.
- To shift back into REVERSE from NEUTRAL, firmly depress the brake pedal, press the lock button on the shift lever, then push the shift lever forward to the first detent and release. "R" will be highlighted in the EVIC.

Shifting From NEUTRAL To DRIVE

- Firmly depress the brake pedal, press the lock button on the shift lever, then pull the shift lever rearward and release. "D" will be highlighted in the EVIC.
- To shift back into NEUTRAL from DRIVE, firmly depress the brake pedal, press the lock button on the shift lever, then push the shift lever forward and release. "N" will be highlighted in the EVIC.

Shifting From REVERSE To DRIVE

- Bring the vehicle to a complete stop, firmly depress the brake pedal, then pull the shift lever fully rearward and release when "D" is highlighted in the EVIC.
- To shift back into REVERSE from DRIVE, bring the vehicle to a complete stop, firmly depress the brake pedal, press the lock button on the shift lever, then push the shift lever forward to the second detent and release when "R" is highlighted in the EVIC.

Shifting From DRIVE To SPORT/LOW

Vehicles Equipped With SPORT Mode

- To shift from DRIVE to SPORT, pull the shift lever rearward until "S" is highlighted in the EVIC.
- To shift back into DRIVE from SPORT, pull the shift lever rearward until "D" is highlighted in the EVIC.

Vehicles Equipped With LOW Mode

- To shift from DRIVE to LOW, pull the shift lever rearward until "L" is highlighted in the EVIC.
- To shift back into DRIVE from LOW, pull the shift lever rearward until "D" is highlighted in the EVIC.

TRANSMISSION MODES/AUTOSTICK®

Sport Mode (If Equipped)

Sport mode is driver selectable and provides more aggressive shifting, for spirited driving.

- Shifting into SPORT mode can be done anytime the vehicle is in the "D" Drive position. Simply tap the shift lever rearward and release when "S" is highlighted in the EVIC. Tapping the shift lever rearward a second time will return the vehicle to the "D" Drive position.

OPERATING YOUR VEHICLE

NOTE:

When the vehicle is in SPORT mode, a "SPORT" message and green flag icon will be illuminated in the instrument cluster.

Low Mode (If Equipped)

- LOW range should be used for engine braking when descending very steep grades. In this range, the transmission will downshift for increased engine braking. To switch between DRIVE and LOW modes, tap the shift lever rearward.

Shifting into LOW can be done anytime the vehicle is in the "D" DRIVE position.

Autostick® (3.6L 8-Speed Transmission, If Equipped)

- **Autostick® is only available on vehicles equipped with SPORT mode.**
- When the transmission is in DRIVE, it will operate automatically, shifting between the eight available gears. While in SPORT mode, the transmission will only shift between seven of the eight available gears.
- To engage AutoStick®, simply tap one of the steering wheel-mounted shift paddles (+/-).
- In AutoStick® mode, the transmission will only shift up or down when [+/-] is manually selected by the driver, except as described below. It will remain in the selected gear until another upshift or downshift is chosen.
- When AutoStick® is active, the current transmission gear is displayed in the EVIC.
- If AutoStick® is engaged while in DRIVE mode, lack of accelerator pedal activity will cause the transmission to revert to automatic operation. The transmission will also upshift automatically once redline, (where the tachometer needle points to the red portion of the gauge) is reached. If the accelerator is pressed to the floor, the transmission will downshift when possible (based on current vehicle speed and gear).
- When AutoStick® is used in SPORT mode, the transmission will only shift up or down when commanded by the driver, except as noted below.
- In either DRIVE or SPORT mode, the transmission will automatically downshift as the vehicle slows to a stop (to prevent engine lugging) and will display the current gear. Tapping the [+] paddle (at a stop) will allow starting in second gear. After a stop, the driver should manually upshift [+] the transmission as the vehicle accelerates.



NOTE:

To disengage AutoStick® mode, press and hold the [+] shift paddle until "D" or "S" is once again displayed in the EVIC. You can shift in or out of the AutoStick® mode at any time without taking your foot off the accelerator pedal.

OPERATING YOUR VEHICLE

CLIMATE CONTROLS

Uconnect® 4.3 Climate Controls



OPERATING YOUR VEHICLE


Uconnect® 8.4 Climate Controls



OPERATING YOUR VEHICLE

Climate Control Knobs

- For your convenience the climate controls can also be operated by using the soft-keys located on the touchscreen or the climate control knobs below the touchscreen.

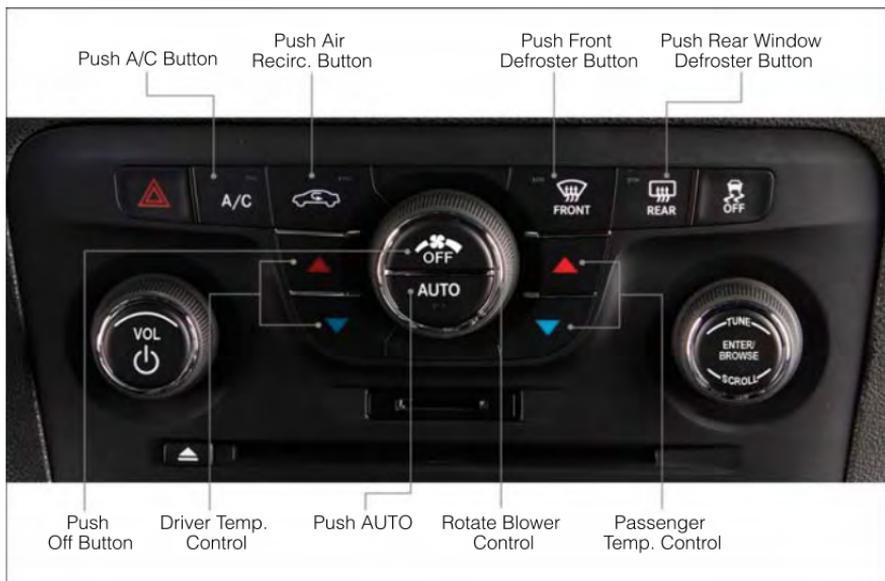

Automatic Operation

- Press the AUTO button.
- Select the desired temperature by pressing the Temperature Control buttons.
- The system will maintain the set temperature automatically.

Air Conditioning (A/C)

- If the air conditioning button is pressed while in the AUTO mode, the system will enter manual mode with the air conditioning on.

Air Recirculation

- Use recirculation for maximum A/C operation.
- For window defogging, turn the recirculation button off.
- If the recirculation button is pressed while in the AUTO mode, the indicator light may flash three times to indicate the cabin air is being controlled automatically.

Heated Mirrors

The mirrors are heated to melt frost or ice. This feature is activated whenever you turn on the rear window defroster.

POWER SUNROOF

The power sunroof switch is located on the overhead console.

Opening Sunroof

Express Open

- Press the switch rearward and release it within one-half second. The sunroof will fully open and stop automatically.

Manual Open

- Press and hold the switch rearward to open the sunroof. Any release of the switch will stop the movement, and the sunroof will remain in a partially open position until the switch is pressed again.



Venting Sunroof

- Press and release the button and the sunroof will open to the vent position.

This is called "Express Vent" and will occur regardless of sunroof position. During Express Vent operation, any movement of the switch will stop the sunroof.

- 1 – Opening Sunroof
- 2 – Venting Sunroof
- 3 – Closing Sunroof

Closing Sunroof

Express Closing

- Press the switch forward and release it within one-half second. The sunroof will fully close automatically from any position.

Manual Closing

- Press and hold the switch forward to close the sunroof. Any release of the switch will stop the movement, and the sunroof will remain in a partially closed position until the switch is pressed again.

OPERATING YOUR VEHICLE

Pinch Protection Feature

This feature will detect an obstruction in the opening of the sunroof during Express Close operation. If an obstruction in the path of the sunroof is detected, the sunroof will automatically retract. Remove the obstruction if this occurs. Next, press the switch forward and release to Express Close.

NOTE:

If three consecutive sunroof close attempts result in Pinch Protect reversals, the fourth close attempt will be a Manual Close movement with Pinch Protect disabled.

WARNING!

- Do not let children play with the sunroof. Never leave children unattended in a vehicle, or with access to an unlocked vehicle. Do not leave the Key Fob in or near the vehicle, and do not leave the ignition of a vehicle equipped with Keyless Enter-N-Go™ in the ACC or ON/RUN mode. Occupants, particularly unattended children, can become entrapped by the power sunroof while operating the power sunroof switch. Such entrapment may result in serious injury or death.
- In a collision, there is a greater risk of being thrown from a vehicle with an open sunroof. You could also be severely injured or killed. Always fasten your seat belt properly and make sure all passengers are properly secured.
- Do not allow small children to operate the sunroof. Never allow your fingers, other body parts, or any object to project through the sunroof opening. Injury may result.

WIND BUFFETING

Wind buffeting can be described as a helicopter-type percussion sound. If buffeting occurs with the rear windows open, adjust the front and rear windows together.

If buffeting occurs with the sunroof open, adjust the sunroof opening, or adjust any window. This will minimize buffeting.

ELECTRONICS




Steering Wheel
Audio Controls
(left rear surface
of steering wheel)

Steering Wheel
Audio Controls
(right rear surface
of steering wheel)

YOUR VEHICLE'S SOUND SYSTEM

1. Uconnect® Voice Command Button pg. 71
2. Uconnect® Phone Button pg. 66
3. Steering Wheel Audio Controls (Left) pg. 64
4. Steering Wheel Audio Controls (Right) pg. 64
5. Volume Knob/Audio Power Button
6. SD Card (push in to insert/eject) pg. 65

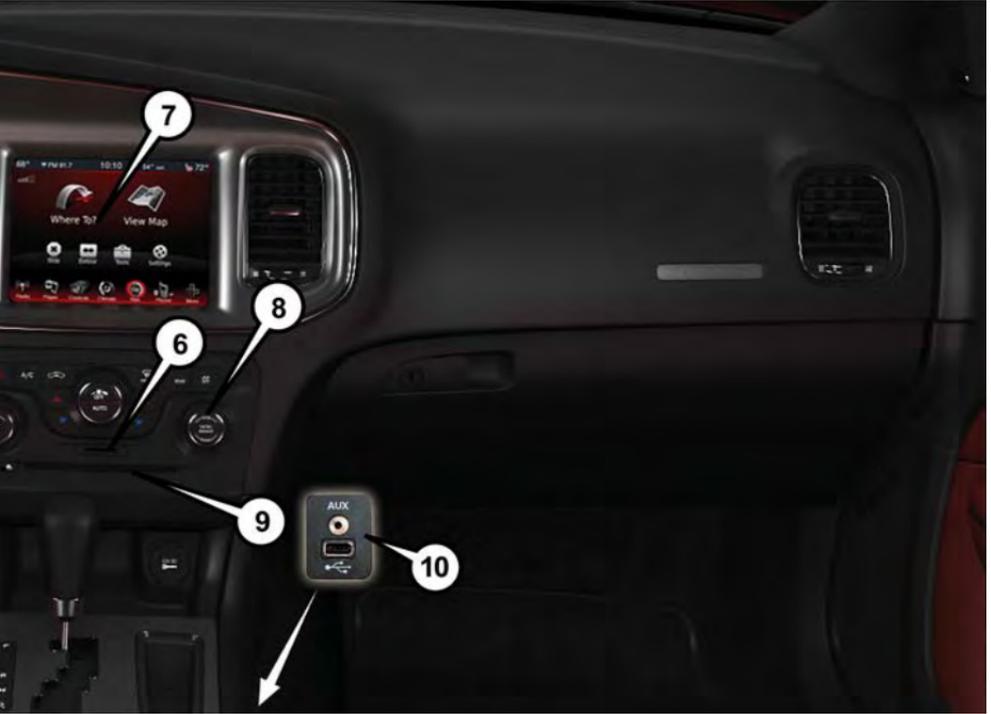

- 7. Uconnect® Radio pg. 50
- 8. Tune/Scroll Knob/Browse/Enter Button
- 9. CD Player pg. 58
- 10. Media Hub: Audio Jack / USB Port (located inside front console) pg. 64
- 11. CD Eject Button

ELECTRONICS

IDENTIFYING YOUR RADIO

Uconnect® 4.3 & 4.3S

- Models 4.3 and 4.3S have a 4.3 inch touchscreen with hard-keys to each side of it.
- Model 4.3S has all Model 4.3 features, plus SiriusXM Satellite Radio (1 year trial subscription included).
- Model 4.3S is identified by the presence of SAT on the band button, indicating the presence of satellite radio.



Uconnect® 8.4 & 8.4N

- Models 8.4 and 8.4N have an 8.4 inch touchscreen.
- Model 8.4N has all Model 8.4 features, plus Garmin® Navigation and SiriusXM Travel Link (1-year trial subscription included).
- Model 8.4N is identified by the unique Nav button on the main screen menu bar, located at the bottom of the screen, and the presence of SiriusXM Travel Link within the More menu.



Uconnect® 4.3 & 4.3S AT A GLANCE

**Displaying The Time**

- If the time is not currently displayed at the top of the screen when in Radio mode, press the SETTINGS button, then touch "Clock." Select "Show Time," then touch "On."

Setting The Time

- Press the SETTINGS hard-key, then touch the "Clock" soft-key.
- Touch the "Time" soft-key.
- Touch the "Up or Down" soft-keys to adjust the hours, minutes or AM/PM.

NOTE:

12hr format and 24hr format can also be set.

- Once the time is set press the "Done" soft-key to exit the time screen.

Audio Settings

- Press the SETTINGS hard-key on the right side of the unit.
- Then scroll down and press the "Audio" soft-key to get to the Audio menu.
- The Audio Menu shows the following options for you to customize your audio settings.
 - Equalizer
 - Balance/Fade
 - Speed Adjust Volume
- Touch the "Exit" soft-key to exit from the Audio Menu.

ELECTRONICS

Equalizer

- Touch the “Equalizer” soft-key to adjust the Bass, Mid and Treble. Use the “+” or “-” soft-key to adjust the equalizer to your desired settings. Press the “Done” soft-key when done.


Balance/Fade

- Touch the “Balance/Fade” soft-key to adjust the sound from the speakers. Use the “arrow” soft-key to adjust the sound level from the front and rear or right and left side speakers. Touch the center “C” soft-key to reset the balance and fade to the factory setting. Press the “Done” soft-key when done.

Speed Adjust Volume

- Touch the “Speed Adjust Volume” soft-key to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the “Done” soft-key when done.

Uconnect® 8.4 & 8.4N AT A GLANCE

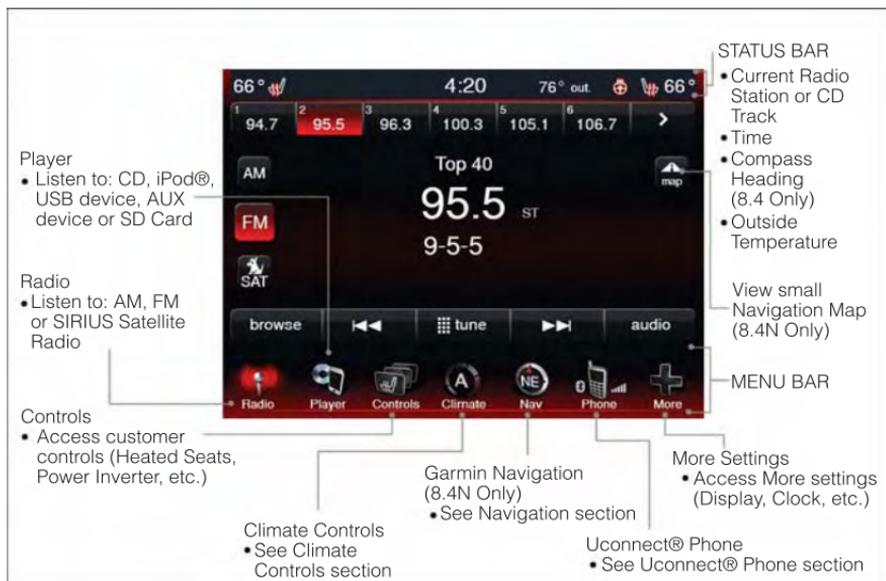

Displaying The Time

- If the time is not currently displayed on the radio or player main page, touch the “More” soft-key and then touch the SETTINGS soft-key. In the Settings list, touch the “Clock” soft-key, then touch the check box next to Show Time in Status Bar.

Setting The Time

- Model 8.4N synchronizes time automatically via GPS, so should not require any time adjustment. If you do need to set the time manually, follow the instructions below for Model 8.4.
- For Model 8.4, turn the unit on, then touch the “Time Display” at the top of the screen. Touch “Yes”.
- If the time is not displayed at the top of the screen, touch “More” soft-key and then “Settings” soft-key. In the Settings screen, touch the “Clock” soft-key, then check or uncheck this option.
- Touch “+” or “-” next to Set Time Hours and Set Time Minutes to adjust the time.
- If these features are not available, uncheck the “Sync” with GPS box.
- Touch “X” to save your settings and exit out of the Clock Setting screen.

Audio Settings

- Touch the “Audio” soft-key to activate the Audio settings screen to adjust Balance\Fade, Equalizer and Speed Adjusted Volume.
- You can return to the Radio screen by touching the “X” located at the top right.

Balance/Fade

- Touch the “Balance/Fade” soft-key to Balance audio between the front speakers or fade the audio between the rear and front speakers.
- Touching the “Front,” “Rear,” “Left” or “Right” soft-keys or touch and drag the red Speaker Icon to adjust the Balance/Fade.


Equalizer

- Touch the “Equalizer” soft-key to activate the Equalizer screen.
- Touch the “+” or “-” soft-keys, or by touching and dragging over the level bar for each of the equalizer bands. The level value, which spans between ± 9 , is displayed at the bottom of each of the Bands.


Speed Adjusted Volume

- Touch the “Speed Adjusted Volume” soft-key to activate the Speed Adjusted Volume screen. The Speed Adjusted Volume is adjusted by touching the “+” and “-” buttons or by touching and dragging over the level bar. This alters the automatic adjustment of the audio volume with variation to vehicle speed.

RADIO

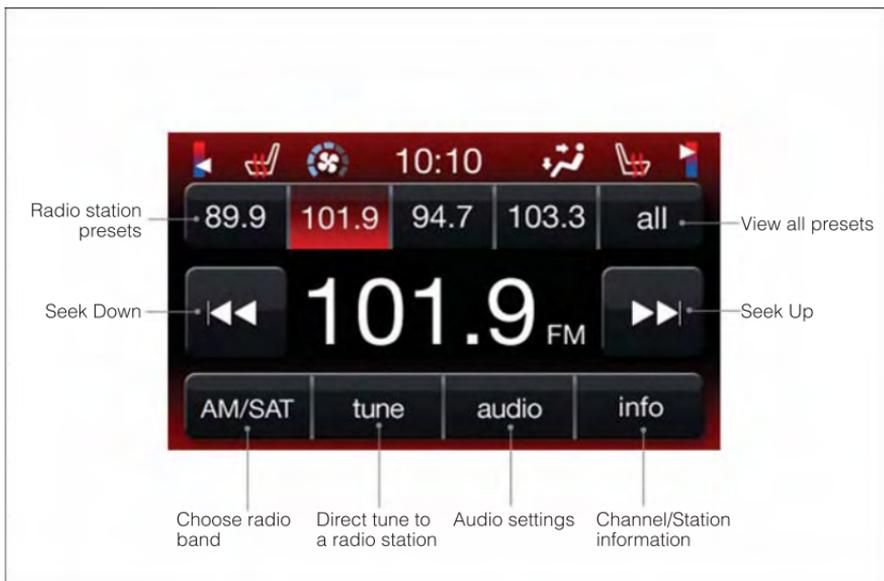

Models 4.3 & 4.3S

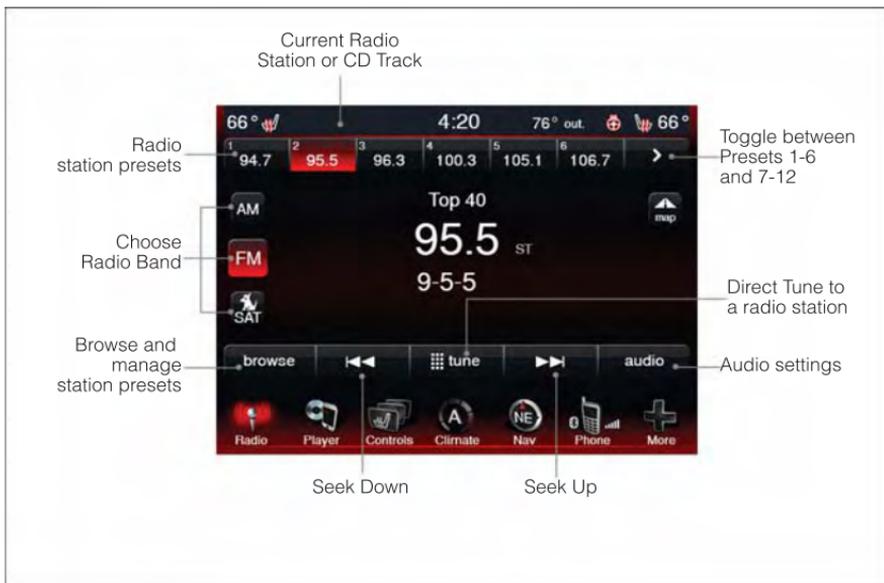

Models 8.4 & 8.4N

- To access the Radio mode, touch the RADIO hard-key on the upper left side of the faceplate (4.3 & 4.3S) or the "Radio" soft-key at the lower left of the screen (8.4 & 8.4N).
- Unless otherwise noted, the information provided on the operation and functionality of the radios in this section is common to all Uconnect® radios.

Selecting Radio Stations

- Touch the "Radio band" soft-key to cycle through AM, FM or SAT (4.3 & 4.3S) or the desired radio band (AM, FM or SAT) soft-key (8.4 & 8.4N). SiriusXM Satellite Radio is not available on the 4.3.

Seek Up/Seek Down

- Touch the "Seek arrow" soft-keys for less than two seconds to seek through radio stations.
- Touch and hold either "arrow" soft-key for more than two seconds to bypass stations without stopping. The radio will stop at the next listenable station once the arrow soft-key is released.

Direct Tune

- Tune directly to a radio station by pressing the "Tune" button on the screen, and entering the desired station number.

Store Radio Presets

- Your radio can store 12 total preset stations. They are shown at the top of your screen. To see all 12 stations, Press the "All" soft-key (4.3 & 4.3S) or press the "arrow" soft-key at the top right of the screen to toggle between the six presets (8.4 & 8.4N).
- To set a station into memory press and hold the desired numbered soft-key for more than two seconds or until you hear a confirmation beep.

SiriusXM SATELLITE RADIO

- SiriusXM Satellite Radio gives you over 130 channels, including 100% commercial-free music from nearly every genre, plus all your favorite sports, news, talk and entertainment channels – all with crystal clear, coast-to-coast coverage, all in one place and all at your fingertips.
- To access SiriusXM Satellite Radio, touch the "Radio band" soft-key and select the "SAT" soft-key (4.3S) or touch the "SAT" soft-key on the main Radio screen (8.4 & 8.4N).
- The following describes features that are available when in SiriusXM Satellite Radio mode.
- Unless otherwise noted, the information provided on the operation and functionality of the radios in this section is common to all Uconnect® radios.

Selecting SiriusXM Satellite Channels

Seek Up/Seek Down

- Touch the “Seek arrow” soft-keys for less than two seconds to seek through channels in SAT mode.
- Touch and hold either “arrow” soft-key for more than two seconds to bypass channels without stopping. The radio will stop at the next listenable channel once the arrow soft-key is released.

Direct Tune

- Tune directly to a SAT channel by pressing the “Tune” button on the screen, and entering the desired station number.

Info (4.3S Only)

- Provides detailed information about the current SiriusXM Satellite Radio channel.

More... (4.3S Only)

- Access more menus: Audio, Favorites, Game Zone, and Replay.

Traffic & Weather (8.4 & 8.4N Only)

- Automatically tells you when Traffic & Weather for a favorite city is available, and gives you the option to switch to that channel. Select Traffic & Weather then touch “Jump” to activate the feature. After listening to Traffic and Weather, touch “Jump” again to return to the previous channel.

Fav (8.4 & 8.4N Only)

- Activates the favorites menu. You can add up to 50 favorite artists or songs. Just touch “Add Fav Artist” or “Add Fav Song” while the song is playing. You will then be alerted any time one of these songs, or works by these artists, is playing on other SiriusXM Satellite Radio channels.

SiriusXM Parental Controls

- You can skip or hide certain channels from view if you do not want access to them. Press the SETTINGS hard-key (4.3S) or touch the “More” soft-key, then the “Settings” soft-key (8.4 & 8.4N), next touch the “SiriusXM Satellite Radio Setup” soft-key, then select “Channel Skip.” Touch the channel(s) to be skipped (4.3S) or touch the box, check-mark, next to the channel you want skipped (8.4 & 8.4N). They will not show up in normal usage.
- SiriusXM Satellite Radio also offers the option to permanently block selected channels. Call 1-888-539-7474 and request the Family Package.

Browse

- Lets you browse the SiriusXM Satellite Radio channel listing, Favorites, Genres, Game Zone, and Weather channels. Jump setting, and also provides the SiriusXM Satellite Radio channel list. Browse contains many sub-menus.

| Browse Sub-Menu | Sub-Menu Description |
|-----------------------------|---|
| All | Shows the channel listing. |
| Genre | Provides a list of all genres, and lets you jump to a channel within the selected genre. |
| Presets (8.4 & 8.4N Only) | Lets you scroll the list of Preset satellite channels. Touch the "Channel", or press "Enter" on the Tune knob, to go to that channel. Touch the "Trash can" icon to delete a preset. Your presets are also shown at the top of the main Satellite Radio screen. |
| Favorites | Lets you manage artists and songs in the Favorites list and configure Alert Settings to let you know when favorite songs or artists are playing on other channels). Also, view a list of channels airing any of your Favorites. |
| Game Zone | Provides alerts when your favorite sports teams are starting a game which is being aired on other SiriusXM Satellite Radio channels, or when their game score is announced. You can select and manage your Teams list here, and configure alerts. |
| Traffic/Weather (4.3S only) | Lets you browse Traffic & Weather information by city. |
| Jump (8.4 & 8.4N only) | Lets you select your favorite cities for Traffic & Weather information, by selecting Traffic, then Jump feature on the main satellite radio screen. |


Replay

- Lets you replay up to 44 minutes of the content of the current SiriusXM Satellite Radio channel.

| Replay Option | Option Description |
|----------------------|---|
| Play/Pause | Touch to Pause content playback. Touch "Pause/Play" again to resume playback. |
| Rewind/RW | Rewinds the channel content in steps of five seconds. Touch and hold to rewind continuously, then release to begin playing content at that point. |
| Fast Forward/FW | Forwards the content, and works similarly to Rewind/RW. However, Fast Forward/FW can only be used when content has been previously rewind. |
| Replay Time | Displays the amount of time in the upper center of the screen by which your content lags the Live channel. |
| Live | Resumes playback of Live content at any time while replaying rewind content. |

iPod®/CD/AUX CONTROLS

Models 4.3 & 4.3S

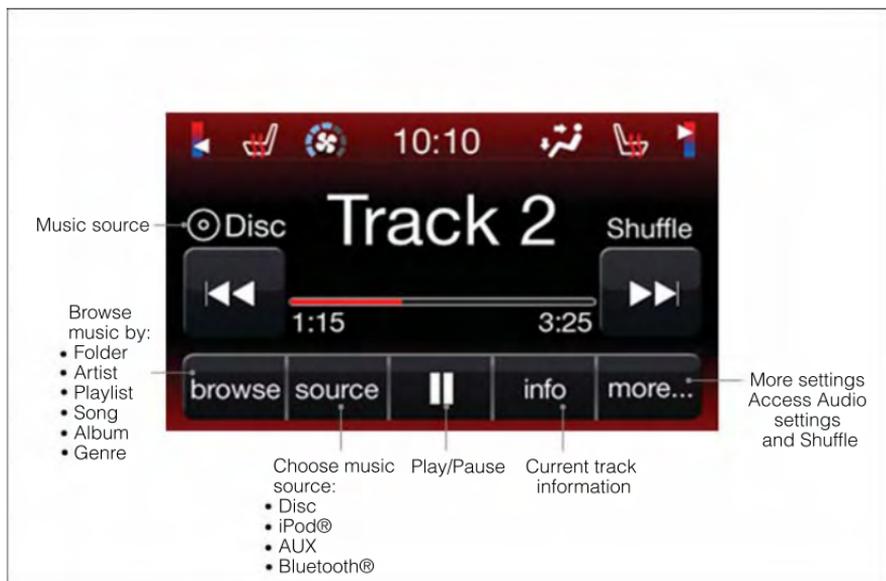

- The iPod®/CD/AUX controls are accessed by pressing the PLAYER hard-key to enter the Player main screen, then touch the "Source" soft-key and choose between Disc, AUX, iPod® or Bluetooth®.

NOTE:

Uconnect® will usually automatically switch to the appropriate mode when something is first connected or inserted into the system.



Models 8.4 & 8.4N



- The iPod®/USB, CD, Audio Jack, SD Card or Bluetooth® source is accessed by touching the “Player” soft-key to enter the Player main screen, then touch the “Source” soft-key and choose between Disc, Aux, iPod®, Bluetooth® or SD Card.

NOTE:

Uconnect® will usually automatically switch to the appropriate mode when something is first connected or inserted into the system.



GARMIN® NAVIGATION

Garmin® Navigation (8.4N Only)

- Uconnect® 8.4N integrates Garmin's consumer-friendly navigation into your vehicle. Garmin Navigation includes Lane Assist and Junction View, Speed Limit information, and a database with over 6 million points of interest.
- Touch the "Nav" soft-key in the menu bar to access the Navigation system.

Changing The Navigation Voice Prompt Volume

1. Program a destination.
2. While traveling on your route, touch the upper left area of the map screen where your next turn is displayed.
3. The Navigation system will then repeat the distance to your next turn.
4. While the Navigation system is speaking, use the ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level. Please note the volume setting for Navigation Voice Prompt is different than the audio system.

Main Navigation Menu



Acquiring Satellites

- The GPS Satellite strength bars indicate the strength of your satellite reception.
- Acquiring satellite signals can take a few minutes. When at least one of the bars is green, your device has acquired satellite signals. If no signal is found the Navigation system still can operate with internal gyro direction & location based on data provided by the vehicle.

- Dead Reckoning technology uses the speed sensors attached to your vehicle's drivetrain, and a gyroscope, to supplement the existing GPS data. The combined data provides accurate positioning for your vehicle in tunnels, indoor parking garages, urban canyons, and any other area where GPS signals can become obstructed.

Finding Points Of Interest

- From the main Navigation menu touch "Where To?" then touch "Points of Interest."
- Select a Category, then a subcategory if necessary.
- Select your destination and touch "Go."

Finding A Place By Spelling The Name

- From the Main Navigation Menu touch "Where to?" Touch "Points of Interest" and then touch "Spell Name."
- Enter the name of your destination.
- Touch "Done."
- Select your destination and touch "Go."

Entering A Destination Address

- From the main Navigation menu, touch "Where To?" then touch "Address."
- Follow the on-screen prompts to enter the address and touch "Go."

Searching Near Another Location

- From the main Navigation menu, touch "Where To?" Touch a destination and touch "Near."
- Select an option from the available choices.


Setting Or Changing Your Home Location

- Touch the "Nav" soft-key in the menu bar to access the Navigation system and the Main Navigation menu.
- Touch "Where To?" then touch "Go Home."
- You may enter your address directly, use your current location as your home address, or choose from recently found locations.
- To edit your Home location (or other saved locations), touch "Where To?" from the Main Navigation menu, touch "Favorites," then touch the location you want to edit. After selecting a location to edit, touch "Press for More," then "Edit."

Go Home

- A Home location must be saved in the system. From the Main Navigation menu, touch "Where To?" then touch "Go Home."

Following Your Route

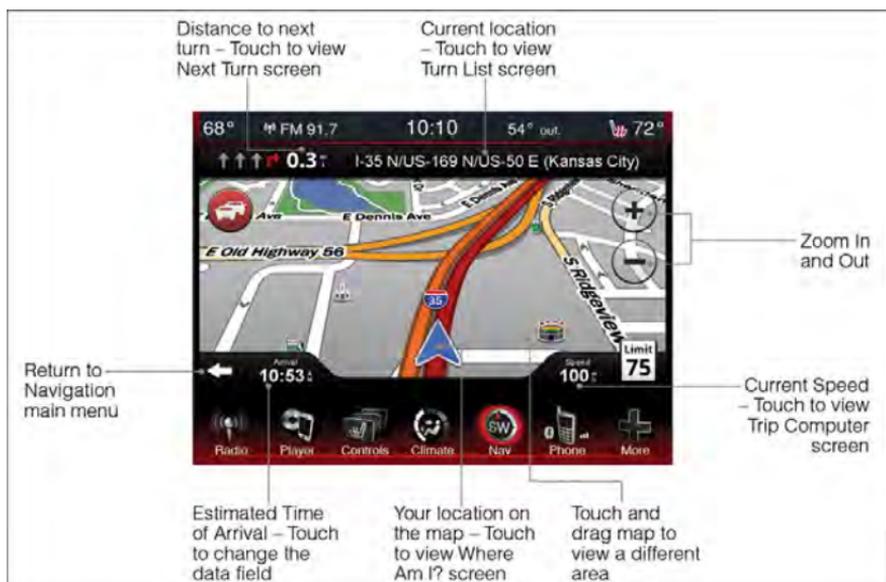

- Your route is marked with a magenta line on the map. If you depart from the original route, your route is recalculated. A speed limit icon could appear as you travel on major roadways.
- Lane Assist helps you decide which lane to be in at upcoming junctions.
- Junction View gives you an expanded view as junctions approach.

Adding A Via Point

- To add a stop between your current location and your end destination, you must be navigating a route.
- Touch the “back arrow” multiple times to return to the Main Navigation menu.
- Touch “Where To?” then search for the via point. Select the via point to add from the search results.
- Touch “Go,” then touch “Add as a Via Point.”

Taking A Detour

- To take a detour you must be navigating a route.
- Touch “Detour.”

NOTE:

If the route you are currently taking is the only reasonable option, the device might not calculate a detour.


SiriusXM TRAVEL LINK

SiriusXM Travel Link (8.4N Only)

- SiriusXM Travel Link is only available in the United States.
- SiriusXM Travel Link brings a wealth of useful information into your vehicle and right to your fingertips.
- To access Travel Link, touch the “More” soft-key, then the “Travel Link” soft-key.

NOTE:

SiriusXM Travel Link requires a subscription, sold separately after the 1 year trial subscription included with your vehicle purchase.

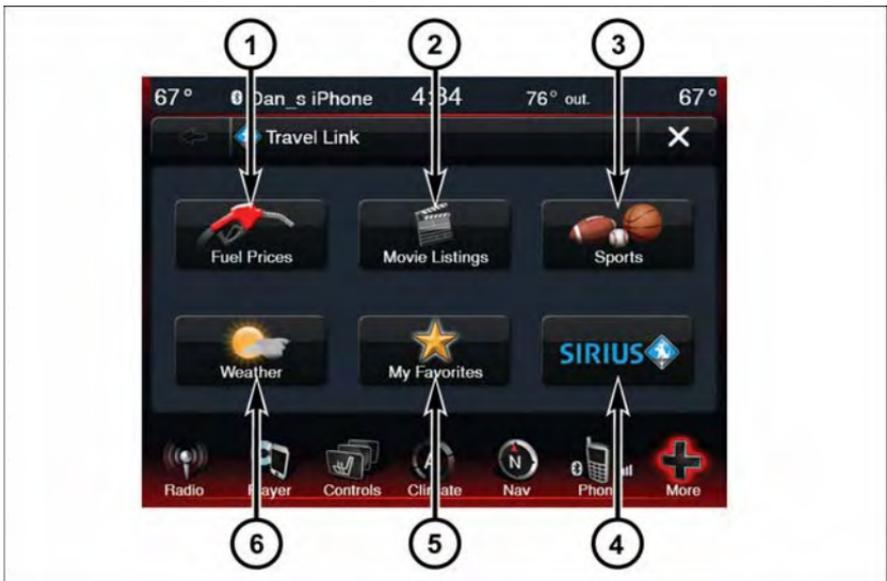

| | |
|---------------------------|---|
| 1 - Fuel Prices | View detailed price information for fuel stations near your current location. |
| 2 - Movie Listings | View information on movies that are playing at theaters near your current location. |
| 3 - Sports Scores | View scores and upcoming events for all major sports. |
| 4 - SiriusXM | View subscription information. |
| 5 - My Favorites | View and store your favorite location, theater and sport teams for quick access. |
| 6 - Weather | View detailed weather conditions, forecasts and ski/snowboarding conditions at local resorts. |

ELECTRONICS

STEERING WHEEL AUDIO CONTROLS

The steering wheel audio controls are located on the rear surface of the steering wheel.

Left Switch

- Press the switch up or down to search for the next listenable station or select the next or previous CD track.
- Press the button in the center to select the next preset station (radio) or to change CDs if equipped with a CD Changer.



Right Switch

- Press the switch up or down to increase or decrease the volume.
- Press the button in the center to change modes AM/FM/CD/SAT.

PLAYING iPod®/USB/MP3 DEVICES

- There are many ways to play music from iPod®/MP3 players or USB devices through your vehicles sound system.

Audio Jack (AUX)

- The Audio Jack, located in the center console, allows a portable device, such as an MP3 player or an iPod®, to be plugged into the radio and utilize the vehicles sound system, using a 3.5 mm audio cable, to amplify the source and play through the vehicle speakers.
- Touching the "Player" soft-key then choose AUX source will change the mode to auxiliary device if the Audio Jack is connected, allowing the music from your portable device to be heard through the vehicles speakers.
- The functions of the portable device are controlled using the device buttons. The volume may be controlled using the radio or portable device.
- To route the audio cable out of the center console, use the access cut out in the front of the console.

USB Port

- Connect your iPod® or compatible device using a USB cable into the USB Port. The USB Port is contained within the center console. USB Memory sticks with audio files can also be used. Then, audio from the device can be played on the vehicles sound system while providing metadata (artist, track title, album, etc.) information on the radio display.
- When connected, the iPod®/compatible USB device can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.
- The iPod® battery charges when plugged into the USB port (if supported by the specific device).
- To route the USB/iPod® cable out of the center console, use the access cut out in the front of the console.

NOTE:

- When connecting your iPod® device for the first time, the system may take several minutes to read your music, depending on the number of files. For example, the system will take approximately five minutes for every 1000 songs loaded on the device. Also during the reading process, the Shuffle and Browse functions will be disabled. This process is needed to ensure the full use of your iPod® features and only happens the first time it is connected. After the first time, the reading process of your iPod® will take considerably less time unless changes are made or new songs are added to the playlist.
- The USB port supports certain Mini, Classic, Nano, Touch, and iPhone® devices. The USB port also supports playing music from compatible external USB Mass Storage Class memory devices. Some iPod® software versions may not fully support the USB port features. Please visit Apple's website for iPod® software updates.

SD Card (8.4 and 8.4N Only)

- Play songs stored on an SD card inserted into the SD card slot, located on the radio faceplate.
- Song playback can be controlled using the radio or Steering Wheel Audio Controls to play, skip to the next or previous track, browse, and list the contents.

Bluetooth® Streaming Audio

- If equipped with Uconnect® Voice Command, your Bluetooth® - equipped iPod® devices, cell phones or other media players, may also be able to stream music to your vehicles sound system. Your connected device must be Bluetooth® - compatible, and paired with your Uconnect® system (see Uconnect® Phone for pairing instructions). You can access the music from your connected Bluetooth® device by touching the "Source" soft-key while in Player mode.

Uconnect® PHONE

Uconnect® Phone (Bluetooth® Hands Free Calling)

- If the Uconnect® Phone Button  exists on your steering wheel, then you have the Uconnect® Phone features.
- The Uconnect® Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).
- The Uconnect® Phone allows you to dial a phone number with your mobile phone using simple voice commands or using screen soft-keys.
- Refer to the “Understand The Features Of Your Vehicle” section of your vehicle's Owner's Manual on the DVD for further details.

NOTE:

The Uconnect® Phone requires a mobile phone equipped with the Bluetooth® Hands-Free Profile, Version 1.0 or higher. For Uconnect® customer support: U.S. residents - visit www.UconnectPhone.com or call 1-877-855-8400. Canadian Residents - call 1-800-465-2001 (English) or 1-800-387-9983 (French).

Pairing A Phone

- To use the Uconnect® Phone feature, you must first pair your Bluetooth® phone with the Uconnect® system.

Start Pairing Procedure On The Radio

- **Models 8.4, 8.4N:** Touch the “Phone” soft-key and then the “Settings” soft-key. Next, touch “Add Device.”
- **Models 4.3, 4.3S:** Press the MORE hard-key, then touch the “Phone” soft-key. Next, touch the “Settings” soft-key and then “Add Device.”
- Uconnect® Phone will display an “In progress” screen while the system is connecting.



Models 4.3 & 4.3S



Models 8.4 & 8.4N

Start Pairing Procedure On Mobile Phone

- Search for available devices on your Bluetooth® enabled mobile phone. This is usually within Settings or Options under “Bluetooth.” See your mobile phone’s manual for details.
- When your phone finds the system, select “Uconnect®” as the paired device.



Models 4.3 & 4.3S



Models 8.4 & 8.4N

Complete The Pairing Procedure

- When prompted on the phone, enter the 4-digit PIN number shown on the Uconnect® Screen.
- If your phone asks you to accept a connection request from Uconnect®, select "Yes." If available, check the box telling it not to ask again – that way your phone will automatically connect each time you start the vehicle.

NOTE:

Refer to www.UconnectPhone.com website for additional information on phone pairing and for a list of compatible phones.

Select The Mobile Phone's Priority Level

- When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting Yes will make this phone the highest priority. This phone will take precedence over other paired phones within range. Only one phone can be connected at a time.
- You are now ready to make hands-free calls. Press the Uconnect® Phone button on your steering wheel to begin.



Phone Menu Screen – Models 4.3 & 4.3S



Phone Menu Screen – Models 8.4 & 8.4N

Making A Phone Call

- Press the Uconnect® Phone button .
- After the BEEP, say “dial” then the number (or “call” then the name as listed in your phone; see Phonebook).

NOTE:

You can also initiate a call by using the touchscreen on the Phone main screen.

Receiving A Call – Accept (And End)

- When an incoming call rings/is announced on Uconnect®, press the Phone button .
- To end a call, press the Phone button .

Mute (Or Unmute) Microphone During Call

- During a call, touch the “mute” soft-key on the Phone main screen to mute and unmute the call.

Transfer Ongoing Call Between Handset And Vehicle

- During an on-going call, touch the “Transfer” soft-key on the Phone main screen to transfer an on-going call between handset and vehicle.

ELECTRONICS

Common Phone Commands (Examples)

- “Call John Smith”
- “Call John Smith mobile”
- “Dial 1 248 555 1212”
- “Call Emergency”
- “Call Towing Assistance”
- “Redial”

Phonebook

- Uconnect® radios will automatically download your phonebook from your paired phone, if this feature is supported by your phone. Entries are updated each time that the phone is connected. If your phone book entries do not appear, check the settings on your phone. Some phones require you to enable this feature manually.
- Your phonebook can be browsed on your radio screen, but editing can only be done on your phone. To browse, touch the “Phone” soft-key, then the “Phonebook” soft-key.
- Favorite phonebook entries can be saved as Favorites for quicker access. Favorites are shown at the top of your main phone screen.

Voice Command Tips (8.4 And 8.4N Only)

- Using complete names (i.e; Call John Doe vs. Call John) will result in greater system accuracy.
- You can “chain” commands together for faster results. Say “Call John Doe mobile,” for example.
- If you are listening to available voice command options, you do not have to listen to the entire list. When you hear the command that you need, press the  button on the steering wheel, wait for the beep and say your command.

Changing The Volume

- Start a dialogue by pressing the Phone button , then say a command for example - “Help.”
- Use the radio ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect® system is speaking. Please note the volume setting for Uconnect® is different than the audio system.

NOTE:

To access help, press the Uconnect[®] Phone  button on the steering wheel and say "help." Touch the display or push either  or  button and say "cancel" to cancel the help session.

Voice Text Reply

- Uconnect[®] Phone can read or send new text messages on your mobile phone.
- Your mobile phone must support Voice Text Reply over Bluetooth[®] to use this feature. If the Uconnect[®] Phone determines your mobile phone is not compatible with Voice Text Reply messaging over Bluetooth[®], the "Messaging" button will be greyed out and the feature will not be available for use.

NOTE:

- For mobile phone compatibility and pairing instructions, please visit www.UconnectPhone.com
- Uconnect[®] Phone Voice Text Reply is only available when the vehicle is not moving.

WARNING!

- Any voice commanded system should be used only in safe driving conditions following applicable laws regarding phone use. Your attention should be focused on safely operating the vehicle. Failure to do so may result in a collision causing you and others to be severely injured or killed.
- In an emergency, to use Uconnect[®] Phone, your mobile phone must be:
 - turned on,
 - paired to Uconnect[®] Phone,
 - and have network coverage.

Uconnect[®] VOICE COMMAND**Uconnect[®] Voice Command (8.4 & 8.4N Only)**

- If the Uconnect[®] Voice Command  button exists on your steering wheel, then you have the Voice Command feature.
- The Voice Command feature lets you keep your hands on the steering wheel, and your eyes on the road.
- When you press the Voice Command button  located on the radio faceplate or steering wheel, you will hear a beep. The beep is your signal to give a command. If you do not know what commands to say, you can say "help" and the system will provide options to you. If you ever wish to interrupt the system while it lists options, press the Voice Command button , listen for the BEEP, and say your command.
- You can "chain" commands together for faster results. Say "Play the artist Scott Joplin", for example.

Changing The Volume

- Start a dialogue by pressing the Voice Command button (Ⓜ️), then say a command (for example, “help”).
- Use the radio ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the Voice Command system is speaking. The volume setting for Voice Command is different than the audio system.
- Refer to the “Understand The Features Of Your Vehicle” section of your vehicle’s Owner’s Manual on the DVD for further details.

Common Voice Commands (Examples)


| | |
|---------------------------------|--|
| Switch Modes | “FM” “Satellite” “AM” “Change Source to iPod” “Change Source to SD Card” |
| Radio (FM, AM) | “95.5” “95.5 FM” “Go to preset 5” |
| Player | “Play Album ‘Greatest Hits’” “Play Artist ‘Scott Joplin’” “Play Genre ‘Rock’” “Play Song ‘Maple Leaf Rag’” |
| SiriusXM Satellite Radio | “39” “Foxxhole” |
| SiriusXM Travel Link | “Show fuel prices” “Show movie listings” “Show current weather” “Show extended weather” “Show Travel Link favorites” “Show NFL headlines” “Show NBA rankings” “Show NFL schedules” “Show NBA scores” |
| Navigation | “Navigate to {Address}” “Navigate to {Point of Interest}” |

NOTE:

For the shortened SiriusXM Satellite Radio mode commands to be recognized you must be in that mode. For example, if you are in SiriusXM Satellite Radio mode you can say “39,” but if you are not in SiriusXM mode, you would need to say “Tune to Satellite Channel 39.”

Common Navigation Voice Commands

- To access the navigation voice commands, press the Uconnect® Voice Command  button while in any mode and say "Navigation."
- Once in the Navigation feature, you can simply **Say What You See** on the touchscreen to give a navigation voice command.
- Locating an address can be given as a **one shot entry**. For example, after saying "Find Address" and the system is ready, you can say the entire address in one command, "1234 1st Street, Any Town, Michigan." If you are searching for a particular address or Point Of Interest, the available voice commands depend on what is displayed on the touchscreen.
- When the Voice Command system is ready to be given a command, the green indicator is visible in the right corner of the touchscreen.
- The following chart lists the navigation voice commands that may be available.

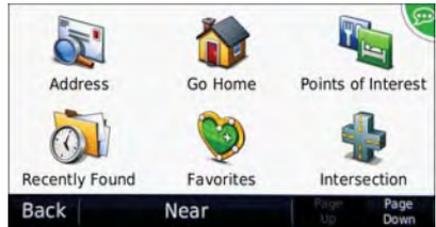

| Navigation Voice Commands: | |
|--|--|
| "Where To?" (Main Menu command) "View Map" (Main Menu command) "Repeat guidance" "Cancel Route" "Detour" (During a Route Guidance) "Where Am I?" "Find Address" "Go Home" "Find Place by Category" "Find Place by Name" "Find Recently Found" "Find Favorite" "Find City" "Find Nearest Restaurant" "Find Nearest Fuel" | "Find Nearest Transit" "Find Nearest Lodging" "Find Nearest Shopping" "Find Nearest Bank" "Find Nearest Parking" "Find Nearest Entertainment" "Find Nearest Recreation" "Find Nearest Attractions" "Find Nearest Hospitals" "Find Nearest Community" "Find Nearest Auto Services" "Find Nearest Airport" "Find Nearest Police Stations" "Find Nearest Fire Stations" "Find Nearest Auto Dealers" |


WARNING!

Any voice commanded system should be used only in safe driving conditions following applicable laws regarding phone use. Your attention should be focused on safely operating the vehicle. Failure to do so may result in a collision causing you and others to be severely injured or killed.

ELECTRONICS

ELECTRONIC VEHICLE INFORMATION CENTER (EVIC)

- The EVIC features a driver interactive display that is located in the instrument cluster. Pressing the controls on the left side of the steering wheel allows the driver to select vehicle information and Personal Settings. For additional information, refer to Programmable Features in this guide.

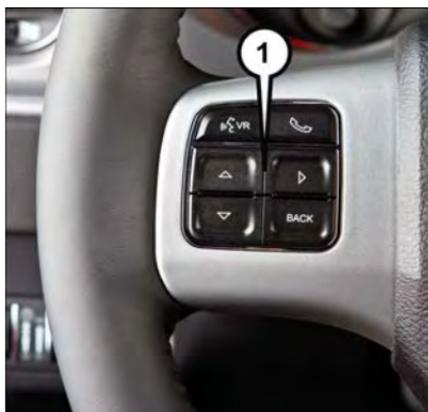

1 – Electronic Vehicle Information Center (EVIC) Controls

- Press and release the UP \triangle button to scroll upward through the main menus (Fuel Economy, Vehicle Info, Tire PSI, Cruise, Messages, Trip Info, Vehicle Speed and Turn Menu Off) and sub menus.
- Press and release the DOWN ∇ button to scroll downward through the main menus and sub menus.
- Press and release the SELECT \triangleright button for access to main menus, sub menus or to select a personal setting in the setup menu. Press and hold the SELECT button for two seconds to reset features.
- Press the BACK button to scroll back to a previous menu or sub menu.

Compass Calibration

This compass is self-calibrating, which eliminates the need to set the compass manually. When the vehicle is new, the compass may appear erratic and the EVIC will display “CAL” until the compass is calibrated.

You may also calibrate the compass by completing one or more 360 degree turns (in an area free from large metal or metallic objects) until the “CAL” message displayed in the EVIC turns off. The compass will now function normally.

ECO

- The ECO message will appear in your EVIC display when the Fuel Saver Technology is active and you are driving in a fuel efficient manner.
- This feature allows you to monitor when you are driving in a fuel efficient manner, and it can be used to modify driving habits in order to increase fuel economy.

PROGRAMMABLE FEATURES

Electronic Vehicle Information Center (EVIC)

- The EVIC can be used to view or change the following settings. Push the UP  or DOWN  button to scroll through the main menus, then push the RIGHT  button to scroll through the sub-menus of each menu item. Push the **BACK** button to scroll back to a previous menu or sub menu.
 - Speedometer
 - MPH to km/h
 - Vehicle Info
 - SRT Performance Features (SRT Only)
 - Driver Assist
 - Fuel Economy
 - Trip Info
 - Audio
 - Stored Messages
 - Screen Setup
 - Diagnostic Codes (SRT Only)

Uconnect® 4.3 Customer Programmable Features

- The Uconnect® 4.3 system allows you to access Customer Programmable feature settings such as Display, Clock, Safety/Assistance, Lights, Doors & Locks, Heated Seats, Engine Off Operation, Compass Settings, Audio, Phone/Bluetooth and SiriusXM Setup through hard-keys and soft-keys.
- Press the Settings hard-key to on the right side of the unit to access the Settings screen, use the Page Up/Down soft-keys to scroll through the following settings. The following feature settings are available:
 - Display
 - Safety / Assistance
 - Heated Seats
 - Compass Settings
 - Phone / Bluetooth
 - Auto-On Comfort & Remote Start
 - Clock
 - Doors & Locks
 - Engine Off Options
 - Audio
 - SiriusXM Setup
 - Lights

Uconnect® 8.4 Customer Programmable Features

- The Uconnect® 8.4 system allows you to access Customer Programmable feature settings such as Display, Clock, Safety/Assistance, Lights, Doors & Locks, Heated Seats, Engine Off Operation, Compass Settings, Audio, Phone/Bluetooth and SiriusXM Setup through soft-keys.

ELECTRONICS

- Touch the More soft-key on the bottom of the screen, then touch the Settings soft-key to access the Settings screen. When making a selection, scroll up or down until the preferred setting is highlighted, then press and release the preferred setting until a check-mark appears next to the setting, showing that setting has been selected. The following feature settings are available:
 - Display
 - Safety & Driving Assistance
 - Auto-On Comfort & Remote Start
 - Compass Settings
 - Phone / Bluetooth
 - Lights
 - Clock
 - Doors & Locks
 - Engine Off Options
 - Audio
 - SiriusXM Setup

UNIVERSAL GARAGE DOOR OPENER

Universal Garage Door Opener (HomeLink®)

- HomeLink® replaces up to three hand-held transmitters that operate devices such as garage door openers, motorized gates, lighting or home security systems. The HomeLink® unit is powered by your vehicle's 12 Volt battery.
- The HomeLink® buttons that are located in the overhead console or sunvisor designate the three different HomeLink® channels.
- The HomeLink® indicator is located above the center button.



Before You Begin Programming HomeLink®

Ensure that your vehicle is parked outside of the garage before you begin programming.

For efficient programming and accurate transmission of the radio-frequency signal, it is recommended that a new battery be placed in the hand-held transmitter of the device that is being programmed to the HomeLink® system.

Erase all channels before you begin programming. To erase the channels, place the ignition switch into the ON/RUN position, then press and hold the two outside HomeLink® buttons (I and III) for up to 20 seconds or until the red indicator flashes.

NOTE:

Erasing all channels should only be performed when programming HomeLink® for the first time. Do not erase channels when programming additional buttons.

If you have any problems, or require assistance, please call toll-free 1-800-355-3515 or, on the Internet at www.HomeLink.com for information or assistance.

Programming A Rolling Code

NOTE:

For programming Garage Door Openers that were manufactured after 1995. These Garage Door Openers can be identified by the “LEARN” or “TRAIN” button located where the hanging antenna is attached to the Garage Door Opener. It is NOT the button that is normally used to open and close the door. The name and color of the button may vary by manufacturer.

1. Place the ignition switch into the ON/RUN position.
2. Place the hand-held transmitter 1 to 3 in (3 to 8 cm) away from the HomeLink® button you wish to program while keeping the HomeLink® indicator light in view.
3. Simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button.
4. Continue to hold both buttons and observe the indicator light. The HomeLink® indicator will flash slowly and then rapidly after HomeLink® has received the frequency signal from the hand-held transmitter. Release both buttons after the indicator light changes from slow to rapid.
5. At the garage door opener motor (in the garage), locate the “LEARN” or “TRAINING” button. This can usually be found where the hanging antenna wire is attached to the garage door opener motor. Firmly press and release the “LEARN” or “TRAINING” button.

NOTE:

You have 30 seconds in which to initiate the next step after the LEARN button has been pressed.

6. Return to the vehicle and press the programmed HomeLink® button twice (holding the button for two seconds each time). If the device is plugged in and activates, programming is complete.

NOTE:

If the device does not activate, press the button a third time (for two seconds) to complete the training.

7. To program the remaining two HomeLink® buttons, repeat each step for each remaining button. DO NOT erase the channels.

Programming A Non-Rolling Code

NOTE:

For programming Garage Door Openers manufactured before 1995.

1. Turn the ignition switch to the ON/RUN position.
2. Place the hand-held transmitter 1 to 3 inches (3 to 8 cm) away from the HomeLink® button you wish to program while keeping the HomeLink® indicator light in view.
3. Simultaneously press and hold both the HomeLink® button you want to program and the hand-held transmitter button.
4. Continue to hold both buttons and observe the indicator light. The HomeLink® indicator will flash slowly and then rapidly after HomeLink® has received the frequency signal from the hand-held transmitter. Release both buttons after the indicator light changes from slow to rapid.
5. Press and hold the programmed HomeLink® button and observe the indicator light. If the indicator light stays on constantly, programming is complete and the garage door (or device) should activate when the HomeLink® button is pressed.
6. To program the two remaining HomeLink® buttons, repeat each step for each remaining button. DO NOT erase the channels.

Using HomeLink®

- To operate, press and release the programmed HomeLink® button. Activation will now occur for the programmed device (e.g., garage door opener, gate operator, security system, entry door lock, home/office lighting, etc.). The hand-held transmitter of the device may also be used at any time.

WARNING!

- Your motorized door or gate will open and close while you are programming the universal transceiver. Do not program the transceiver if people or pets are in the path of the door or gate.
- Do not run your vehicle in a closed garage or confined area while programming the transceiver. Exhaust gas from your vehicle contains Carbon Monoxide (CO) which is odorless and colorless. Carbon Monoxide is poisonous when inhaled and can cause you and others to be severely injured or killed.

POWER OUTLET

- There are three 12 Volt electrical outlets on this vehicle.
- The front 12 Volt power outlet has power available only when the ignition is placed in the ACC or RUN position.
- The center console outlet is powered directly from the battery (power available at all times). Items plugged into this outlet may discharge the battery and/or prevent the engine from starting.
- There is also a 12 Volt power outlet located on the back of the center console for rear passengers. This power outlet has power available only when the ignition is placed in the ACC or RUN position.



NOTE:

- Do not exceed the maximum power of 160 Watts (13 Amps) at 12 Volts. If the 160 Watt (13 Amp) power rating is exceeded, the fuse protecting the system will need to be replaced.
- Power outlets are designed for accessory plugs only. Do not insert any other object in the power outlet as this will damage the outlet and blow the fuse. Improper use of the power outlet can cause damage not covered by your new vehicle warranty.

#12 Fuse 20 Amp Yellow – Cigar Lighter
Instrument Panel/ Console Rear



#38 Fuse 20 Amp Yellow – Power
Outlet Inside Arm Rest

TRAILER TOWING WEIGHTS (MAXIMUM TRAILER WEIGHT RATINGS)

| Engine/ Transmission | Frontal Area | Max. GTW (Gross Trailer Wt.) | Max. Tongue Wt. (See Note) |
|---|----------------------|---------------------------------|-------------------------------|
| 3.6L Automatic | 22 sq ft (2.04 sq m) | 1,000 lbs (454 kg) | 100 lbs (45 kg) |
| 5.7L Automatic | 32 sq ft (2.97 sq m) | 1,000 lbs (454 kg) | 100 lbs (45 kg) |
| Refer to local laws for maximum trailer towing speeds | | | |

RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.)

Two-Wheel Drive And All-Wheel Drive

- Recreational towing (with all four wheels on the ground, or using a tow dolly) is **NOT ALLOWED**. The only acceptable method for towing this vehicle (behind another vehicle) is on a vehicle trailer with all four wheels **OFF** the ground.

CAUTION!

Towing this vehicle in violation of the above requirements can cause severe transmission and/or transfer case damage. Such damage is not covered by the New Vehicle Limited Warranty.

AUTOSTICK®

Steering Wheel Mounted Paddle Shifters Or Console Mounted Shifter

- AutoStick® is a driver-interactive transmission feature that offers manual gear shifting to provide you with more control of the vehicle. AutoStick® allows you to maximize engine braking, and improve overall vehicle performance.
- This system can also provide you with more control during passing, city driving, cold slippery conditions, mountain driving, trailer towing, and many other situations.

Operation

- When the shift lever is in the DRIVE position, the transmission will operate automatically, shifting between the five available gears. To engage AutoStick®, simply move the shift lever to the right or left (+/-) while in the DRIVE position, or press one of the steering wheel mounted shift paddles (+/-). When AutoStick® is active, the current transmission gear is displayed in the Electronic Vehicle Information Center (EVIC) portion of the instrument cluster. In AutoStick® mode, the transmission will shift when manually selected by the driver (using the shift lever, or the shift paddles), unless an engine lugging or overspeed condition would result. It will remain in the selected gear until another upshift or downshift is chosen, except as described below:
 - The transmission will automatically downshift as the vehicle slows (to prevent engine lugging) and will display the current gear.
 - The transmission will automatically downshift to first gear when coming to a stop.
 - You can start out in first or second gear. Tapping (+) [at a stop] will allow starting in second gear. Starting out in second gear is helpful in snowy or icy conditions.
 - The system will ignore attempts to upshift at too low of a vehicle speed.
 - Transmission shifting will be more noticeable when AutoStick® is engaged. To disengage AutoStick® mode, hold the shift lever to the right or press and hold the (+) shift paddle until "D" is once again displayed in the instrument cluster. You can shift in or out of the AutoStick® mode at any time without taking your foot off the accelerator pedal.



ELECTRONIC CONTROL DAMPING SYSTEM

- This vehicle may be equipped with an electronic controlled damping system. This system reduces body roll and pitch in many driving situations including cornering, acceleration and braking. There are three modes of operation:

Automatic (Auto) Mode

- This is the default position when vehicle ignition is first turned on. This mode will give a sporty, but comfortable ride. Within this mode, the suspension will adapt to the vehicle inputs, including vehicle speed, steering inputs, braking, and acceleration.
- If AutoStick® is engaged while in "Auto" mode, the transmission will automatically shift up if maximum engine speed is reached.
- Heavily pressing the accelerator pedal may generate an automatic downshift for improved acceleration.
- This mode should be used for most driving situations.



Sport Mode SPORT

- This mode is driver selectable when the vehicle is placed in SPORT mode (press the CONTROLS button and then the SPORT button on the display screen). This mode will set suspension for maximum performance handling and is intended for spirited driving.
- When SPORT mode is enabled, a flag will light up in the instrument cluster.

NOTE:

The SPORT setting will provide a firmer ride.




Track Mode

- In track mode, the transmission has a sportier, more aggressive shift pattern.
- This mode includes SPORT Suspension and affects transmission shifting in either normal Drive or Autostick®.
- If Autostick® (console shifter or paddle shifters) is engaged while in “Track” mode, the transmission will remain in the selected gear even when maximum engine speed is reached. Engine overspeed protection is achieved through fuel cut off at or near redline.
- This mode will provide aggressive shifting and is intended for spirited driving.
- The system will return to SPORT mode when the ignition switch is cycled from RUN to OFF, and back to RUN again, if this mode is selected.



SRT PERFORMANCE FEATURES

- The EVIC can be used to view or change the following SRT Performance Features. Push the UP \triangle or DOWN button ∇ until SRT Performance displays in the EVIC, then push the RIGHT \triangleright button. Follow the prompts to view and set your desired settings. Push the **BACK** button to scroll back to a previous menu or sub menu.

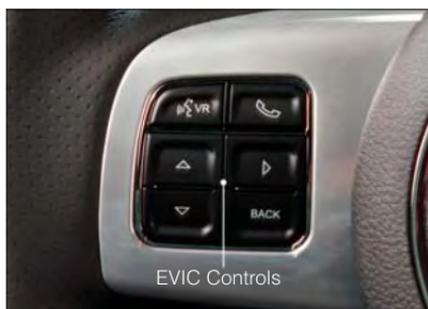

SRT Performance Sub Menu Items

- 0-60 mph (0-100 km/h)
- Braking Distance
- 1/8 Mile
- 1/4 Mile
- Instantaneous G-Force
- Peak G-Force
- Digital Speedometer

0-60 mph (0-100 km/h)

- When selected, this screen displays the time it takes for the vehicle to go from 0 to 60 mph (0 to 100 km/h) within 10 seconds.

Braking Distance

- When selected, this screen displays the vehicle's braking distance and the speed at which the brake pedal was depressed.

1/8 Mile, 1/4 Mile

- When selected, this screen displays the time it takes the vehicle to travel 1/8 mile (1/4 mile) within 30 seconds and the vehicle's speed when it reaches 1/8 mile (1/4 mile).

Instantaneous G-Force

- When selected, this screen displays the current G-Force (lateral and longitudinal) along with a friction circle that displays the directions of the forces.

Peak G-Force

- When selected, this screen displays all four G-Force values (two lateral and two longitudinal).

Uconnect® SRT Performance Features

- To access the SRT Performance Features, touch the "SRT & More" soft-key then touch the "SRT Performance" soft-key. Press the UP or DOWN soft-key to cycle through the features. Press the feature soft-key to select that feature.
- The Performance Page includes the following menus:
 - Home
 - Instantaneous G - Force
 - Gauges 2
 - Options
 - Timers
 - Gauges 1
 - Engine Values

Timers

0-60 mph (0-100 km/h), 1/8 Mile, 1/4 Mile

When selected, this screen displays the time it takes for the vehicle to go from 0 to 60 mph (0 to 100 km/h), 1/8 mile or 1/4 mile.

Braking Distance

When selected, this screen displays the vehicle's braking distance and the speed at which the brake pedal was depressed.

G-Force

When selected, this screen displays all four G-Force values (two lateral and two longitudinal) as well as steering angle.

Gauges 1

- Oil Temperature
- Oil Pressure
- Battery Voltage

Gauges 2

- Coolant Temperature
- Oil Temperature

- Transmission Temperature
- Intake Air Temperature
- Oil Pressure
- Battery Voltage

Engine

When selected, this screen displays miles per hour (mph), horsepower (hp), torque (ft/lb), oil pressure (psi) and gear selector values.

Handling

When selected, this screen displays peak g-force, instantaneous g-force, steering and yaw angles.

Options

When selected, this screen allows you to choose a standard or custom display for your SRT home page.

WARNING!

Measurement of vehicle statistics with the Performance Features is intended for off-highway or off-road use only and should not be done on any public roadways. It is recommended that these features be used in a controlled environment and within the limits of the law. The capabilities of the vehicle as measured by the performance pages must never be exploited in a reckless or dangerous manner, which can jeopardize the user's safety or the safety of others. Only a safe, attentive, and skillful driver can prevent accidents.

SUMMER/THREE-SEASON TIRES

- This vehicle may be equipped with wheels and tires to enhance traction in both wet and dry conditions.
- Summer tires are not intended to be driven in snow or on ice.
- Summer tires have significantly reduced grip in temperatures below 50°F (10°C)
- Use summer tires only in sets of four.

NOTE:

Summer tires will not contain the all season designation or mountain/snowflake symbol on the sidewall of the tire.

WARNING!

Do not use summer tires in snow/ice conditions. You could lose control, resulting in severe injury or death. Driving too fast for conditions also creates the possibility of loss of vehicle control.

WHAT TO DO IN EMERGENCIES

ROADSIDE ASSISTANCE

Dial toll-free 1-800-521-2779 for U.S. Residents or 1-800-363-4869 for Canadian Residents.

- Provide your name, vehicle identification number, license plate number, and your location, including the telephone number from which you are calling.
- Briefly describe the nature of the problem and answer a few simple questions.
- You will be given the name of the service provider and an estimated time of arrival. If you feel you are in an “unsafe situation”, please let us know. With your consent, we will contact local police or safety authorities.

INSTRUMENT CLUSTER WARNING LIGHTS

- Electronic Stability Control (ESC) Activation/Malfunction Indicator Light

The “ESC Activation/Malfunction Indicator Light” in the instrument cluster will come on when the ignition switch is turned to the ON/RUN position. It should go out with the engine running. If the “ESC Activation/Malfunction Indicator Light” comes on continuously with the engine running, a malfunction has been detected in the ESC system.

If this light remains on after several ignition cycles, and the vehicle has been driven several miles (kilometers) at speeds greater than 30 mph (48 km/h), we recommend you drive to the nearest service center and have the vehicle serviced immediately.

- Tire Pressure Monitoring System (TPMS) Light

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

IF THE LIGHT STARTS FLASHING INDICATING A LOW TIRE PRESSURE, ADJUST THE AIR PRESSURE IN THE LOW TIRE TO THE AIR PRESSURE SHOWN ON THE VEHICLE PLACARD OR TIRE INFLATION PRESSURE LABEL LOCATED ON THE DRIVER'S DOOR.

WHAT TO DO IN EMERGENCIES

NOTE:

AFTER INFLATION, THE VEHICLE MAY NEED TO BE DRIVEN FOR 20 MINUTES BEFORE THE FLASHING LIGHT WILL TURN OFF.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale.

When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

NOTE:

Tire pressures change by approximately 1 psi (7 kPa) per 12° F (7° C) of air temperature change. Keep this in mind when checking tire pressure inside a garage, especially in the Winter. Example: If garage temperature is 68°F (20°C) and the outside temperature is 32°F (0°C), then the cold tire inflation pressure should be increased by 3 psi (21 kPa), which equals 1 psi (7 kPa) for every 12°F (7°C) for this outside temperature condition.

CAUTION!

The TPMS has been optimized for the original equipment tires and wheels. TPMS pressures and warning have been established for the tire size equipped on your vehicle. Undesirable system operation or sensor damage may result when using replacement equipment that is not of the same size, type, and/or style. Aftermarket wheels can cause sensor damage. Do not use tire sealant from a can, or balance beads if your vehicle is equipped with a TPMS, as damage to the sensors may result.



- Engine Temperature Warning Light

This light warns of an overheated engine condition.

If the light turns on or flashes continuously while driving, safely pull over and stop the vehicle. If the A/C system is on, turn it off. Also, shift the transmission into NEUTRAL and idle the vehicle. If the temperature reading does not return to normal, turn the engine off immediately.

We recommend that you do not operate the vehicle or engine damage will occur. Have the vehicle serviced immediately.

WHAT TO DO IN EMERGENCIES

WARNING!

A hot engine cooling system is dangerous. You or others could be badly burned by steam or boiling coolant.

BRAKE - Brake Warning Light

The Brake Warning light illuminates when there is either a system malfunction or the parking brake is applied. If the light is on and the parking brake is not applied, it indicates a possible brake hydraulic malfunction, brake booster problem or an Anti-Lock Brake System problem.

Please have your vehicle serviced immediately.

WARNING!

Driving a vehicle with the red brake light on is dangerous. Part of the brake system may have failed. It will take longer to stop the vehicle. You could have a collision. Have the vehicle checked immediately.

- Malfunction Indicator Light (MIL)

Certain conditions, such as a poor fuel quality, etc., may illuminate the MIL after engine start. The vehicle should be serviced if the light stays on through several typical driving cycles. In most situations, the vehicle will drive normally and not require towing.

If the MIL flashes when the engine is running, serious conditions may exist that could lead to immediate loss of power or severe catalytic converter damage. We recommend you do not operate the vehicle. Have the vehicle serviced immediately.

- Electronic Stability Control (ESC) OFF Indicator Light

This light indicates the Electronic Stability Control (ESC) is off.

- Charging System Light

This light shows the status of the electrical charging system. If the charging system light remains on, it means that the vehicle is experiencing a problem with the charging system.

We recommend you do not continue driving if the charging system light is on. Have the vehicle serviced immediately.

- Oil Pressure Warning Light

This light indicates low engine oil pressure. If the light turns on while driving, stop the vehicle and shut off the engine as soon as possible. A chime will sound when this light turns on.

We recommend you do not operate the vehicle or engine damage will occur. Have the vehicle serviced immediately.

WHAT TO DO IN EMERGENCIES

- Anti-Lock Brake (ABS) Light

This light monitors the Anti-Lock Brake System (ABS).

If the light is not on during starting, stays on, or turns on while driving, we recommend you contact the nearest authorized dealer and have the vehicle serviced immediately.

- Electronic Throttle Control (ETC) Indicator Light

This light informs you of a problem with the system.

If a problem is detected, the light will come on while the engine is running. Cycle the ignition when the vehicle has completely stopped and the shift lever is placed in the PARK position; the light should turn off.

If the light remains lit with the engine running, your vehicle will usually be drivable; however, see an authorized dealer immediately. If the light is flashing when the engine is running, immediate service is required and you may experience reduced performance, an elevated/rough idle or engine stall and your vehicle may require towing.

- Air Bag Warning Light

If the light is not on during starting, stays on, or turns on while driving, have the vehicle serviced by an authorized dealer immediately.

SERVICE AWD SYSTEM Message

If the SERVICE AWD SYSTEM warning message appears after engine start up, or during driving, it means the AWD system is not functioning properly. We recommend you do not operate the vehicle. Have the vehicle serviced immediately.

- Sport Shifting

This light will illuminate when **SPORT MODE** is selected. This mode provides performance based transmission shifting depending on the driver requested throttle position.

- Sport Suspension Indicator

The light will illuminate when **SPORT** or **Track MODE** is selected. This mode provides performance based tuning with improved handling through an electronic controlled damping system.

Oil Change Due

Your vehicle is equipped with an engine oil change indicator system. The "Oil Change Due" message will flash in the EVIC display for approximately 10 seconds after a single chime has sounded to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style.

WHAT TO DO IN EMERGENCIES

Resetting The Light After Servicing

Vehicles Equipped With Keyless Enter-N-Go™

- Without pressing the brake pedal, push the ENGINE START/STOP button and cycle the ignition to the ON/RUN position (do not start the engine.)
- Fully depress the accelerator pedal, slowly, three times within 10 seconds.
- Without pressing the brake pedal, push the ENGINE START/STOP button once to return the ignition to the OFF/LOCK position.

Vehicles Not Equipped With Keyless Enter-N-Go™

- Turn the ignition switch to the ON/RUN position (do not start the engine.)
- Fully depress the accelerator pedal, slowly, three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

NOTE:

If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary, repeat this procedure.

IF YOUR ENGINE OVERHEATS

In any of the following situations, you can reduce the potential for overheating by taking the appropriate action:

- On the highways – slow down.
- In city traffic – while stopped, shift the transmission to NEUTRAL, but do not increase engine idle speed.

NOTE:

There are steps that you can take to slow down an impending overhear condition:

- If your air conditioner (A/C) is on, turn it off. The A/C system adds heat to the engine cooling system and turning the A/C off can help remove this heat.
- You can also turn the temperature control to maximum heat, the mode control to floor and the blower control to high. This allows the heater core to act as a supplement to the radiator and aids in removing heat from the engine cooling system.

CAUTION!

Driving with a hot cooling system could damage your vehicle. If the temperature gauge reads HDT (H), pull over and stop the vehicle. Idle the vehicle with the air conditioner turned off until the pointer drops back into the normal range. If the pointer remains on HDT (H), and you hear continuous chimes, turn the engine off immediately, and call for service.

WHAT TO DO IN EMERGENCIES

WARNING!

You or others can be badly burned by hot engine coolant (antifreeze) or steam from your radiator. If you see or hear steam coming from under the hood, do not open the hood until the radiator has had time to cool. Never try to open a cooling system pressure cap when the radiator or coolant bottle is hot.

JACKING AND TIRE CHANGING

Jack Location/Spare Tire Stowage

The jack and spare tire are both stowed under an access cover in the trunk. Follow these steps to access the jack and spare tire.

NOTE:

The spare tire must be removed in order to access the jack.

1. Open the trunk.
2. Lift the access cover using the pull strap. To hold the cover up and into place, hang the hook that is located on the end of the strap over the trunk upper weather strip located in the channel below the rear window.




WHAT TO DO IN EMERGENCIES

3. Remove the fastener securing the spare tire.
4. Remove the spare tire.



5. Remove the fastener securing the jack.
6. Remove the scissors jack and lug wrench from the spare wheel as an assembly. Turn the jack screw to the left to loosen the lug wrench, and remove the wrench from the jack assembly.

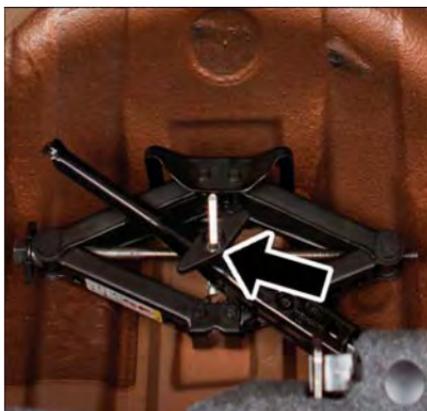

Preparations For Jacking


1. Park the vehicle on a firm, level surface as far from the edge of the roadway as possible. Avoid icy or slippery areas.
2. Turn on the Hazard Warning flasher.
3. Set the parking brake.
4. Place the shift lever into PARK.
5. Turn OFF the ignition.

WHAT TO DO IN EMERGENCIES

6. Block the front and rear of the wheel diagonally opposite of the jacking position. For example, if changing the right front tire, block the left rear wheel.

NOTE:

Passengers should not remain in the vehicle when the vehicle is being jacked.

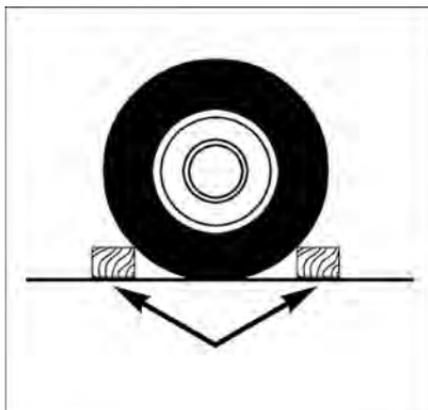

Wheel Blocked

Jacking And Changing A Tire

1. Remove the spare tire, jack, and lug wrench.
2. If equipped with aluminum wheels where the center cap covers the lug nuts, use the lug wrench to pry the center cap off carefully before raising the vehicle.
3. Before raising the vehicle, use the lug wrench to loosen, but not remove, the lug nuts on the wheel with the flat tire. Turn the lug nuts counterclockwise one turn while the wheel is still on the ground.



WHAT TO DO IN EMERGENCIES

4. Place the jack underneath the lift area that is closest to the flat tire. Turn the jack screw clockwise to firmly engage the jack saddle with the lift area of the sill flange.

NOTE:

If the vehicle is too low for jack placement, slide the jack on its side and rotate it up into position.

5. Raise the vehicle just enough to remove the flat tire and install the spare tire.
6. Remove the lug nuts and tire.



WHAT TO DO IN EMERGENCIES

7. Mount the spare tire.

NOTE:

- For vehicles so equipped, do not attempt to install a center cap or wheel cover on the compact spare.
- Refer to “Compact Spare Tire” and to “Limited-Use Spare” under “Tires—General Information” in “Starting and Operating” in the Owner’s Manual on the DVD for additional warnings, cautions, and information about the spare tire, its use, and operation.



8. Install the lug nuts with the cone shaped end of the lug nut toward the wheel. Lightly tighten the lug nuts.
9. Lower the vehicle to the ground by turning the jack handle counterclockwise.
10. Finish tightening the lug nuts. Push down on the wrench while at the end of the handle for increased leverage. Tighten the lug nuts in a star pattern until each nut has been tightened twice. The correct tightness of each lug nut is 130 ft-lb. (176 N·m). If in doubt about the correct tightness, have them checked with a torque wrench by your authorized dealer or at a service station.
11. Stow the jack, tools and flat tire. Make sure the base of the jack faces the front of the vehicle before tightening down the fastener.

Road Tire Installation

1. Mount the road tire on the axle.
2. Install the remaining lug nuts with the cone shaped end of the nut toward the wheel. Lightly tighten the lug nuts.
3. Lower the vehicle to the ground by turning the jack handle counterclockwise.
4. Finish tightening the lug nuts. Push down on the wrench while at the end of the handle for increased leverage. Tighten the lug nuts in a star pattern until each nut has been tightened twice. The correct tightness of each lug nut is 130 ft-lbs (176 N·m). If in doubt about the correct tightness, have them checked with a torque wrench by your authorized dealer or service station.
5. After 25 miles (40 km) check the lug nut torque with a torque wrench to ensure that all lug nuts are properly seated against the wheel.

CAUTION!

Do not attempt to raise the vehicle by jacking on locations other than those indicated in the Jacking Instructions for this vehicle.

WHAT TO DO IN EMERGENCIES

WARNING!

- Do not attempt to change a tire on the side of the vehicle close to moving traffic. Pull far enough off the road to avoid the danger of being hit when operating the jack or changing the wheel.
- Being under a jacked-up vehicle is dangerous. The vehicle could slip off the jack and fall on you. You could be crushed. Never put any part of your body under a vehicle that is on a jack.
- Never start or run the engine while the vehicle is on a jack. If you need to get under a raised vehicle, take it to a service center where it can be raised on a lift.
- The jack is designed to be used as a tool for changing tires only. The jack should not be used to lift the vehicle for service purposes. The vehicle should be jacked on a firm level surface only. Avoid ice or slippery areas.
- A loose tire or jack thrown forward in a collision or hard stop could endanger the occupants of the vehicle. Always stow the jack parts and the spare tire in the places provided.
- Carefully follow these tire changing warnings to help prevent personal injury or damage to your vehicle:
 - Always park on a firm, level surface as far from the edge of the roadway as possible before raising the vehicle.
 - Turn on the Hazard Warning flasher.
 - Block the wheel diagonally opposite the wheel to be raised.
 - Set the parking brake firmly and set an automatic transmission in PARK; a manual transmission in REVERSE.
 - Do not let anyone sit in the vehicle when it is on a jack.
 - Do not get under the vehicle when it is on a jack.
 - Only use the jack in the positions indicated and for lifting this vehicle during a tire change.
 - If working on or near a roadway, be extremely careful of motor traffic.
 - Raising the vehicle higher than necessary can make the vehicle less stable. It could slip off the jack and hurt someone near it. Raise the vehicle only enough to remove the tire.
 - To avoid the risk of forcing the vehicle off the jack, do not fully tighten the wheel nuts until the vehicle has been lowered. Failure to follow this warning may result in personal injury.
 - A loose tire or jack thrown forward in a collision or hard stop could endanger the occupants of the vehicle. Always stow the jack parts and the spare tire in the places provided.
 - The limited-use spare tires are for emergency use only. Installation of this limited-use spare tire affects vehicle handling. With this tire, do not drive more than 60 mph (100 km/h). Keep inflated to the cold tire inflation pressure listed on either your tire placard or limited-use spare tire and wheel assembly. Replace (or repair) the original tire at the first opportunity and reinstall it on your vehicle. Failure to do so could result in loss of vehicle control.

WHAT TO DO IN EMERGENCIES

TIREFIT KIT

Your vehicle may be equipped with a TIREFIT Kit.

Small punctures up to 1/4" (6 mm) in the tire tread can be sealed with TIREFIT. Foreign objects (e.g., screws or nails) should not be removed from the tire. TIREFIT can be used in outside temperatures down to approximately -4°F (-20°C).

This kit will provide a temporary tire seal, allowing you to drive your vehicle up to 100 miles (160 km) with a maximum speed of 55 mph (90 km/h).

TIREFIT Storage

- The TIREFIT kit is located in the trunk.

TIREFIT Kit Components And Operation

Using The Mode Select Knob And Hoses

Your TIREFIT kit is equipped with the following symbols to indicate the air or sealant mode.

Selecting Air Mode

Turn the Mode Select Knob (5) to this position for air pump operation only. Use the Black Air Pump Hose (7) when selecting this mode.

Selecting Sealant Mode


Turn the Mode Select Knob (5) to this position to inject the TIREFIT Sealant and to inflate the tire. Use the Sealant Hose (clear hose) (6) when selecting this mode.

Using The Power Button

Push and release the Power Button (4) once to turn On the TIREFIT kit. Push and release the Power Button (4) again to turn Off the TIREFIT kit.

Using The Deflation Button

Press the Deflation Button (2) to reduce the air pressure in the tire if it becomes over-inflated.

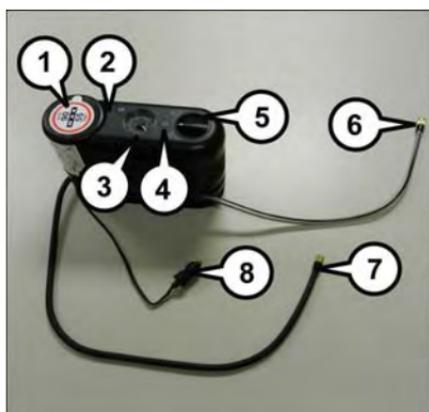

TIREFIT Components

- 1 – Sealant Bottle
- 2 – Deflation Button
- 3 – Pressure Gauge
- 4 – Power Button
- 5 – Mode Select Knob
- 6 – Sealant Hose (Clear)
- 7 – Air Pump Hose (Black)
- 8 – Power Plug (located on bottom side of TIREFIT Kit)

WHAT TO DO IN EMERGENCIES

TIREFIT Usage Precautions

- Replace the TIREFIT Sealant Bottle (1) and Sealant Hose (6) prior to the expiration date (printed on the bottle label) to assure optimum operation of the system. Refer to “Sealing a Tire with TIREFIT” section (F) “Sealant Bottle and Hose Replacement.”
- The Sealant Bottle (1) and Sealant Hose (6) are a one tire application use. After each use, always replace these components immediately at an authorized dealer.
- When the TIREFIT sealant is in a liquid form, clean water, and a damp cloth will remove the material from the vehicle or tire and wheel components. Once the sealant dries, it can easily be peeled off and properly discarded.
- For optimum performance, make sure the valve stem on the wheel is free of debris before connecting the TIREFIT kit.
- You can use the TIREFIT air pump to inflate bicycle tires. The kit also comes with two needles, located in the Accessory Storage Compartment (on the bottom of the air pump) for inflating sport balls, rafts, or similar inflatable items. However, use only the Air Pump Hose (7) and make sure the Mode Select Knob (5) is in the Air Mode when inflating such items to avoid injecting sealant into them. The TIREFIT Sealant is only intended to seal punctures less than 1/4” (6 mm) diameter in the tread of your vehicle.
- Do not lift or carry the TIREFIT kit by the hoses.

Sealing A Tire With TIREFIT

(A) Whenever You Stop To Use TIREFIT:

1. Pull over to a safe location and turn on the vehicle’s Hazard Warning flashers.
2. Verify that the valve stem (on the wheel with the deflated tire) is in a position that is near to the ground. This will allow the TIREFIT Hoses (6) and (7) to reach the valve stem and keep the TIREFIT kit flat on the ground. This will provide the best positioning of the kit when injecting the sealant into the deflated tire and running the air pump. Move the vehicle as necessary to place the valve stem in this position before proceeding.
3. Place the transmission in PARK (auto transmission) or in Gear (manual transmission) and cycle the ignition to the OFF position.
4. Set the parking brake.

(B) Setting Up To Use TIREFIT:

1. Turn the Mode Select Knob (5) to the Sealant Mode position.
2. Uncoil the Sealant Hose (6) and then remove the cap from the fitting at the end of the hose.
3. Place the TIREFIT kit flat on the ground next to the deflated tire.
4. Remove the cap from the valve stem and then screw the fitting at the end of the Sealant Hose (6) onto the valve stem.
5. Uncoil the Power Plug (8) and insert the plug into the vehicle’s 12 Volt power outlet.
6. Do not remove foreign objects (e.g., screws or nails) from the tire.

WHAT TO DO IN EMERGENCIES

(C) Injecting TIREFIT Sealant Into The Deflated Tire:

Always start the engine before turning ON the TIREFIT kit.

NOTE:

Manual transmission vehicles must have the parking brake engaged and the shift lever in NEUTRAL.

After pressing the Power Button (4), the sealant (white fluid) will flow from the Sealant Bottle (1) through the Sealant Hose (6) and into the tire.

NOTE:

Sealant may leak out through the puncture in the tire.

If the sealant (white fluid) does not flow within 0 - 10 seconds through the Sealant Hose (6):

1. Press the Power Button (4) to turn Off the TIREFIT kit. Disconnect the Sealant Hose (6) from the valve stem. Make sure the valve stem is free of debris. Reconnect the Sealant Hose (6) to the valve stem. Check that the Mode Select Knob (5) is in the Sealant Mode position and not Air Mode. Press the Power Button (4) to turn On the TIREFIT kit.
2. Connect the Power Plug (8) to a different 12 Volt power outlet in your vehicle or another vehicle, if available. Make sure the engine is running before turning ON the TIREFIT kit.
3. The Sealant Bottle (1) may be empty due to previous use. Call for assistance.

NOTE:

If the Mode Select Knob (5) is on Air Mode and the pump is operating, air will dispense from the Air Pump Hose (7) only, not the Sealant Hose (6).

If the sealant (white fluid) does flow through the Sealant Hose (6):

1. Continue to operate the pump until sealant is no longer flowing through the hose (typically takes 30 - 70 seconds). As the sealant flows through the Sealant Hose (6), the Pressure Gauge (3) can read as high as 70 psi [4.8 Bar]. The Pressure Gauge (3) will decrease quickly from approximately 70 psi [4.8 Bar] to the actual tire pressure when the Sealant Bottle (1) is empty.
2. The pump will start to inject air into the tire immediately after the Sealant Bottle (1) is empty. Continue to operate the pump and inflate the tire to the pressure indicated on the tire pressure label on the driver-side latch pillar (recommended pressure). Check the tire pressure by looking at the Pressure Gauge (3).

WHAT TO DO IN EMERGENCIES

If the tire does not inflate to at least 26 psi (1.8 Bar) pressure within 15 minutes:

The tire is too badly damaged. Do not attempt to drive the vehicle further. Call for assistance.

NOTE:

If the tire becomes over-inflated, press the Deflation Button to reduce the tire pressure to the recommended inflation pressure before continuing.

If the tire inflates to the recommended pressure or is at least 26 psi (1.8 Bar) pressure within 15 minutes:

1. Press the Power Button (4) to turn off the TIREFIT kit.
2. Remove the Speed Limit sticker from the top of the Sealant Bottle (1) and place the sticker on the instrument panel.
3. Immediately disconnect the Sealant Hose (6) from the valve stem, reinstall the cap on the fitting at the end of the hose, and place the TIREFIT kit in the vehicle storage location. Quickly proceed to (D) "Drive Vehicle."

(D) Drive Vehicle:

Immediately after injecting sealant and inflating the tire, drive the vehicle 5 miles (8 km) or 10 minutes to ensure distribution of the TIREFIT Sealant within the tire. Do not exceed 55 mph (88 km/h).

(E) After Driving:

Pull over to a safe location. Refer to "Whenever You Stop to Use TIREFIT" before continuing.

1. Turn the Mode Select Knob (5) to the Air Mode position.
2. Uncoil the Air Pump Hose (7) (black in color) and screw the fitting at the end of hose (7) onto the valve stem.
3. Uncoil the power plug and insert the plug into the vehicles 12 Volt power outlet.
4. Check the pressure in the tire by reading the Pressure Gauge (3).

If tire pressure is less than 19 psi (1.3 Bar), the tire is too badly damaged. Do not attempt to drive the vehicle further. Call for assistance.

If the tire pressure is 19 psi (1.3 Bar) or higher:

1. Press the Power Button (4) to turn on TIREFIT and inflate the tire to the pressure indicated on the tire and loading information label on the driver-side door opening.
2. Disconnect the TIREFIT kit from the valve stem, reinstall the cap on the valve stem and unplug from 12 Volt outlet.
3. Place the TIREFIT kit in its proper storage area in the vehicle.
4. Have the tire inspected and repaired or replaced at the earliest opportunity at an authorized dealer or tire service center.

WHAT TO DO IN EMERGENCIES

5. Replace the Sealant Bottle (1) and Sealant Hose (6) assembly at your authorized dealer as soon as possible. Refer to “(F) Sealant Bottle and Hose Replacement.”

NOTE:

- If the tire becomes over-inflated, press the Deflation Button to reduce the tire pressure to the recommended inflation pressure before continuing.
- When having the tire serviced, advise the authorized dealer or service center that the tire has been sealed using the TIREFIT service kit.

(F) Sealant Bottle And Hose Replacement:

1. Uncoil the Sealant Hose (6) (clear in color).
2. Locate the round Sealant Bottle release button in the recessed area under the sealant bottle.
3. Press the Sealant Bottle release button. The Sealant Bottle (1) will pop up. Remove the bottle and dispose of it accordingly.
4. Clean any remaining sealant from the TIREFIT housing.
5. Position the new Sealant Bottle (1) in the housing so that the Sealant Hose (6) aligns with the hose slot in the front of the housing. Press the bottle into the housing. An audible click will be heard indicating the bottle is locked into place.
6. Verify that the cap is installed on the fitting at the end of the Sealant Hose (6) and return the hose to its storage area (located on the bottom of the air pump).
7. Return the TIREFIT kit to its storage location in the vehicle.

CAUTION!

- The metal end fitting from Power Plug (8) may get hot after use, so it should be handled carefully.
- Failure to reinstall the cap on the fitting at the end of the Sealant Hose (6) can result in sealant contacting your skin, clothing, and the vehicle's interior. It can also result in sealant contacting internal TIREFIT kit components which may cause permanent damage to the kit.

WHAT TO DO IN EMERGENCIES

WARNING!

- Do not attempt to seal a tire on the side of the vehicle closest to traffic. Pull far enough off the road to avoid the danger of being hit when using the TIREFIT kit.
- Do not use TIREFIT or drive the vehicle under the following circumstances:
 - If the puncture in the tire tread is approximately 1/4" (6 mm) or larger.
 - If the tire has any sidewall damage.
 - If the tire has any damage from driving with extremely low tire pressure.
 - If the tire has any damage from driving on a flat tire.
 - If the wheel has any damage.
 - If you are unsure of the condition of the tire or the wheel.
- Keep TIREFIT away from open flames or heat source.
- A loose TIREFIT kit thrown forward in a collision or hard stop could endanger the occupants of the vehicle. Always stow the TIREFIT kit in the place provided. Failure to follow these warnings can result in injuries that are serious or fatal to you, your passengers, and others around you.
- Take care not to allow the contents of TIREFIT to come in contact with hair, eyes, or clothing. TIREFIT is harmful if inhaled, swallowed, or absorbed through the skin. It causes skin, eye, and respiratory irritation. Flush immediately with plenty of water if there is any contact with eyes or skin. Change clothing as soon as possible, if there is any contact with clothing.
- TIREFIT Sealant solution contains latex. In case of an allergic reaction or rash, consult a physician immediately. Keep TIREFIT out of reach of children. If swallowed, rinse mouth immediately with plenty of water and drink plenty of water. Do not induce vomiting! Consult a physician immediately.
- TIREFIT is not a permanent flat tire repair. Have the tire inspected and repaired or replaced after using TIREFIT. Do not exceed 55 mph (88 km/h) until the tire is repaired or replaced. Failure to follow this warning can result in injuries that are serious or fatal to you, your passengers, and others around you.

WHAT TO DO IN EMERGENCIES

BATTERY LOCATION

The battery is stored under an access cover in the trunk. Remote battery posts are located on the right side of the engine compartment for jump-starting.


JUMP-STARTING

If your vehicle has a discharged battery it can be jump-started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack.

Jump-starting can be dangerous if done improperly so please follow the procedures in this section carefully.

NOTE:

When using a portable battery booster pack follow the manufacturer's operating instructions and precautions.

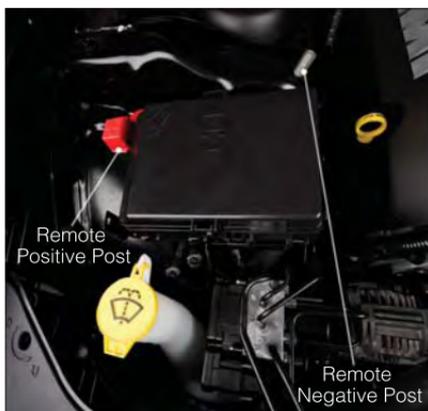

Preparations For Jump-Start

The battery is stored under an access cover in the trunk. Remote battery posts are located on the right side of the engine compartment for jump-starting.

NOTE:

The remote battery posts are viewed by standing on the right side of the vehicle looking over the fender.

- Set the parking brake, shift the automatic transmission into PARK and turn the ignition to OFF.
- Turn off the heater, radio, and all unnecessary electrical accessories.
- If using another vehicle to jump-start the battery, park the vehicle within the jumper cables reach, set the parking brake and make sure the ignition is OFF.

WHAT TO DO IN EMERGENCIES

Jump-Starting Procedure

1. Connect the positive **(+)** end of the jumper cable to the remote positive **(+)** post of the discharged vehicle.
2. Connect the opposite end of the positive **(+)** jumper cable to the positive **(+)** post of the booster battery.
3. Connect the negative end **(-)** of the jumper cable to the negative **(-)** post of the booster battery.
4. Connect the opposite end of the negative **(-)** jumper cable to the remote negative **(-)** post of the vehicle with the discharged battery.
5. Start the engine in the vehicle that has the booster battery, let the engine idle a few minutes, and then start the engine in the vehicle with the discharged battery.

Once the engine is started, remove the jumper cables in the reverse sequence:

1. Disconnect the negative **(-)** end of the jumper cable from the remote negative **(-)** post of the vehicle with the discharged battery.
2. Disconnect the opposite end of the negative **(-)** jumper cable from the negative **(-)** post of the booster battery.
3. Disconnect the positive **(+)** end of the jumper cable from the positive **(+)** post of the booster battery.
4. Disconnect the opposite end of the positive **(+)** jumper cable from the remote positive **(+)** post of the discharged vehicle.

NOTE:

If frequent jump-starting is required to start your vehicle you should have the battery and charging system inspected at your authorized dealer.

CAUTION!

- Do not use a portable battery booster pack or any other booster source with a system voltage greater than 12 Volts or damage to the battery, starter motor, alternator or electrical system may occur.
- Failure to follow these procedures could result in damage to the charging system of the booster vehicle or the discharged vehicle.
- Accessories that can be plugged into the vehicle power outlets draw power from the vehicle's battery, even when not in use (e.g., cellular phones, etc.). Eventually, if plugged in long enough, the vehicle's battery discharges sufficiently to degrade battery life and/or prevent the engine from starting.

WHAT TO DO IN EMERGENCIES

WARNING!

- When temperatures are below the freezing point, electrolyte in a discharged battery may freeze. Do not attempt jump-starting because the battery could rupture or explode and cause personal injury. Battery temperature must be brought above freezing point before attempting a jump-start.
- Take care to avoid the radiator cooling fan whenever the hood is raised. It can start anytime the ignition switch is on. You can be injured by moving fan blades.
- Remove any metal jewelry, such as watch bands or bracelets, that might make an inadvertent electrical contact. You could be severely injured.
- Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive. Keep open flames or sparks away from the battery.
- Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.
- Failure to follow this procedure could result in personal injury or property damage due to battery explosion.
- Do not connect the cable to the negative post (-) of the discharged battery. The resulting electrical spark could cause the battery to explode and could result in personal injury.

SHIFT LEVER OVERRIDE – 5 SPEED TRANSMISSION

- If a malfunction occurs and the shift lever cannot be moved out of the PARK position, you can use the following procedure to temporarily move the shift lever:

1. Turn the engine OFF.
2. Firmly apply the parking brake.
3. Remove the rubber liner from the storage tray (located next to the shifter on the center console).
4. Press and maintain firm pressure on the brake pedal.
5. Insert a screwdriver or similar tool into the access port (in the left side of the storage bin), and push and hold the override release lever in.
6. Move the shift lever to the NEUTRAL position.
7. The vehicle may then be started in NEUTRAL.
8. Reinstall the rubber storage bin liner.



1 – Shift Lever Override Access Port

WHAT TO DO IN EMERGENCIES

MANUAL PARK RELEASE – 8 SPEED TRANSMISSION

WARNING!

Always secure your vehicle by fully applying the parking brake, before activating the Manual Park Release. Activating the Manual Park Release will allow your vehicle to roll away if it is not secured by the parking brake or by proper connection to a tow vehicle. Activating the Manual Park Release on an unsecured vehicle could lead to serious injury or death for those in or around the vehicle.

- In order to push or tow the vehicle in cases where the transmission will not shift out of PARK (such as a dead battery), a Manual Park Release is available. Follow these steps to use the Manual Park Release:
 1. Firmly apply the parking brake.
 2. Remove the console storage bin to access the Manual Park Release lever.




3. Using a small screwdriver or similar tool, fish the tether strap up through the opening in the console base.



WHAT TO DO IN EMERGENCIES

4. Insert the screwdriver into the slot in the center of the lever, and disengage the lever locking tab by pushing it to the right.
5. While holding the locking tab in the disengaged position, pull the tether strap to rotate the lever up and rearward, until it locks in place in the vertical position. The vehicle is now out of PARK and can be towed. Release the parking brake only when the vehicle is securely connected to a tow vehicle.

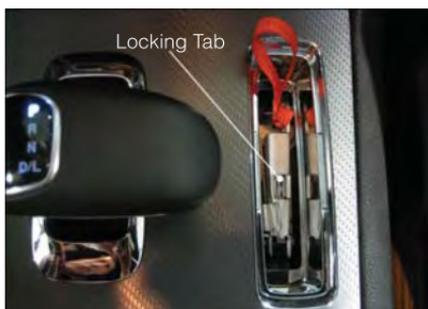

To Reset The Manual Park Release:

1. Push the latch (at the base of the lever, on the rear side) rearward (away from the lever) to unlatch the lever.
2. Rotate the Manual Park Release lever forward and down, to its original position, until the locking tab snaps into place to secure the lever.
3. Pull up gently on the tether strap to confirm that the lever is locked in its stowed position.
4. Tuck the tether strap into the base of the console. Reinstall the console storage bin.

WHAT TO DO IN EMERGENCIES

TOWING A DISABLED VEHICLE

| Model | Flat Towing (all four wheels on the ground) | Flatbed Towing (all four wheels suspended OFF the ground) | Front Wheels Raised, Rear Wheels on the Ground | Rear Wheels Raised, Front Wheels on the Ground |
|--------------------------|--|---|--|---|
| RWD Without a Key | <p>NOT Permitted</p> <p>If transmission is operable:</p> <ul style="list-style-type: none"> • Transmission in NEUTRAL • 30 mph (48 km/h) max speed • 15 miles (24 km) max distance (5-speed transmission) • 30 miles (48 km) max distance (8-speed transmission) | <p>Recommended Method</p> | <p>NOT Permitted</p> <p>If transmission is operable:</p> <ul style="list-style-type: none"> • Transmission in NEUTRAL • 30 mph (48 km/h) max speed • 15 miles (24 km) max distance (5-speed transmission) • 30 miles (48 km) max distance (8-speed transmission) | <p>NOT Permitted</p> |
| RWD With a Key | <p>NOT Permitted</p> <p>If transmission is operable:</p> <ul style="list-style-type: none"> • Transmission in NEUTRAL • 30 mph (48 km/h) max speed • 15 miles (24 km) max distance (5-speed transmission) • 30 miles (48 km) max distance (8-speed transmission) | <p>Recommended Method</p> | <p>NOT Permitted</p> | <p>OK</p> |
| AWD Without a Key | <p>NOT Permitted</p> | <p>Recommended Method</p> | <p>NOT Permitted</p> | <p>NOT Permitted</p> <ul style="list-style-type: none"> • Ignition in ON/RUN position • Transmission in NEUTRAL (Not in PARK) |
| AWD With a Key | <p>NOT Permitted</p> | <p>Recommended Method</p> | <p>NOT Permitted</p> | <p>NOT Permitted</p> |

Refer to your Owner's Manual on the DVD for further information.

WHAT TO DO IN EMERGENCIES

FREEING A STUCK VEHICLE

If your vehicle becomes stuck in mud, sand or snow, it can often be moved using a rocking motion. Turn the steering wheel right and left to clear the area around the front wheels. Then, shift back and forth between REVERSE and DRIVE, while gently pressing the accelerator. Use the least amount of accelerator pedal pressure that will maintain the rocking motion, without spinning the wheels or racing the engine.

NOTE:

Press the "ESC Off" switch, to place the Electronic Stability Control (ESC) system in "Partial Off" mode, before rocking the vehicle. Once the vehicle has been freed, press the "ESC Off" switch again to restore "ESC On" mode.

CAUTION!

- When "rocking" a stuck vehicle by shifting between REVERSE and DRIVE, do not spin the wheels faster than 15 mph (24 km/h), or drivetrain damage may result.
- Revving the engine or spinning the wheels too fast may lead to transmission overheating and failure. It can also damage the tires. Do not spin the wheels above 30 mph (48 km/h) while in gear (no transmission shifting occurring).

WARNING!

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause tire damage or failure. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) when you are stuck. Do not let anyone near a spinning wheel, no matter what the speed.

WHAT TO DO IN EMERGENCIES

EVENT DATA RECORDER (EDR)

This vehicle is equipped with an Event Data Recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating.
- Whether or not the driver and passenger safety belts were buckled/fastened.
- How far (if at all) the driver was depressing the accelerator and/or brake pedal.
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE:


EDR data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data (e.g. name, gender, age, and crash location) is recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

MAINTAINING YOUR VEHICLE

OPENING THE HOOD

1. Pull the hood release lever located on the instrument panel, below the headlight switch.
2. Raise the hood and locate the safety catch lever, in the middle of the hood opening.
3. Push the safety catch lever to the left while lifting the hood at the same time.

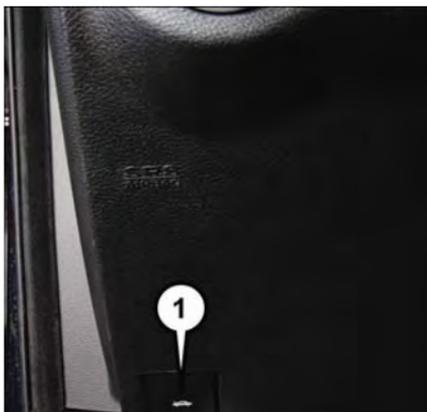

1 – Hood Release

WARNING!

Be sure the hood is fully latched before driving your vehicle. If the hood is not fully latched, it could open when the vehicle is in motion and block your vision. Failure to follow this warning could result in serious injury or death.

MAINTAINING YOUR VEHICLE

FUEL DOOR RELEASE

The fuel door release button is located in the driver's door map pocket.

- Push the button once and release to open the fuel door.



Fuel Door Emergency Release

- To manually open the fuel door, remove the cover and pull the release cable located in the trunk.



MAINTAINING YOUR VEHICLE

Emergency Refueling

A funnel is provided (located in the trunk in the spare tire area) to open the flapper door to allow for emergency refueling with a gas can.



CAUTION!

To avoid fuel spillage and overfilling, do not "top off" the fuel tank after filling.


WARNING!

- Never have any smoking materials lit in or near the vehicle when the fuel door is open or the tank is being filled.
- Never add fuel when the engine is running. This is in violation of most state and federal fire regulations and/or local bylaws, and will cause the MIL to turn on.
- A fire may result if gasoline is pumped into a portable container that is inside of a vehicle. You could be burned. Always place gas containers on the ground while filling.


MAINTAINING YOUR VEHICLE

ENGINE COMPARTMENT

3.6L Engine

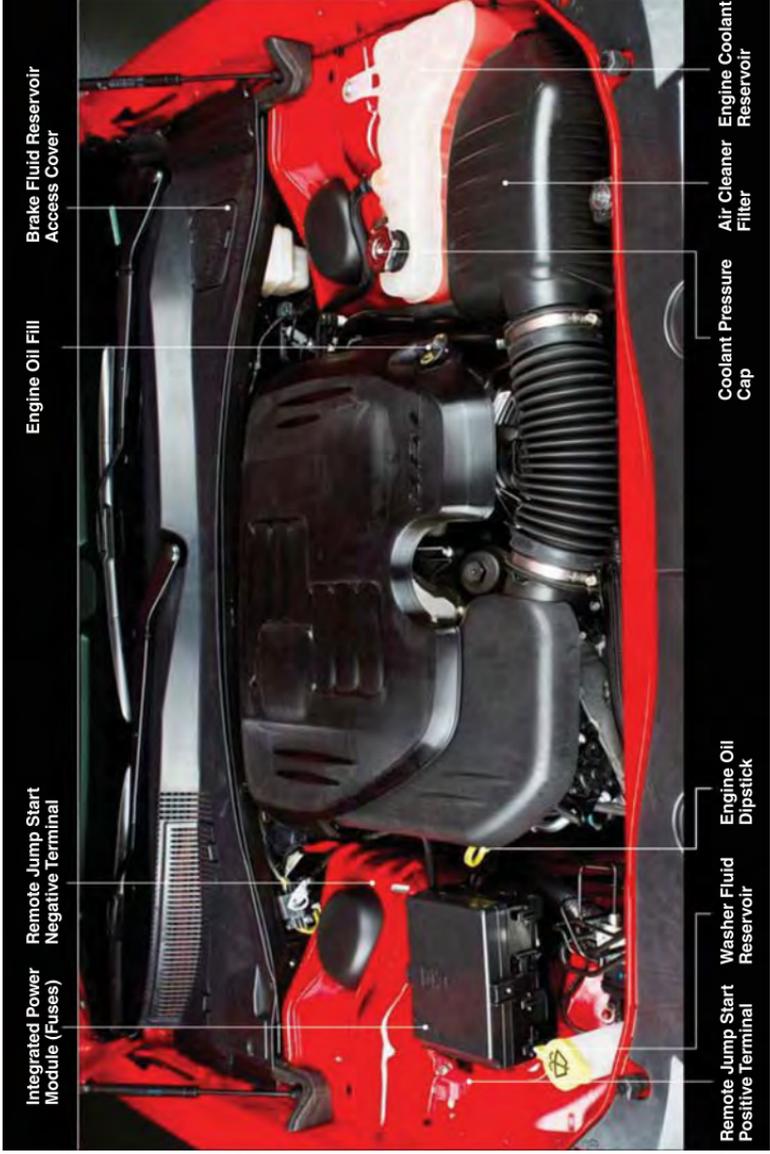


5.7L Engine

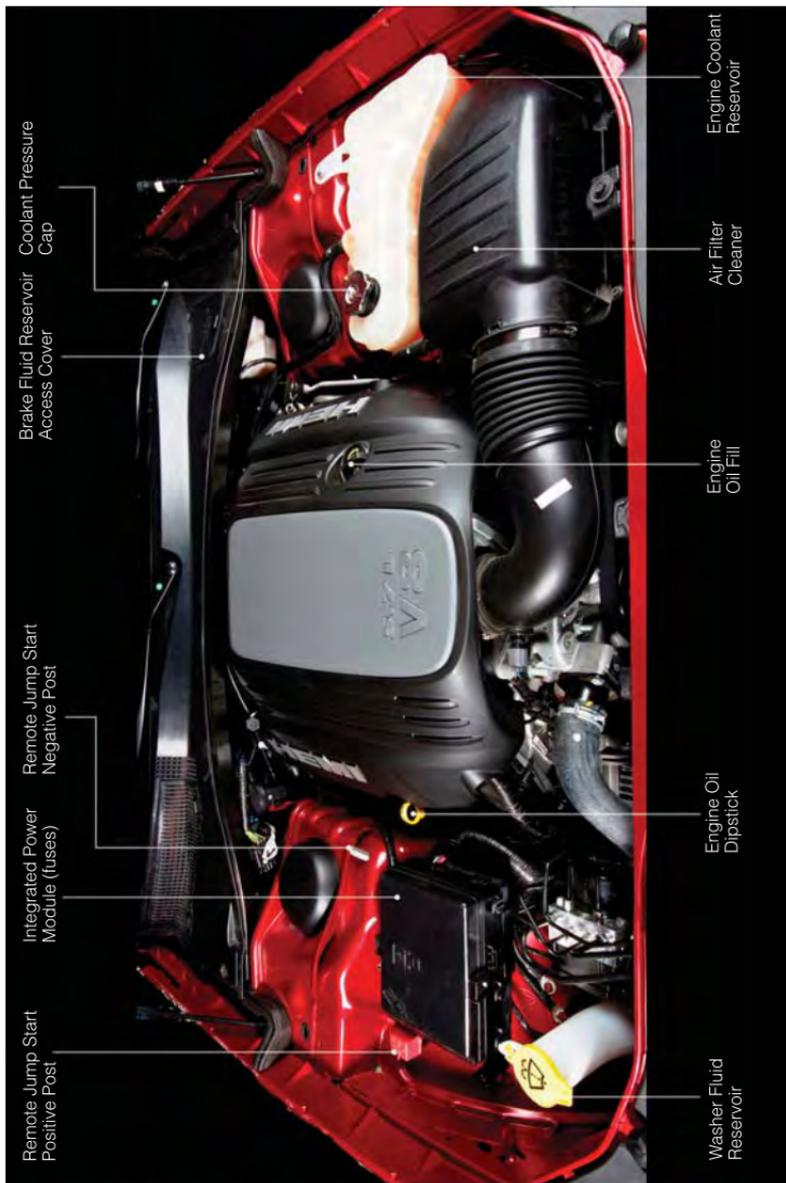

MAINTAINING YOUR VEHICLE

6.4L Engine (392 HEMI)

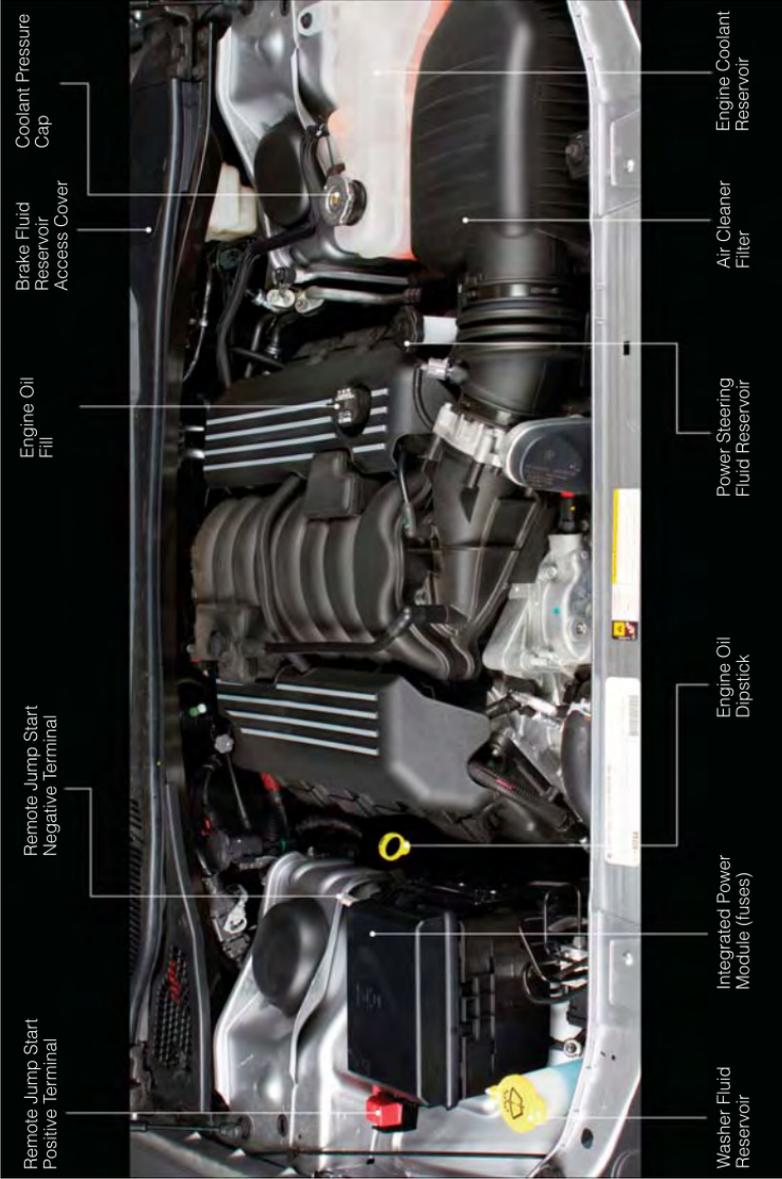

MAINTAINING YOUR VEHICLE

FLUIDS AND CAPACITIES

Non-SRT

| Component | Fluid, Lubricant, or Genuine Part | Capacities |
|---|---|---|
| Engine Coolant – 3.6L Engine | We recommend you use MOPAR® Antifreeze/Coolant Ten Year/150,000 Mile Formula OAT (Organic Additive Technology). | 10 Quarts (9.5 Liters) Includes heater and coolant recovery bottle filled to MAX level. |
| 5.7L Engine without Severe Duty II Cooling System | We recommend you use MOPAR® Antifreeze/Coolant Ten Year/150,000 Mile Formula OAT (Organic Additive Technology). | 14.5 Quarts (13.9 Liters) Includes heater and coolant recovery bottle filled to MAX level. |
| 5.7L Engine with Severe Duty II Cooling System | We recommend you use MOPAR® Antifreeze/Coolant Ten Year/150,000 Mile Formula OAT (Organic Additive Technology). | 15 Quarts (14.3 Liters) Includes heater and coolant recovery bottle filled to MAX level. |
| Engine Oil with Filter – 3.6L Engine | We recommend you use API Certified SAE 5W-20 Engine Oil, meeting the requirements of Chrysler Material Standard MS-6395 such as MOPAR®, Pennzoil®, and Shell Helix®. Refer to your engine oil filler cap for correct SAE grade. | 6 Quarts (5.6 Liters) |
| Engine Oil with Filter – 5.7L Engine | We recommend you use API Certified SAE 5W-20 Engine Oil, meeting the requirements of Chrysler Material Standard MS-6395 such as MOPAR®, Pennzoil®, and Shell Helix®. Refer to your engine oil filler cap for correct SAE grade. | 7 Quarts (6.6 Liters) |
| Engine Oil Filter | We recommend you use MOPAR® brand Engine Oil Filters. | – |
| Spark Plug – 3.6L Engine | We recommend you use MOPAR® Spark Plugs (Gap 0.043 in [1.1 mm]). | – |
| Spark Plug – 5.7L Engine | We recommend you use MOPAR® Spark Plugs (Gap 0.043 in [1.1 mm]). | – |

MAINTAINING YOUR VEHICLE

| Component | Fluid, Lubricant, or Genuine Part | Capacities |
|---|---|---|
| Automatic Transmission - 8 Speed Transmission | Use only MOPAR® ZF 869 Speed ATF™ Automatic Transmission Fluid or equivalent. Failure to use the correct fluid may affect the function or performance of your transmission. | – |
| Automatic Transmission - 5 Speed Transmission | Use only ATF+4® Automatic Transmission Fluid. Failure to use ATF+4® fluid may affect the function or performance of your transmission. We recommend MOPAR® ATF+4® fluid. | – |
| Transfer Case | We recommend you use MOPAR® BorgWarner 44-40 Transfer Case. | – |
| Axle Front | We recommend you use API GL-5 SAE 75W90 Synthetic Gear Lubricant. | – |
| Axle Rear | We recommend you use API GL-5 SAE 75W140 Synthetic Gear Lubricant. | – |
| Brake Master Cylinder | We recommend you use MOPAR® DOT 3 and SAE J1703. If DOT 3 is not available, then DOT 4 is acceptable. | – |
| Power Steering Reservoir | We recommend you use MOPAR® Hydraulic Fluid or equivalent meeting MS-11655, such as Fuchs EG ZH 3044 or Pentosin CHF 11s. | – |
| Fuel Selection - 3.6L Engine | 87 Octane | 19 Gallons (72 Liters) (Approximate) |
| Fuel Selection - 5.7L Engine | 87 Octane Acceptable. 89 Octane Recommended. | 19 Gallons (72 Liters) (Approximate) |

MAINTAINING YOUR VEHICLE

SRT

| Component | Fluid, Lubricant, or Genuine Part | Capacities |
|--------------------------------------|---|---|
| Engine Coolant - 6.4L Engine | We recommend you use MOPAR® Antifreeze/Coolant Ten Year/150,000 Mile Formula OAT (Organic Additive Technology). | 15.2 Quarts (14.4 Liters) Includes heater and coolant recovery bottle filled to MAX level. |
| Engine Oil With Filter - 6.4L Engine | For best performance and maximum protection under all types of operating conditions, the manufacturer only recommends full synthetic engine oils that meet the American Petroleum Institute (API) categories of SN. The manufacturer recommends the use of Pennzoil Ultra™ OW-40 or equivalent MOPAR® engine oil meeting the requirements of Chrysler Material Standard MS-12633 for use in all operating temperatures. | 7 Quarts (6.6 Liters) |
| Engine Oil Filter | We recommend you use MOPAR® brand Engine Oil Filters. | — |
| Spark Plugs - 6.4L Engine | We recommend you use MOPAR® Spark Plugs (Gap 0.043 in [1.1 mm]). | — |
| Automatic Transmission | Use only ATF+4® Automatic Transmission Fluid. Failure to use ATF+4® fluid may affect the function or performance of your transmission. We recommend MOPAR® ATF+4® fluid. | — |
| Axle Rear | We recommend you use MOPAR® Synthetic Gear Lubricant SAE 75W-90 (API GL-5) (with MOPAR® Friction Modifier - Hypoid Gear Additive). | — |
| Power Steering Reservoir | We recommend you use MOPAR® Power Steering Fluid + 4, MOPAR® or ATF+4® Automatic Transmission Fluid. | — |
| Fuel Selection - 6.4L Engine | Premium Unleaded 91 Octane Only or higher. | 19 Gallons (72 Liters) (Approximate) |

MAINTAINING YOUR VEHICLE

CAUTION!

- Mixing of engine coolant (antifreeze) other than specified Organic Additive Technology (OAT) engine coolant (antifreeze), may result in engine damage and may decrease corrosion protection. Organic Additive Technology (OAT) engine coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) engine coolant (antifreeze) or any “globally compatible” coolant (antifreeze). If a non-OAT engine coolant (antifreeze) is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS-12106), by an authorized dealer as soon as possible.
- Do not use water alone or alcohol-based engine coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator engine coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based engine coolant (antifreeze). Use of propylene glycol-based engine coolant (antifreeze) is not recommended.

E-85 FLEXIBLE FUEL – (3.6L ENGINE ONLY)

Refer to your Owner's Manual on the DVD for further details.

CAUTION!

Only vehicles with the E-85 fuel filler door label or a yellow gas cap can operate on E-85.

MAINTENANCE SCHEDULE

Your vehicle is equipped with an automatic oil change indicator system. The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

Based on engine operation conditions, the oil change indicator message will illuminate. This means that service is required for your vehicle. Operating conditions such as frequent short-trips, trailer tow, extremely hot or cold ambient temperatures, and E85 fuel usage will influence when the “Change Oil” or “Oil Change Required” message is displayed. Severe Operating Conditions can cause the change oil message to illuminate as early as 3,500 miles (5,600 km) since last reset. Have your vehicle serviced as soon as possible, within the next 500 miles (805 km).

On Electronic Vehicle Information Center (EVIC) equipped vehicles, “Oil Change Required” will be displayed in the EVIC and a single chime will sound, indicating that an oil change is necessary.

On Non-EVIC equipped vehicles, “Change Oil” will flash in the instrument cluster odometer and a single chime will sound, indicating that an oil change is necessary.

MAINTAINING YOUR VEHICLE

Your authorized dealer will reset the oil change indicator message after completing the scheduled oil change. If a scheduled oil change is performed by someone other than your authorized dealer, the message can be reset by referring to the steps described under “Instrument Cluster Warning Lights” in “What To Do In Emergencies” in this guide or “Electronic Vehicle Information Center (EVIC)” in “Understanding Your Instrument Panel” in your Owners Manual on the DVD for further information.

NOTE:

Under no circumstances should oil change intervals exceed 10,000 miles (16,000 km) or twelve months, whichever comes first.

Severe Duty All Models

Change Engine Oil at 4000 miles (6,500 km) if the vehicle is operated in a dusty and off road environment. This type of vehicle use is considered Severe Duty

Once A Month Or Before A Long Trip:

- Check engine oil level
- Check windshield washer fluid level
- Check tire pressure and look for unusual wear or damage. Rotate tires at the first sign of irregular wear, even if it occurs before your next scheduled service.
- Check the fluid levels of the coolant reservoir, brake master cylinder, and power steering and fill as needed.
- Check function of all interior and exterior lights

Maintenance Chart

Required Maintenance Intervals.

Refer to the maintenance schedules on the following page for the required maintenance intervals.

| At Every Oil Change Interval As Indicated By Oil Change Indicator System: |
|---|
| • Change oil and filter |
| • Rotate the tires. Rotate at the first sign of irregular wear, even if it occurs before your next scheduled service |
| • Inspect battery and clean and tighten terminals as required |
| • Inspect brake pads, shoes, rotors, drums, hoses and park brake |
| • Inspect engine cooling system protection and hoses |
| • Inspect exhaust system |
| • Inspect engine air cleaner if using in dusty or off-road conditions |

MAINTAINING YOUR VEHICLE

| Mileage or time passed (whichever comes first) | 20,000 | 30,000 | 40,000 | 50,000 | 60,000 | 70,000 | 80,000 | 90,000 | 100,000 | 110,000 | 120,000 | 130,000 | 140,000 | 150,000 |
|---|--------|--------|--------|--------|--------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| Or Years: | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| Or Kilometers: | 32,000 | 48,000 | 64,000 | 80,000 | 96,000 | 112,000 | 128,000 | 144,000 | 160,000 | 176,000 | 192,000 | 208,000 | 224,000 | 240,000 |
| Additional Inspections | | | | | | | | | | | | | | |
| Inspect the CV joints. | | X | | | X | | | X | | | X | | | X |
| Inspect front suspension, tie rod ends, boot seals, and replace if necessary. | X | | X | | X | | X | | X | | X | | X | |
| Inspect the rear axle fluid. Inspect the front axle fluid (All Wheel Drive Only). | X | | | | X | | | | X | | | | X | |
| Inspect the brake linings, replace as necessary. | X | | X | | X | | X | | X | | X | | X | |
| Adjust park brake on vehicles equipped with four wheel disc brakes. | X | | X | | X | | X | | X | | X | | X | |
| Inspect transfer case fluid (All Wheel Drive Only). | | X | | | | | | X | | | | | | X |
| Inspect the transfer case fluid. Change the transfer case fluid; if using your vehicle for any of the following; police, taxi, fleet, off-road, or frequent trailer towing. (All Wheel Drive Only). | | | | | X | | | | | | X | | | |
| Additional Maintenance | | | | | | | | | | | | | | |
| Replace engine air filter. | | X | | | X | | | X | | | X | | | X |
| Replace cabin/air conditioning filter. | X | | X | | X | | X | | X | | X | | X | |
| Replace spark plugs (3.6L engine).** | | | | | | | | | X | | | | | |
| Replace spark plugs (5.7L engine).** | | | | | | | | | X | | | | | |
| Flush and replace the engine coolant at 10 years or 150,000 miles (240,000 km) whichever comes first. | | | | | | | | | X | | | | | X |
| Change automatic transmission fluid and filter if using your vehicle for any of the following; police, taxi, fleet, off-road, or frequent trailer towing (five-speed only). | | | | | X | | | | | | | | | |
| Change automatic transmission fluid and filter (five-speed only). | | | | | | | | | | | X | | | |

MAINTAINING YOUR VEHICLE

| Mileage or time passed (whichever comes first) | 20,000 | 30,000 | 40,000 | 50,000 | 60,000 | 70,000 | 80,000 | 90,000 | 100,000 | 110,000 | 120,000 | 130,000 | 140,000 | 150,000 |
|---|--------|--------|--------|--------|--------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| Or Years: | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| Or Kilometers: | 32,000 | 48,000 | 64,000 | 80,000 | 96,000 | 112,000 | 128,000 | 144,000 | 160,000 | 176,000 | 192,000 | 208,000 | 224,000 | 240,000 |
| Change transfer case fluid if using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing (All Wheel Drive Only). | | | | | X | | | | | | X | | | |
| Change the rear axle fluid and on models equipped with All Wheel Drive (AWD) change the front axle fluid if using your vehicle for any of the following: police, taxi, fleet, off-road, or frequent trailer towing. | | | X | | | | X | | | | X | | | |
| Inspect and replace PCV valve if necessary. | | | | | | | | | X | | | | | |

** The spark plug change interval is mileage based only, yearly intervals do not apply.

WARNING!

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident.

MAINTAINING YOUR VEHICLE

MAINTENANCE RECORD

| Odometer | Date | Signature, Authorized Service Center |
|--|------|--------------------------------------|
| 20,000 Miles (32,000 km) or 2 Years | | |
| 30,000 Miles (48,000 km) or 3 Years | | |
| 40,000 Miles (64,000 km) or 4 Years | | |
| 50,000 Miles (80,000 km) or 5 Years | | |
| 60,000 Miles (96,000 km) or 6 Years | | |
| 70,000 Miles (112,000 km) or 7 Years | | |
| 80,000 Miles (128,000 km) or 8 Years | | |

| Odometer | Date | Signature, Authorized Service Center |
|--|------|--------------------------------------|
| 90,000 Miles (144,000 km) or 9 Years | | |
| 100,000 Miles (160,000 km) or 10 Years | | |
| 110,000 Miles (176,000 km) or 11 Years | | |
| 120,000 Miles (192,000 km) or 12 Years | | |
| 130,000 Miles (208,000 km) or 13 Years | | |
| 140,000 Miles (224,000 km) or 14 Years | | |
| 150,000 Miles (240,000 km) or 15 Years | | |

MAINTAINING YOUR VEHICLE

SRT MAINTENANCE SCHEDULE

The Scheduled Maintenance services listed in this manual must be done at the times or mileages specified to protect your vehicle warranty and ensure the best vehicle performance and reliability. More frequent maintenance may be needed for vehicles in severe operating conditions, such as dusty areas and very short trip driving. Inspection and service should also be done anytime a malfunction is suspected.

The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

On Electronic Vehicle Information Center (EVIC) equipped vehicles, "Oil Change Required" will be displayed in the EVIC and a single chime will sound, indicating that an oil change is necessary.

Based on engine operation conditions, the oil change indicator message will illuminate. This means that service is required for your vehicle. Have your vehicle serviced as soon as possible, within the next 500 miles (805 km).

NOTE:

- The oil change indicator message will not monitor the time since the last oil change. Change your vehicle's oil if it has been six months since your last oil change, even if the oil change indicator message is NOT illuminated.
- Change your engine oil more often if you drive your vehicle off-road for an extended period of time.
- Under no circumstances should oil change intervals exceed 6,000 miles (10,000 km) or six months, whichever comes first.

Your authorized dealer will reset the oil change indicator message after completing the scheduled oil change. If a scheduled oil change is performed by someone other than your authorized dealer, the message can be reset by referring to the steps described under "Instrument Cluster Warning Lights" in "What To Do In Emergencies" in this guide or "Electronic Vehicle Information Center (EVIC)" in "Understanding Your Instrument Panel" in your Owners Manual on the DVD for further information.

MAINTAINING YOUR VEHICLE

At Each Stop For Fuel

- Check the engine oil level. Refer to “Maintenance Procedures/Engine Oil” in “Maintaining Your Vehicle” for further information.
- Check the windshield washer solvent and add if required.

Once A Month

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery, and clean and tighten the terminals as required.
- Check the fluid levels of the coolant reservoir, brake master cylinder, and power steering, and add as needed.
- Check all lights and other electrical items for correct operation.

At Each Oil Change

- Change the engine oil filter.
- Inspect the brake hoses and lines.

CAUTION!

Failure to perform the required maintenance items may result in damage to the vehicle.

MAINTAINING YOUR VEHICLE

SRT Maintenance Chart

| Miles: | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 |
|--|--------|--------|--------|--------|--------|--------|--------|--------|--------|---------|---------|---------|---------|
| Or Months: | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 |
| Or Kilometers: | 10,000 | 20,000 | 30,000 | 40,000 | 50,000 | 60,000 | 70,000 | 80,000 | 90,000 | 100,000 | 110,000 | 120,000 | 130,000 |
| Change the engine oil and engine oil filter. | X | X | X | X | X | X | X | X | X | X | X | X | X |
| Rotate the tires, rotate at the first sign of irregular wear, even if it occurs before scheduled maintenance. | X | X | X | X | X | X | X | X | X | X | X | X | X |
| If using your vehicle for any of the following: dusty or off-road conditions. Inspect the engine air cleaner filter, replace if necessary. | | X | | X | | X | | X | | X | | X | |
| Inspect the brake linings; replace if necessary. | | X | | X | | X | | X | | X | | X | |
| Inspect the CV joints. | | X | | X | | X | | X | | X | | X | |
| Inspect the exhaust system. | | X | | X | | X | | X | | X | | X | |
| Adjust the parking brake on vehicles equipped with four wheel disc brakes. | | | | X | | | | | | X | | | |
| Change the automatic transmission fluid and filter if using your vehicle for any of the following: police, taxi, fleet or frequent trailer towing. | | | | | | | | | | X | | | |

MAINTAINING YOUR VEHICLE

| Miles: | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 |
|---|--------|--------|--------|--------|--------|--------|--------|--------|--------|---------|---------|---------|---------|
| Or Months: | | | | | | | | | | | | | |
| Or Kilometers: | 10,000 | 20,000 | 30,000 | 40,000 | 50,000 | 60,000 | 70,000 | 80,000 | 90,000 | 100,000 | 110,000 | 120,000 | 130,000 |
| Change the rear axle fluid if using your vehicle for any of the following: police, taxi, fleet or frequent trailer towing. | | | | | | | | X | | | | | |
| Inspect the rear axle fluid. | | | X | | | X | | | X | | | X | |
| Inspect front suspension, tie rod ends, and boot seals, for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary. | | X | | X | | X | | X | | X | | X | |
| Replace the engine air cleaner. | | | | | X | | | | | X | | | |
| Replace the air conditioning filter. | | X | | X | | X | | X | | X | | X | |

NOTE:

Flush and replace the engine coolant at 120 months if not done at 150,000 miles (240,000 km).

Refer to the Owner's Manual on the DVD for complete maintenance schedule.

MAINTAINING YOUR VEHICLE

SRT MAINTENANCE RECORD


| | Odometer | Date | Signature, Authorized Service Center |
|---|----------|------|--------------------------------------|
| 6,000 Miles (10,000 km) or 6 Months | | | |
| 12,000 Miles (20,000 km) or 12 Months | | | |
| 18,000 Miles (30,000 km) or 18 Months | | | |
| 24,000 Miles (40,000 km) or 24 Months | | | |
| 30,000 Miles (50,000 km) or 30 Months | | | |
| 36,000 Miles (60,000 km) or 36 Months | | | |
| 42,000 Miles (70,000 km) or 42 Months | | | |

| | Odometer | Date | Signature, Authorized Service Center |
|--|----------|------|--------------------------------------|
| 48,000 Miles (80,000 km) or 48 Months | | | |
| 54,000 Miles (90,000 km) or 54 Months | | | |
| 60,000 Miles (100,000 km) or 60 Months | | | |
| 66,000 Miles (110,000 km) or 66 Months | | | |
| 72,000 Miles (120,000 km) or 72 Months | | | |
| 78,000 Miles (130,000 km) or 78 Months | | | |

MAINTAINING YOUR VEHICLE

FUSES

Front Power Distribution Center (Fuses)

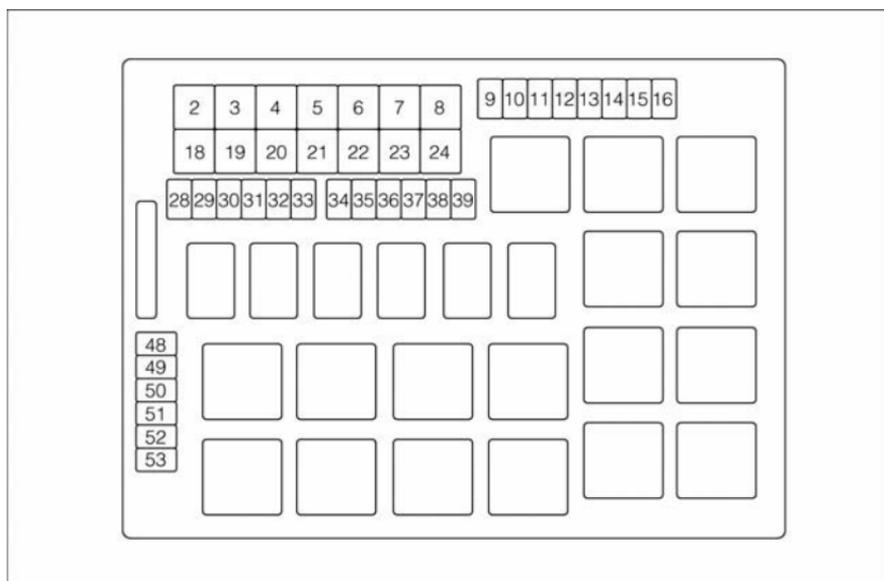

The Front Power Distribution Center (fuses) is located in the engine compartment on the right hand side near the Washer Fluid Reservoir. This module contains fuses and relays.

Front Power Distribution Center

| Cavity | Cartridge Fuse | Mini-Fuse | Description |
|--------|----------------|---------------|--------------------------------------|
| 1 | – | – | Fuse - Spare |
| 2 | 40 Amp Green | – | Radiator Fan #1 |
| 3 | 50 Amp Red | – | Power Steering #1 |
| 4 | 30 Amp Pink | – | Starter |
| 5 | 40 Amp Green | – | Anti-Lock Brakes |
| 6 | 25 Amp Natural | – | Anti-Lock Brakes |
| 7 | – | – | Fuse - Spare |
| 8 | – | – | Fuse - Spare |
| 9 | – | 20 Amp Yellow | All-Wheel Drive Module - If Equipped |
| 10 | – | 10 Amp Red | Security |
| 11 | – | 20 Amp Yellow | Horns |
| 12 | – | 10 Amp Red | Air Conditioning Clutch |
| 13 | – | – | Fuse - Spare |

MAINTAINING YOUR VEHICLE

| Cavity | Cartridge Fuse | Mini-Fuse | Description |
|--------|----------------|----------------|---------------------------------------|
| 14 | – | – | Fuse - Spare |
| 15 | – | 25 Amp Natural | Transmission |
| 16 | – | – | Fuse - Spare |
| 18 | 50 Amp Red | – | Radiator Fan #2 |
| 19 | 50 Amp Red | – | Power Steering #2 |
| 20 | 30 Amp Pink | – | Wiper Motor |
| 21 | 30 Amp Pink | – | Headlamp Washers |
| 22 | – | – | Fuse - Spare |
| 23 | – | – | Fuse - Spare |
| 24 | – | – | Fuse - Spare |
| 28 | – | 25 Amp Natural | Fuel Pump |
| 29 | – | 15 Amp Blue | Transmission Shifter |
| 30 | – | – | Fuse - Spare |
| 31 | – | 25 Amp Natural | Engine Module |
| 32 | – | – | Fuse - Spare |
| 33 | – | – | Fuse - Spare |
| 34 | – | 25 Amp Natural | Powertrain #1 |
| 35 | – | 20 Amp Yellow | Powertrain #2 |
| 36 | – | 10 Amp Red | Anti-Lock Brake Module |
| 37 | – | 10 Amp Red | Engine Controller/Rad Fan Relays |
| 38 | – | 10 Amp Red | Airbag Module |
| 39 | – | 10 Amp Red | Power Steering Module/AC Clutch Relay |
| 48 | – | 10 Amp Red | AWD Module/Front Axle Disconnect |
| 49 | – | – | Fuse - Spare |
| 50 | – | – | Fuse - Spare |
| 51 | – | 20 Amp Yellow | Vacuum Pump |
| 52 | – | – | Fuse - Spare |
| 53 | – | – | Fuse - Spare |

Rear Power Distribution Center

- There is also a power distribution center located in the trunk under the spare tire access panel. This center contains fuses and relays.

| Cavity | Cartridge Fuse | Mini-Fuse | Description |
|--------|----------------|-----------|-------------------|
| 2 | 60 Amp Yellow | – | Front PDC Feed #1 |
| 3 | – | – | Fuse - Spare |
| 4 | 60 Amp Yellow | – | Front PDC Feed #2 |
| 5 | 30 Amp Pink | – | Sunroof |


MAINTAINING YOUR VEHICLE

| Cavity | Cartridge Fuse | Mini-Fuse | Description |
|--------|----------------|----------------|---|
| 6 | 40 Amp Green | – | Exterior Lighting #1 |
| 7 | 40 Amp Green | – | Exterior Lighting #2 |
| 8 | 30 Amp Pink | – | Interior Lighting/ Washer Pump |
| 9 | 30 Amp Pink | – | Power Locks |
| 10 | 30 Amp Pink | – | Driver Door |
| 11 | 30 Amp Pink | – | Passenger Door |
| 12 | – | 20 Amp Yellow | Cigar Lighters, In- strument Panel & Power Outlet Console Rear |
| 15 | 40 Amp Green | – | HVAC Blower |
| 16 | – | – | Fuse – Spare |
| 17 | – | – | Fuse – Spare |
| 18 | – | – | Fuse – Spare |
| 19 | – | – | Fuse – Spare |
| 20 | – | – | Fuse – Spare |
| 21 | – | – | Fuse – Spare |
| 22 | – | – | Fuse – Spare |
| 23 | – | 10 Amp Red | Fuel Door/Diagnostic Port |
| 24 | – | 15 Amp Blue | Radio Screen |
| 25 | – | 10 Amp Red | Tire Pressure Monitor |
| 26 | – | – | Fuse – Spare |
| 27 | – | 25 Amp Natural | Amplifier |
| 31 | – | 25 Amp Natural | Power Seats |
| 32 | – | 15 Amp Blue | HVAC Module/Cluster |
| 33 | – | 15 Amp Blue | Ignition Switch/ Wireless Module |
| 34 | – | 10 Amp Red | Steering Column Module/Clock |
| 35 | – | 10 Amp Red | Battery Sensor |
| 36 | – | – | Fuse – Spare |
| 37 | – | 15 Amp Blue | Radio |
| 38 | – | 20 Amp Yellow | Power Outlet Inside Arm Rest |
| 40 | – | – | Fuse – Spare |
| 41 | – | – | Fuse – Spare |
| 42 | 30 Amp Pink | – | Rear Defrost |
| 43 | – | 25 Amp Natural | Rear Heated Seats/ Steering Wheel |

MAINTAINING YOUR VEHICLE

| Cavity | Cartridge Fuse | Mini-Fuse | Description |
|--------|----------------|----------------|---|
| 44 | – | 10 Amp Red | Park Assist/Blind Spot/Camera |
| 45 | – | 15 Amp Blue | Cluster/Rearview Mirror/Compass |
| 46 | – | 10 Amp Red | Adaptive Cruise Control |
| 47 | – | 10 Amp Red | Adaptive Front Lighting |
| 48 | – | 20 Amp Yellow | Active Suspension |
| 49 | – | – | Fuse – Spare |
| 50 | – | – | Fuse – Spare |
| 51 | – | 20 Amp Yellow | Front Heated Seats |
| 52 | – | 10 Amp Red | Heated Cupholders/Rear Heated Seat Switches |
| 53 | – | 10 Amp Red | HVAC Module/In Car Temperature Sensor |
| 54 | – | – | Fuse – Spare |
| 55 | – | – | Fuse – Spare |
| 56 | – | – | Fuse – Spare |
| 57 | – | – | Fuse – Spare |
| 58 | – | 10 Amp Red | Airbag Module |
| 59 | – | – | Fuse – Spare |
| 60 | – | – | Fuse – Spare |
| 61 | – | – | Fuse – Spare |
| 62 | – | – | Fuse – Spare |
| 63 | – | – | Fuse – Spare |
| 64 | – | 25 Amp Natural | Rear Windows |
| 65 | – | 10 Amp Red | Airbag Module |
| 66 | – | – | Fuse – Spare |
| 67 | – | 15 Amp Blue | Run Sense |
| 68 | – | 15 Amp Blue | Illumination/Rear Sunshade |
| 69 | – | – | Fuse – Spare |
| 70 | – | – | Fuse – Spare |

MAINTAINING YOUR VEHICLE

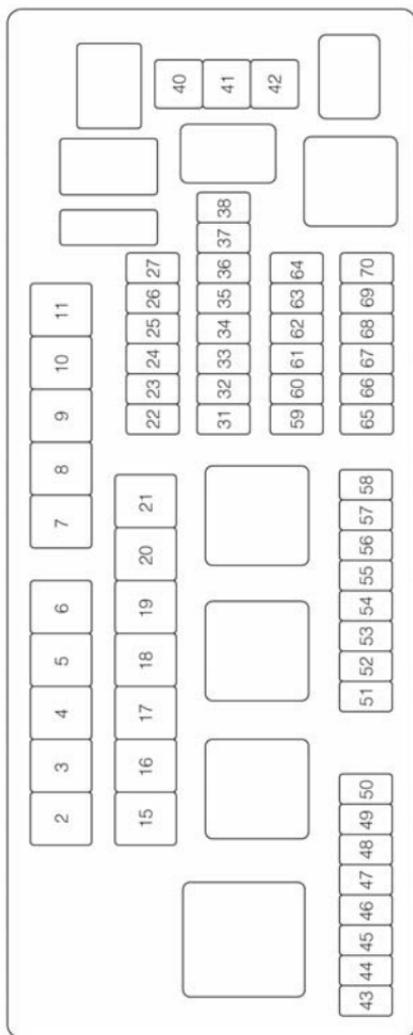

MAINTAINING YOUR VEHICLE


TIRE PRESSURES

Check the inflation pressure of each tire, including the spare tire, at least monthly and inflate to the recommended pressure for your vehicle.

The tire pressures recommended for your vehicle are found on the “Tire and Loading Information” label located on the driver’s side door opening.

NOTE:

Refer to the Owner’s Manual on the DVD for more information regarding tire warnings and instructions.

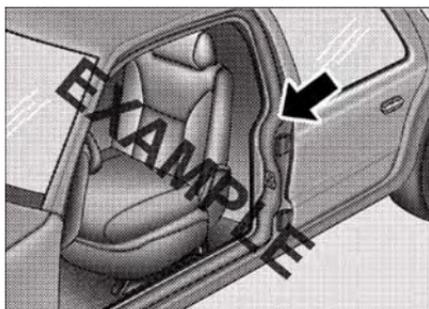

**Tire And Loading Information Location
(Example)**

WARNING!

- Overloading of your tires is dangerous. Overloading can cause tire failure, affect vehicle handling, and increase your stopping distance. Use tires of the recommended load capacity for your vehicle. Never overload them.
- Improperly inflated tires are dangerous and can cause collisions. Under-inflation is the leading cause of tire failure and may result in severe cracking, component separation, or “blow out”. Over-inflation reduces a tire’s ability to cushion shock. Objects on the road and chuck holes can cause damage that results in tire failure. Unequal tire pressures can cause steering problems. You could lose control of your vehicle. Over-inflated or under-inflated tires can affect vehicle handling and can fail suddenly, resulting in loss of vehicle control.

MAINTAINING YOUR VEHICLE

WHEEL AND WHEEL TRIM CARE

All wheels and wheel trim, especially aluminum and chrome plated wheels, should be cleaned regularly using mild (neutral Ph) soap and water to maintain their luster and to prevent corrosion. Wash wheels with the same soap solution recommended for the body of the vehicle.

Your wheels are susceptible to deterioration caused by salt, sodium chloride, magnesium chloride, calcium chloride, etc., and other road chemicals used to melt ice or control dust on dirt roads. Use a soft cloth or sponge and mild soap to wipe away promptly. Do not use harsh chemicals or a stiff brush. They can damage the wheel's protective coating that helps keep them from corroding and tarnishing.

NOTE:

Many aftermarket wheel cleaners contain strong acids or strong alkaline additives that can harm the wheel surface.

CAUTION!

Avoid products or automatic car washes that use acidic solutions or strong alkaline additives or harsh brushes. These products and automatic car washes may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, MOPAR Wheel Cleaner or equivalent is recommended.

When cleaning extremely dirty wheels including excessive brake dust, care must be taken in the selection of tire and wheel cleaning chemicals and equipment to prevent damage to the wheels. Mopar Wheel Treatment or Mopar Chrome Cleaner or their equivalent is recommended or select a non-abrasive, non-acidic cleaner for aluminum or chrome wheels. Do not use any products on Dark Vapor or Black Satin Chrome Wheels. They will permanently damage this finish and such damage is not covered by the New Vehicle Limited Warranty.

CAUTION!

Do not use scouring pads, steel wool, a bristle brush, metal polishes or oven cleaner. These products may damage the wheel's protective finish. Such damage is not covered by the New Vehicle Limited Warranty. Only car wash soap, MOPAR Wheel Cleaner or equivalent is recommended.

NOTE:

If you intend parking or storing your vehicle for an extended period after cleaning the wheels with wheel cleaner, drive your vehicle for a few minutes before doing so. Driving the vehicle and applying the brakes when stopping will reduce the risk of brake rotor corrosion.

MAINTAINING YOUR VEHICLE

Dark Vapor Or Black Satin Chrome Wheels

CAUTION!

If your vehicle is equipped with Dark Vapor or Black Satin Chrome wheels DO NOT USE wheel cleaners, abrasives or polishing compounds. They will permanently damage this finish and such damage is not covered by the New Vehicle Limited Warranty. USE ONLY MILD SOAP AND WATER WITH A SOFT CLOTH. Used on a regular basis this is all that is required to maintain this finish.

EXTERIOR BULBS

| LIGHT BULBS - Exterior | Bulb Number |
|---|------------------------------------|
| Backup Lamp | 3157 |
| Tail, Stop, Turn Lamp | LED - Service at Authorized Dealer |
| Center High-Mounted Stop Lamp (CHMSL) | LED (*) |
| Fog Lamp - If Equipped | PSX24W |
| Front Park/Turn Signal | 3157A |
| Front/Rear Side Marker | 168 |
| Headlamp - High Intensity Discharge (HID) | Service at Authorized Dealer (**) |
| Headlamp - Low Beam | H11 |
| Headlamp - High Beam | 9005 |
| License Lamp | 168 |

* CHMSL is not serviceable. It is a LED lamp. To replace the LED, the entire CHMSL assembly must be replaced.

** The headlamps are a type of high-voltage discharge tube. High voltage can remain in the circuit even with the headlamp switch off and the key removed. Because of this, you should not attempt to service a headlamp bulb yourself. If a headlamp bulb fails, take your vehicle to an authorized dealer for service.

CONSUMER ASSISTANCE

CHRYSLER GROUP LLC CUSTOMER CENTER

P.O. Box 21-8004 Auburn Hills, MI 48321-8004 Phone: 1-800-423-6343

CHRYSLER CANADA INC. CUSTOMER CENTER

P.O. Box 1621 Windsor, Ontario N9A 4H6 Phone: 1-800-465-2001 (English)
Phone: 1-800-387-9983 (French)

ASSISTANCE FOR THE HEARING IMPAIRED

To assist customers who have hearing difficulties, the manufacturer has installed special TDD (Telecommunication Devices for the Deaf) equipment at its customer center. Any hearing or speech impaired customer, who has access to a TDD or a conventional teletypewriter (TTY) in the United States, can communicate with the manufacturer by dialing 1-800-380-CHRY. Canadian residents with hearing difficulties that require assistance can use the special needs relay service offered by Bell Canada. For TTY teletypewriter users, dial 711 and for Voice callers, dial 1-800-855-0511 to connect with a Bell Relay Service operator.

WARNING!

Engine exhaust, some of its constituents, and certain vehicle components contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain, or emit, chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm.

PUBLICATIONS ORDERING

- **If you are the first registered retail owner of your vehicle**, you may obtain one free printed copy of the Owner's Manual, Warranty Booklet or Radio Manuals on your DVD by calling 1-800-423-6343 (U.S.) or 1-800-387-1143 (Canada) or by contacting your dealer.
- Replacement User Guide kits or DVDs or, if you prefer, additional printed copies of the Owner's Manual, Warranty Booklet or Radio Manuals may be purchased by visiting www.techauthority.com or by calling 1-800-890-4038 (U.S.) or 1-800-387-1143 (Canada). Visa, Master Card, American Express and Discover orders are accepted. If you prefer mailing your order, please call the above numbers for an order form.

NOTE:

- A street address is required when ordering manuals (no P.O. Boxes).
- The Owner's Manual and User Guide electronic files are also available on the Chrysler, Jeep, Ram Truck, Dodge and SRT websites.
- Click on the "For Owners" tab, select "Owner/Service Manuals", then select your desired model year and vehicle from the drop down lists.

REPORTING SAFETY DEFECTS IN THE UNITED STATES

If you believe that your vehicle has a defect that could cause a collision or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying the manufacturer.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your authorized dealer and the manufacturer.

To contact NHTSA, you may either call the Auto Safety Hotline toll free at 1-888-327-4236 (TTY: 1-800-424-9153), or go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., West Building, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

In Canada

If you believe that your vehicle has a safety defect, you should contact the Customer Service Department immediately. Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <http://www.tc.gc.ca/eng/roadsafety/safedrivers-childsafety-index-53.htm>

French Canadian customers who wish to report a safety defect to the Canadian government should contact Transport Canada, Motor Vehicle Defect Investigations and Recalls at 1-800-333-0510 or go to <http://www.tc.gc.ca/securiteroutiere/>

MOPAR[®] ACCESSORIES

AUTHENTIC ACCESSORIES BY MOPAR[®]

- The following highlights just some of the many Authentic Dodge Accessories by MOPAR[®] featuring a fit, finish, and functionality specifically for your Dodge Charger.
- In choosing Authentic Accessories you gain far more than expressive style, premium protection, or extreme entertainment, you also benefit from enhancing your vehicle with accessories that have been thoroughly tested and factory-approved.
- For the full line of Authentic Dodge Accessories by MOPAR[®], visit your local Dodge dealership or online at mopar.com for U.S. residents and mopar.ca for Canadian residents.

EXTERIOR:

- Rear Spoiler
- Molded Splash Guards
- Custom Wheels
- Chrome Grille Insert
- Lower Front Fascia Air Dam
- Graphics Packages
- Fog Lights
- Front End Cover

INTERIOR:

- Premium Carpet Floor Mats
- Door Sill Guards
- Instrument Panel Bezel Kits
- Slush Mats
- Premium Carpet Cargo Mat
- Katzkin Leather Interiors
- Bright Pedal Kit
- Pistol Grip Shifter

ELECTRONICS:

- Rear Park Assist
- Kicker[®] Sound System
- Uconnect[®] Phone
- MOPAR[®] Web
- Remote Start
- DVD Rear Seat Video[™]

PERFORMANCE

- Cold Air Intake
- Anti Sway Bars
- Cat Back Exhaust
- Performance Suspension
- Strut Tower Brace

- Kicker[®] is a registered trademark of Stillwater Designs and Audio, Inc.

FREQUENTLY ASKED QUESTIONS

FAQ's

GETTING STARTED

- How do I install my LATCH Equipped Child Seat? pg. 18
- How do I program my Front Seat Memory? pg. 23

ELECTRONICS

- How do I know which radio I have?
 - Uconnect® 4.3, 4.3S pg. 51
 - Uconnect® 8.4, 8.4N pg. 52
- How do I select the AUX music source? pg. 64
- How do I set the clock on my radio?
 - Uconnect® 4.3, 4.3S pg. 51
 - Uconnect® 8.4, 8.4N pg. 52
- How do I use the Navigation feature? pg. 60
- How do I pair my cell phone via Bluetooth® with the Uconnect® Hands-Free Voice Activation System? pg. 66

UTILITY

- How do I know how much I can tow with my Dodge Charger? pg. 80

WHAT TO DO IN EMERGENCIES

- What do I do if my TPMS warning light is blinking? pg. 86
- How do I change a flat tire? pg. 91
- How do I Jump-Start my vehicle? pg. 103

MAINTAINING YOUR VEHICLE

- Where is my Fuse Block located? pg. 130
- What type of oil do I use? pg. 117
- How often should I change my engine's oil? pg. 120
- How often should I change my SRT engine's oil? pg. 125
- What should my tire pressure be set at? pg. 135

INDEX

- Adaptive Cruise Control (ACC) (Cruise Control)36
- Adjustable Pedals29
- Airbag16
- Airbag Light.89
- Alarm
 - Vehicle Security Alarm14
- Alarm (Security Alarm)14
- Anti-Lock Warning Light89
- Arming System (Security Alarm)14
- Assistance Towing86
- Automatic Headlights33
- Automatic High Beams34
- Automatic Oil Change Indicator89
- Automatic Temperature Control (ATC)42
- Automatic Transmission
 - Autostick81
 - Fluid Type117
- Autostick81
- Axle Fluid117

- Brake Fluid117
- Break-In Recommendations, New Vehicle31
- Bulb Replacement137

- Calibration, Compass74
- Center Seat LATCH20
- Changing A Flat Tire91
- Charging System Light88
- Child Restraint19
- Child Restraints
 - Car Seat18
 - Child Restraints18
 - Child Seat Installation20, 21
 - Child Tether Anchorage Locations21
 - Installing Child Restraints Using The Vehicle Seat Belt20, 21
 - Locating The LATCH And Tether Anchorages20
 - Lower Anchors And Tethers For Children18, 19, 20
- Child Seat.20
- Cluster Warning/Indicator Lights
 - Anti-Lock Brake (ABS) Light89
 - Charging System Light88
 - Electronic Throttle Control (ETC) Indicator Light89
 - Engine Temperature Warning Light87
 - Oil Pressure Warning Light88
 - Tire Pressure Monitoring System (TPMS) Light86
- Compass Calibration74
- Cooling System
 - Coolant Capacity117
- Cruise Control (Speed Control)34
- Cruise Light.34
- Cupholders
 - Heated/Cooled (Beverage Holder)27
- Customer Assistance138
- Customer Programmable Features75

- Deck Lid, Emergency Release.14
- Deck Lid, Power Release14
- Defects, Reporting139
- Dimmer Control.34
- Dimmer Switch, Headlight34
- Disabled Vehicle Towing86
- Disarming, Security System15
- Door Locks8

- ECO74
- Electronics
 - Your Vehicle's Sound System48, 49
- Electronic Speed Control (Cruise Control)34
- Electronic Stability Control (ESC).86
- Electronic Stability Control (ESC) OFF Indicator.88
- Electronic Throttle Control Warning Light89
- Electronic Vehicle Information Center (EVIC).74, 75
- Emergency Deck Lid Release14
- Emergency, In Case of
 - Brake Warning Light88
 - Jacking91
 - Overheating90
 - Towing86
- Emergency Key.9
- Emergency Trunk Release14
- Engine
 - Break-In Recommendations31
 - Compartment114
 - Oil Change Interval89
 - Oil Selection117

| | | | |
|---|---------|---|----------------|
| Overheating | .90 | Jump Starting | .103 |
| Starting | .12 | Key Fob | .8 |
| Stopping | .12 | Lock The Doors | .8 |
| Temperature Warning Light | .87 | Unlock The Doors | .8 |
| Event Data Recorder | .110 | Keyless Enter-N-Go | .10 |
| Exterior Lights | .137 | Lock The Vehicle's Doors | .8 |
| Flat Tire Changing. | .91 | Lock/Unlock | .10, 11 |
| Fluid Capacities | .117 | Starting/Stopping | .12 |
| Fluids | .117 | Lane Change Assist | .32 |
| Fog Lights | .33 | Lights | |
| Freeing A Stuck Vehicle | .109 | Tire Pressure Monitoring (TPMS) | .86 |
| Frequently Asked Questions | .141 | Locks | |
| Fuel | | Door | .8 |
| Filler Door Emergency Release | .112 | Maintenance Record | .124, 129 |
| Filler Door (Gas Cap) | .112 | Maintenance Schedule. | .120, 125, 127 |
| Specifications | .117 | Malfunction Indicator Light (Check | |
| Fuse | .130 | Engine) | .88 |
| Fuses | .130 | Manual | |
| Garage Door Opener (HomeLink®) | .76 | Tilt/Telescoping Steering Column | .30 |
| GPS Navigation (Uconnect® gps). | .60 | Memory Seat | .23 |
| Headlights | | Mirrors | |
| Automatic | .33 | Heated | .44 |
| Dimmer Switch | .34 | MOPAR® Accessories | .140 |
| High Beam | .33 | Navigation Voice Commands | .73 |
| Heated Mirrors | .44 | Navigation Voice Prompt Volume. | .72 |
| Heated Seats | .26 | New Vehicle Break-In Period | .31 |
| Heated Steering Wheel | .28 | Oil Change Indicator | .89 |
| High Beam/Low Beam Select (Dimmer) | | Oil Change Indicator, Reset. | .89 |
| Switch | .33 | Oil, Engine | |
| HomeLink® (Garage Door Opener) | .76 | Capacity | .117 |
| Hood Release | .111 | Change Interval | .89 |
| Identifying Your Radio | .50 | Oil Pressure Light. | .88 |
| Instrument Cluster | .7 | Outlet | |
| Indicators | .7 | Power | .79 |
| Instrument Cluster Warning Lights. | .86 | Overheating, Engine | .90 |
| Interior and Instrument Lights. | .5 | Panic Alarm | .8 |
| Intermittent Wipers (Delay Wipers). | .32 | Pedals, Adjustable | .29 |
| Introduction | .2 | Phone (Uconnect®). | .66 |
| iPod®/USB/MP3 Control | .58, 64 | Placard, Tire and Loading Information | .135 |
| Bluetooth® Streaming Audio | .65 | Power | |
| Jacking Instructions | .93 | Deck Lid Release | .14 |
| Jack Location | .91 | Glass Sunroof | .45 |
| Jack Operation | .93 | | |

INDEX

- Outlet (Auxiliary Electrical Outlet) . . .79
- Seats23
- Steering117
- Tilt/Telescoping Steering Column . .30
- Preparation for Jacking.92
- Programmable Electronic Features. .75, 83

- Radio Operation54
- Radio (Sound Systems)51, 52
- Rain Sensitive Wiper System32
- Rear Heated Seats27
- Recreational Towing80
- Remote Control
 - Trunk Release8
- Remote Keyless Entry (RKE)
 - Lock The Doors8
 - Unlock The Doors8
- Remote Starting
 - Enter Remote Start Mode10
 - Exit Remote Start Mode10
 - How To Use Remote Start10
 - Key Fob10
 - Remote Starting System10
- Remote Starting System10
- Remote Trunk Release14
- Replacement Bulbs137
- Reporting Safety Defects139
- Resetting Oil Change Indicator89

- Satellite Radio (Uconnect® studios) . . .55
- Schedule, Maintenance.120, 125
- Seat Belt
 - Automatic Locking Retractor (ALR) . .15
 - Child Restraints15, 18
 - Energy Management Feature15
 - Engage The Automatic Locking Mode20
 - Lap/Shoulder Belts15
 - Seat Belt Pretensioner15
 - Seat Belt Reminder15
- Seats23
 - Heated26
 - Memory23
 - Power23
 - Ventilated26
- Security Alarm
 - Security Alarm14
- Shift Lever Override105

- Signals, Turn32
- SIRIUS Travel Link63
- Spare Tire91
- Spark Plugs117
- Speed Control
 - Accel/Decel35
 - Mode Setting (ACC Only)36
 - Resume35, 37
 - Set35
- Speed Control (Cruise Control)34
- Sport Mode89
- Sport Suspension Indicator89
- SRT Performance Features.83
- Starting
 - Remote10
- Steering
 - Tilt Column30
 - Wheel, Heated28
- Steering Wheel Audio Controls64
- Sun Roof45
- Supplemental Restraint System -
 - Airbag16

- Tether Anchor, Child Restraint21
- Tilt Steering Column30
- Tilt/Telescoping Steering Column
 - Manual30
- TIREFIT97
- Tires
 - Air Pressure135
 - Changing91, 93
 - Flat Changing91
 - Jacking92, 93
 - Spare Tire91
- Towing80
 - Disabled Vehicle108
 - Recreational80
- Towing Vehicle Behind a Motorhome. . .80
- Trailer Towing
 - Trailer and Tongue Weight80
- Trailer Weight80
- Transmission
 - Fluid117
- Trunk Lid (Deck Lid)14
- Trunk Release, Emergency14
- Trunk Release Remote Control14
- Turn Signals32

| | | | |
|--|-----|-------------------------------------|------|
| Uconnect® Voice Command | .71 | Washers, Windshield | .32 |
| USB Port | .65 | Wheel and Wheel Trim Care | .136 |
| Using The Top Tether Anchorage | .21 | Wind Buffeting | .47 |
| Voice Command. | .71 | Windshield Washers | .32 |
| | | Windshield Wipers | .32 |

DODGE.COM

This guide has been prepared to help you get quickly acquainted with your new Dodge and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation/Uconnect® Manuals and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit www.mopar.com (U.S.), www.mopar.ca (Canada) or your local Dodge dealer.



CHARGER

DRIVING AND ALCOHOL

Drunken driving is one of the most frequent causes of accidents. Your driving ability can be seriously impaired with blood alcohol levels far below the legal minimum. If you are drinking, don't drive. Ride with a designated non-drinking driver, call a cab, a friend, or use public transportation.

WARNING!

Driving after drinking can lead to an accident. Your perceptions are less sharp, your reflexes are slower, and your judgment is impaired when you have been drinking. Never drink and then drive.



DOWNLOAD A FREE ELECTRONIC COPY OF THE OWNER'S MANUAL OR WARRANTY BOOKLET

by visiting the Owners tab at:

www.dodge.com (U.S.)

www.dodge.ca (Canada)



14D481-926-AA
CHARGER

Fifth Edition
User Guide